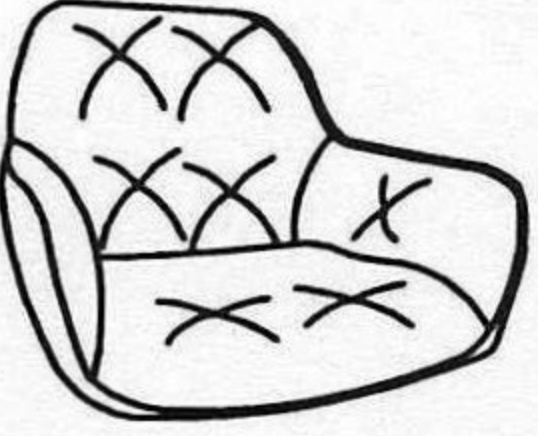




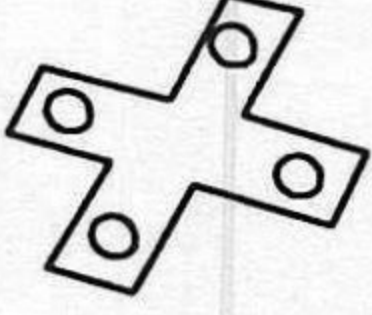
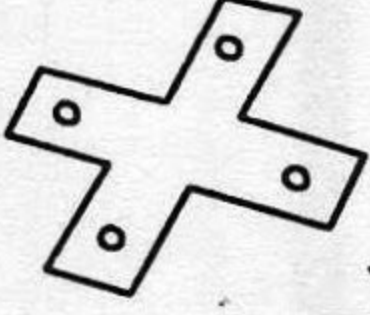
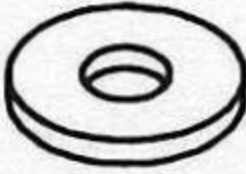



NÁVOD NA MONTÁŽ - DCH-421

<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>	<p>C</p>  <p>x1</p>	<p>F</p>  <p>M6x45 x4</p>	<p>G</p>  <p>M6x40 x4</p>
	<p>D</p>  <p>x1</p>	<p>E</p>  <p>x1</p>	<p>H</p>  <p>x4</p>	<p>I</p>  <p>x1</p>

