
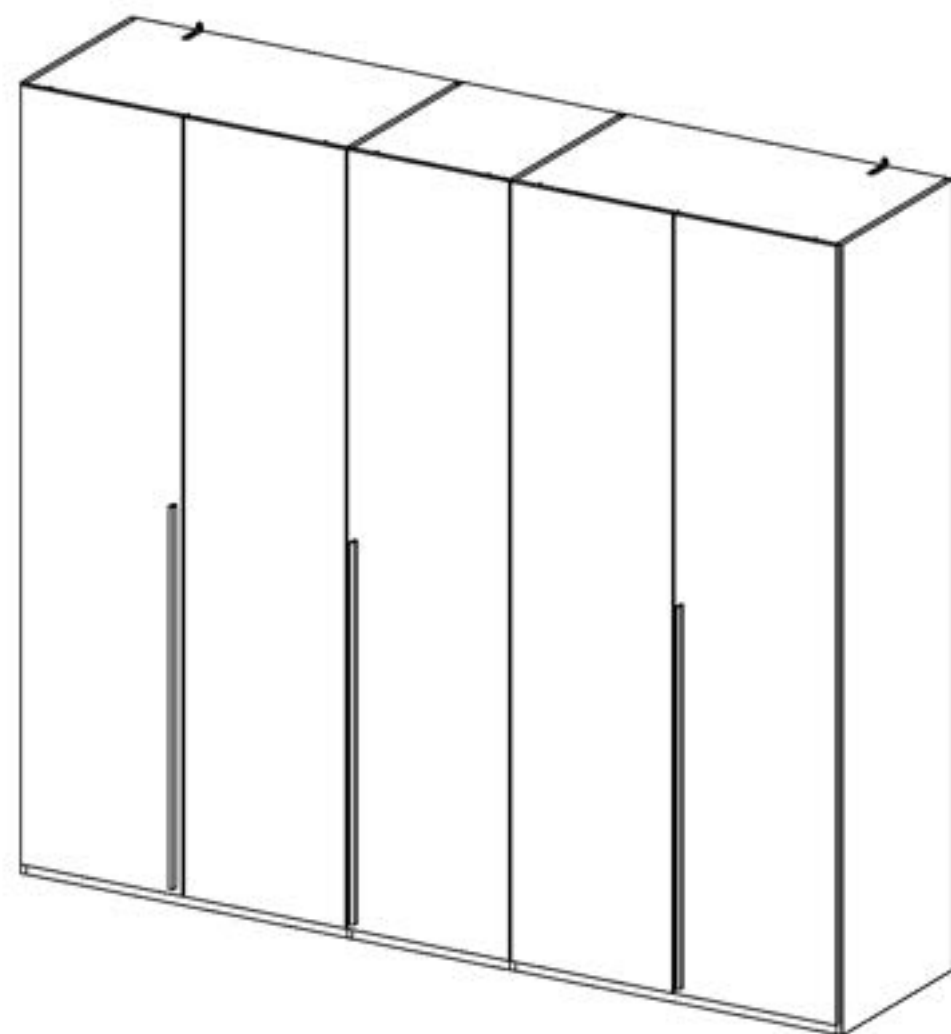


1.



MD105_01

rauch

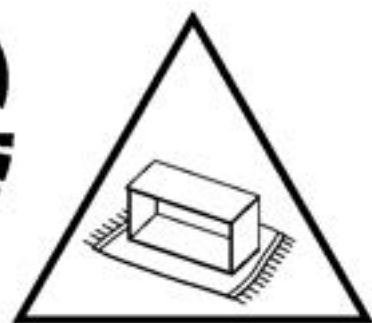





MD105

2.

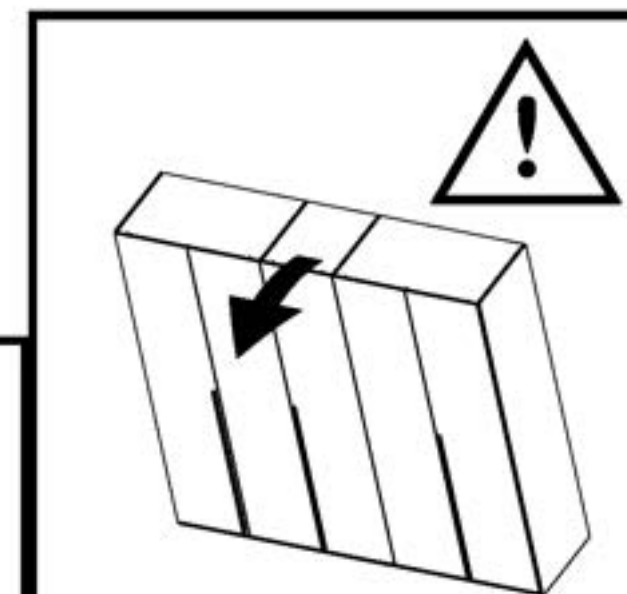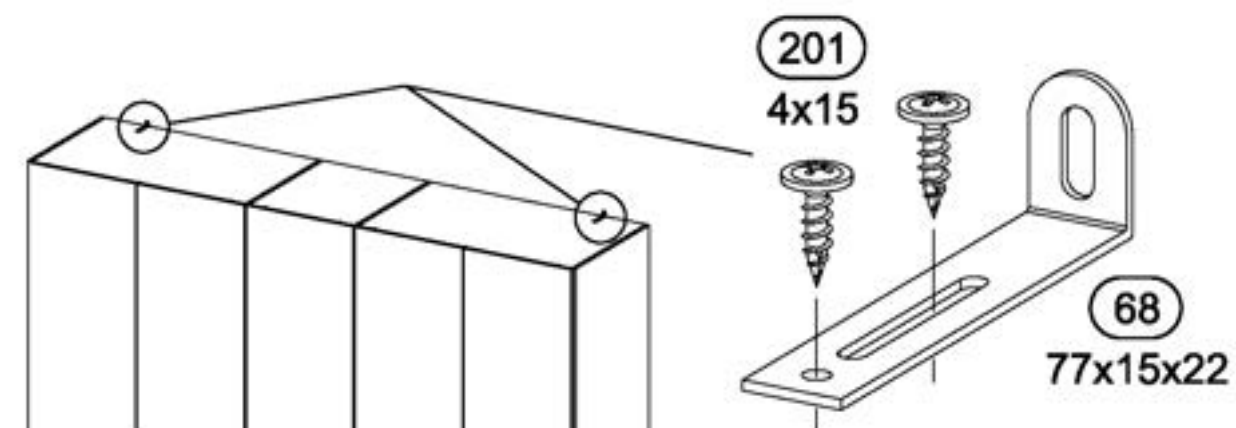


?









ØXmm

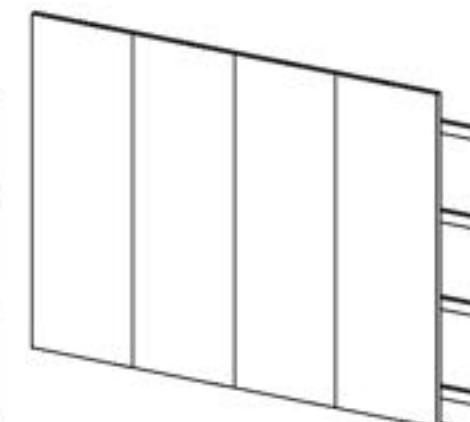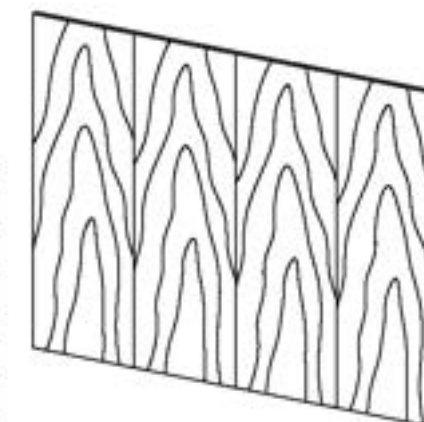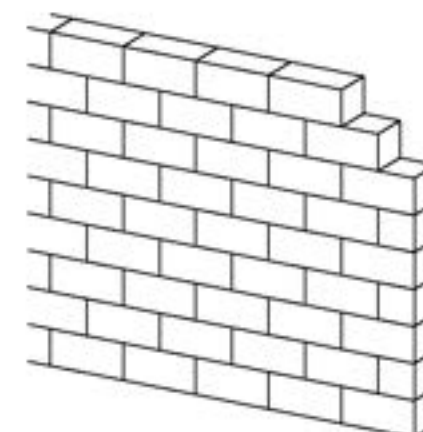

MD105

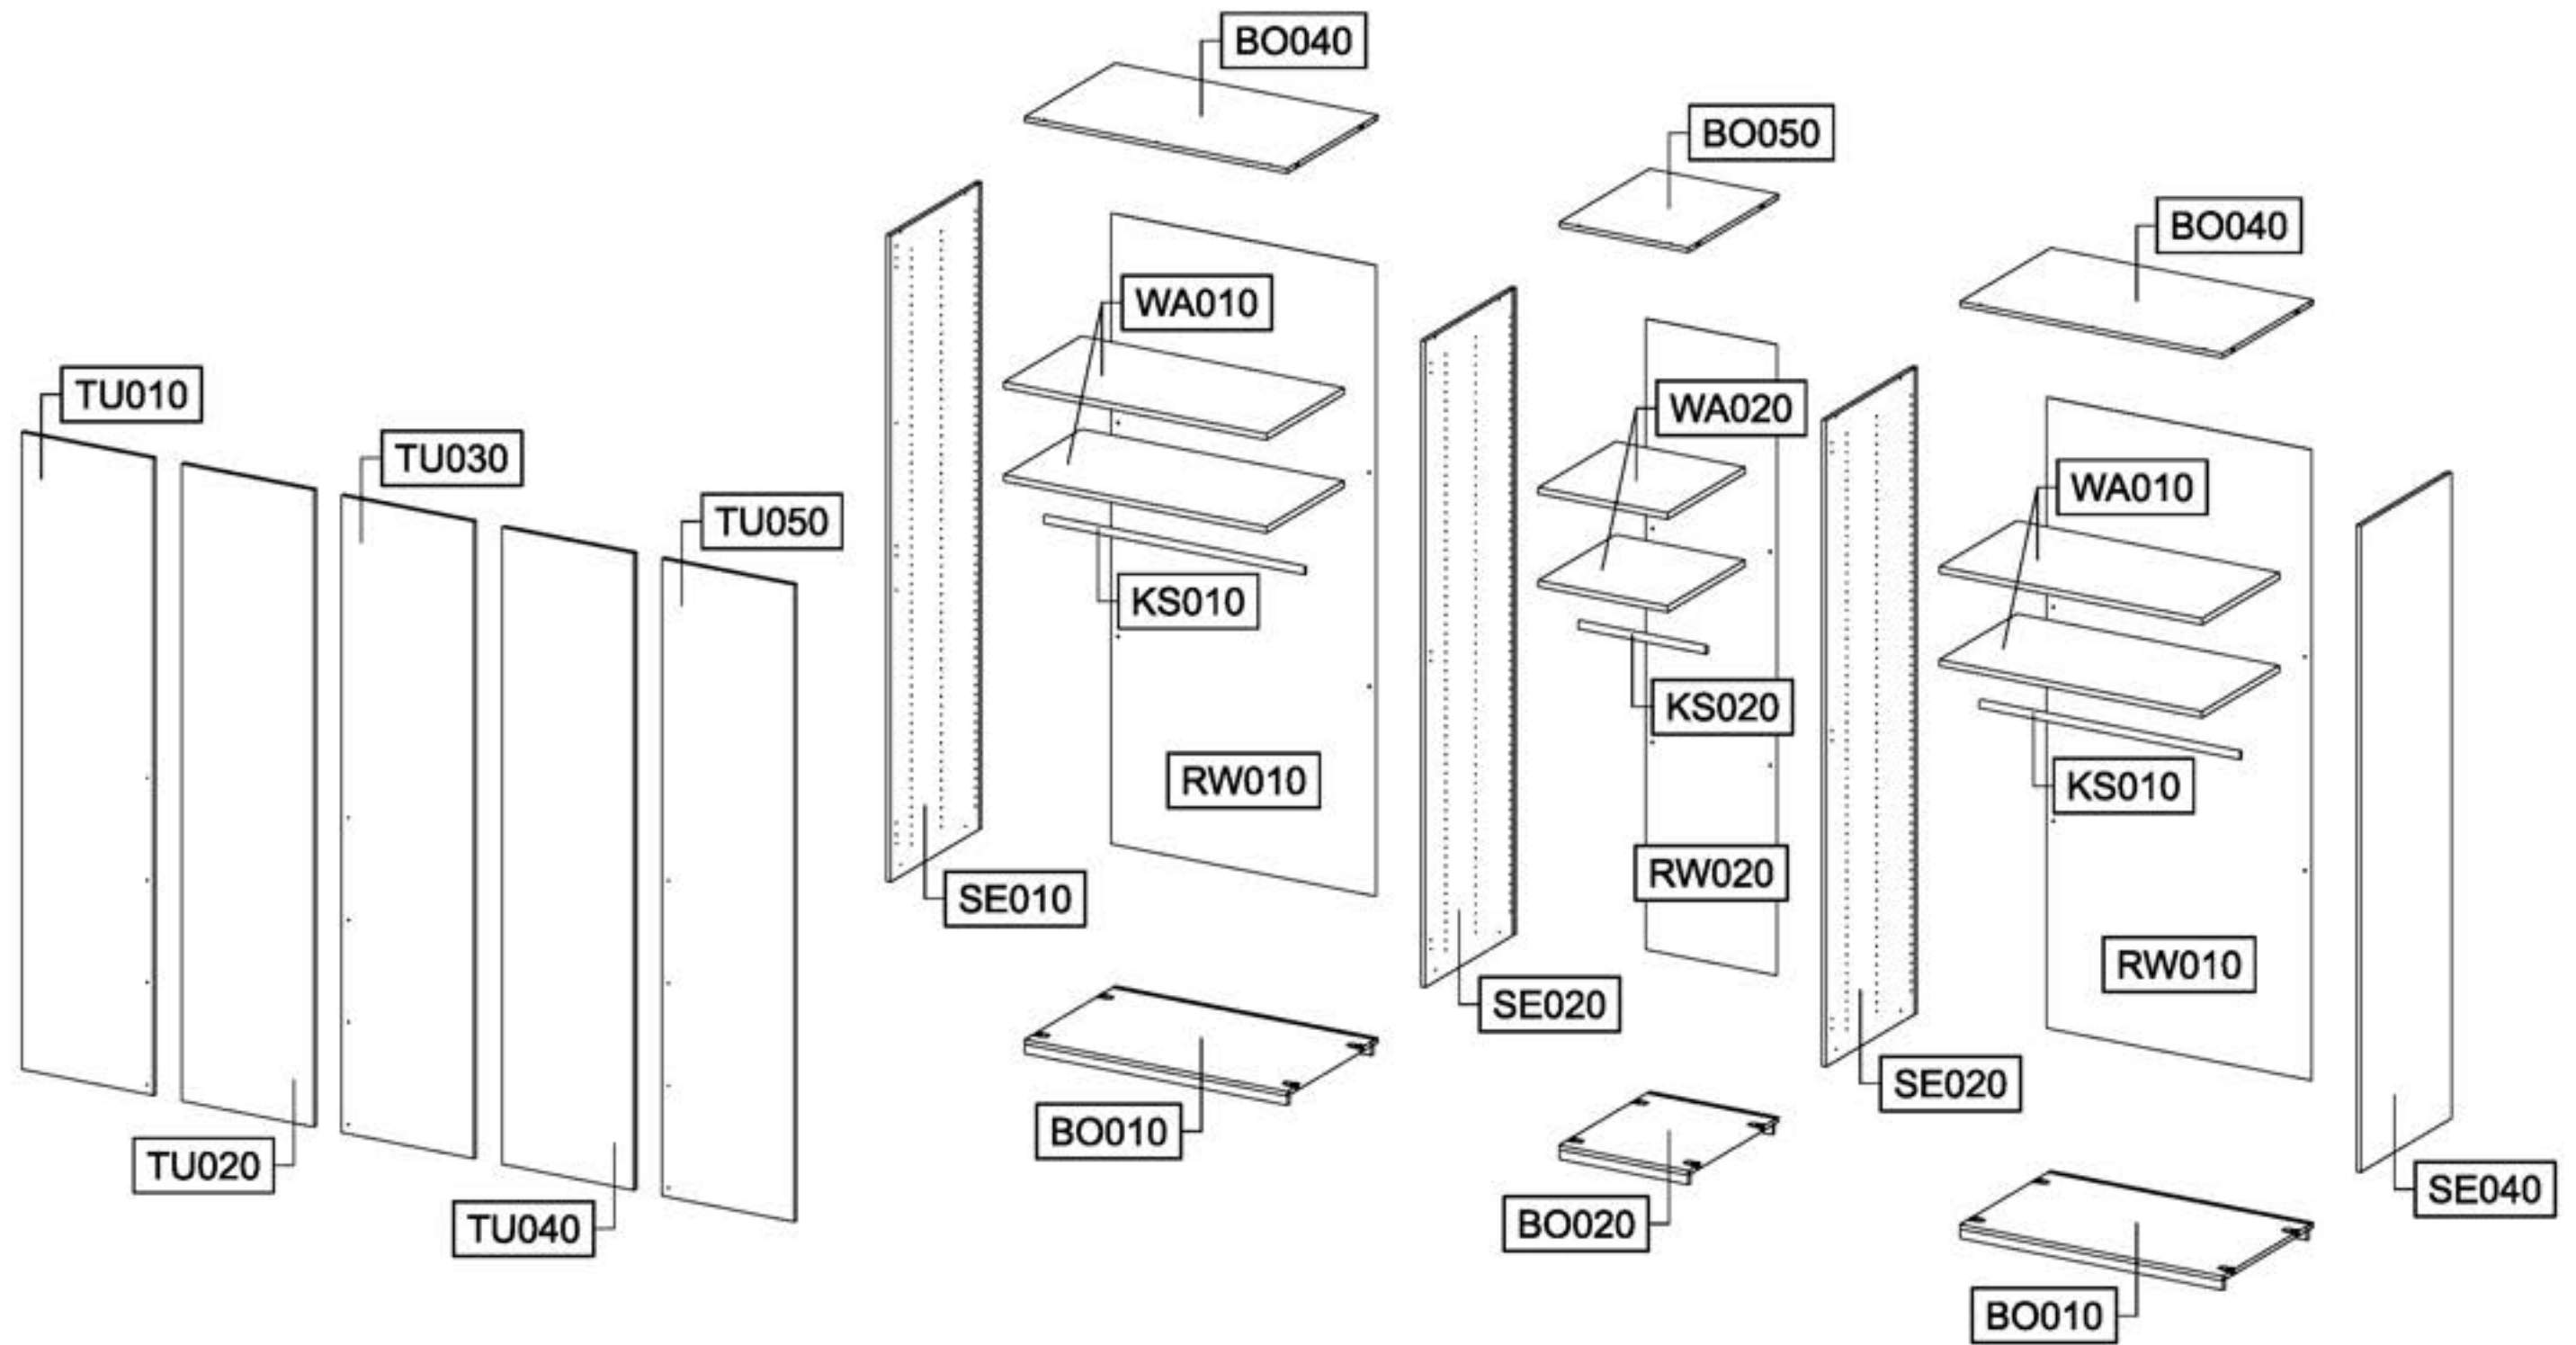


5.

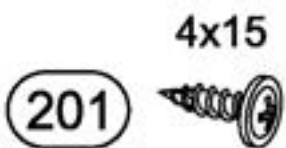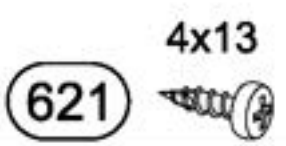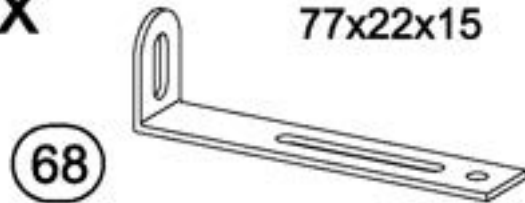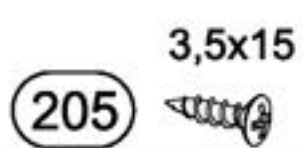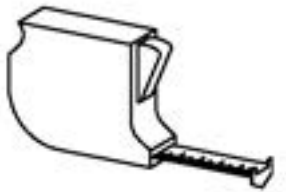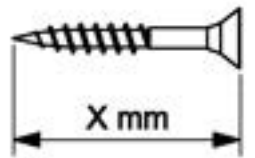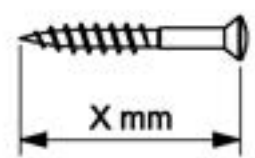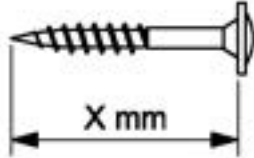8x  12x  4x  15x  30x  8x  24x 	6x  2x  6x  15x  12x  8x 
   	


MD105

6.

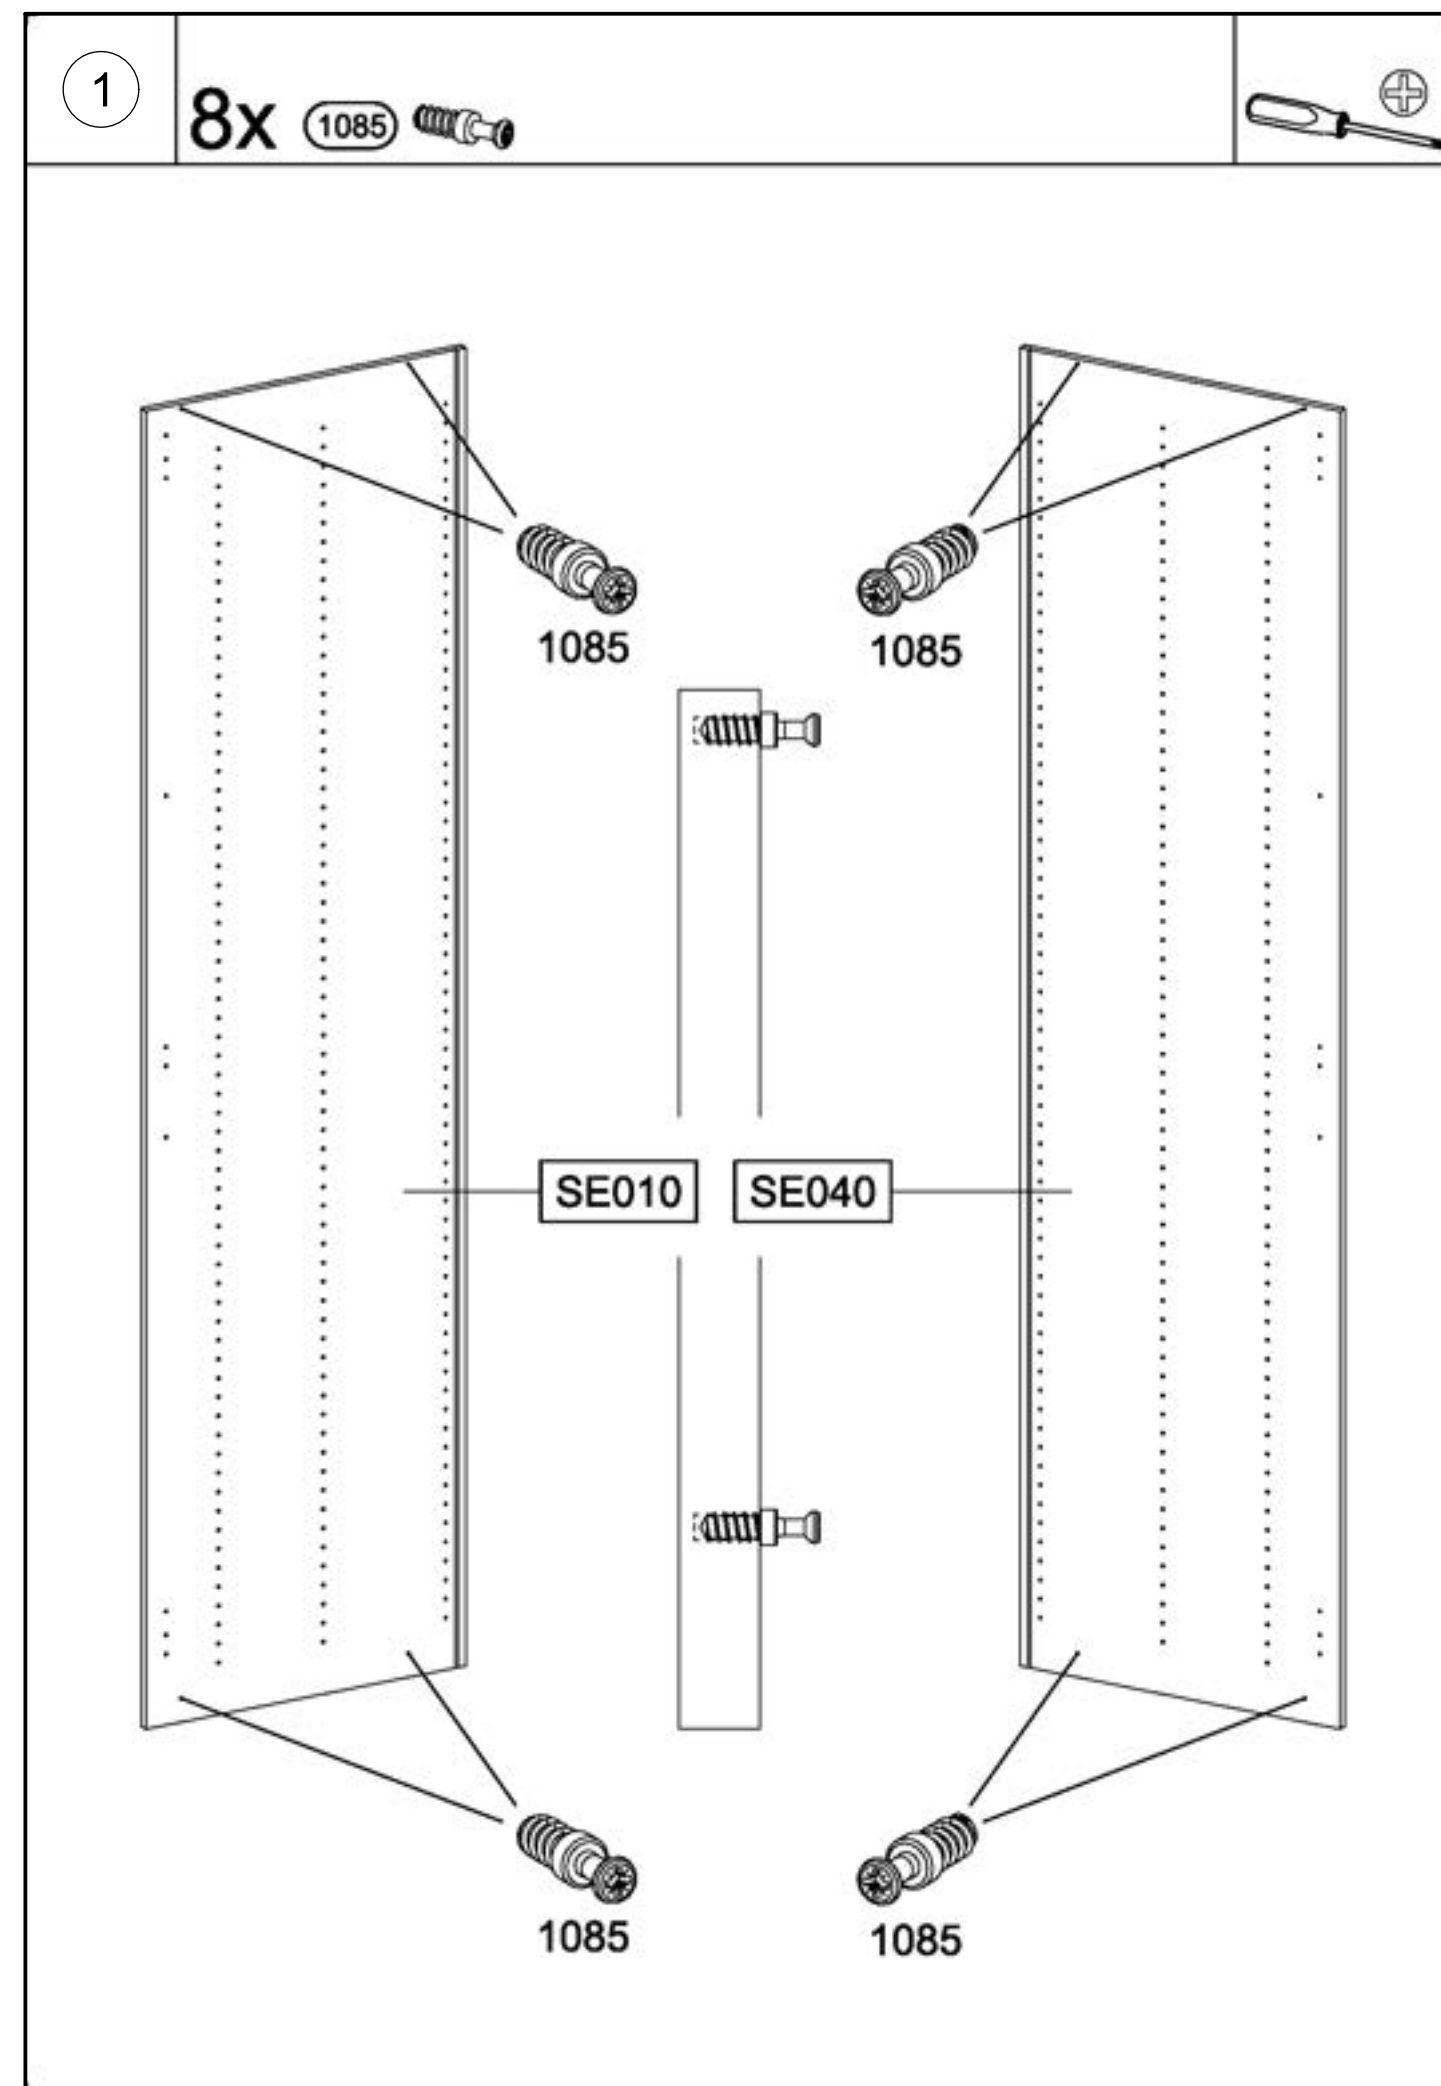


MD105

7.


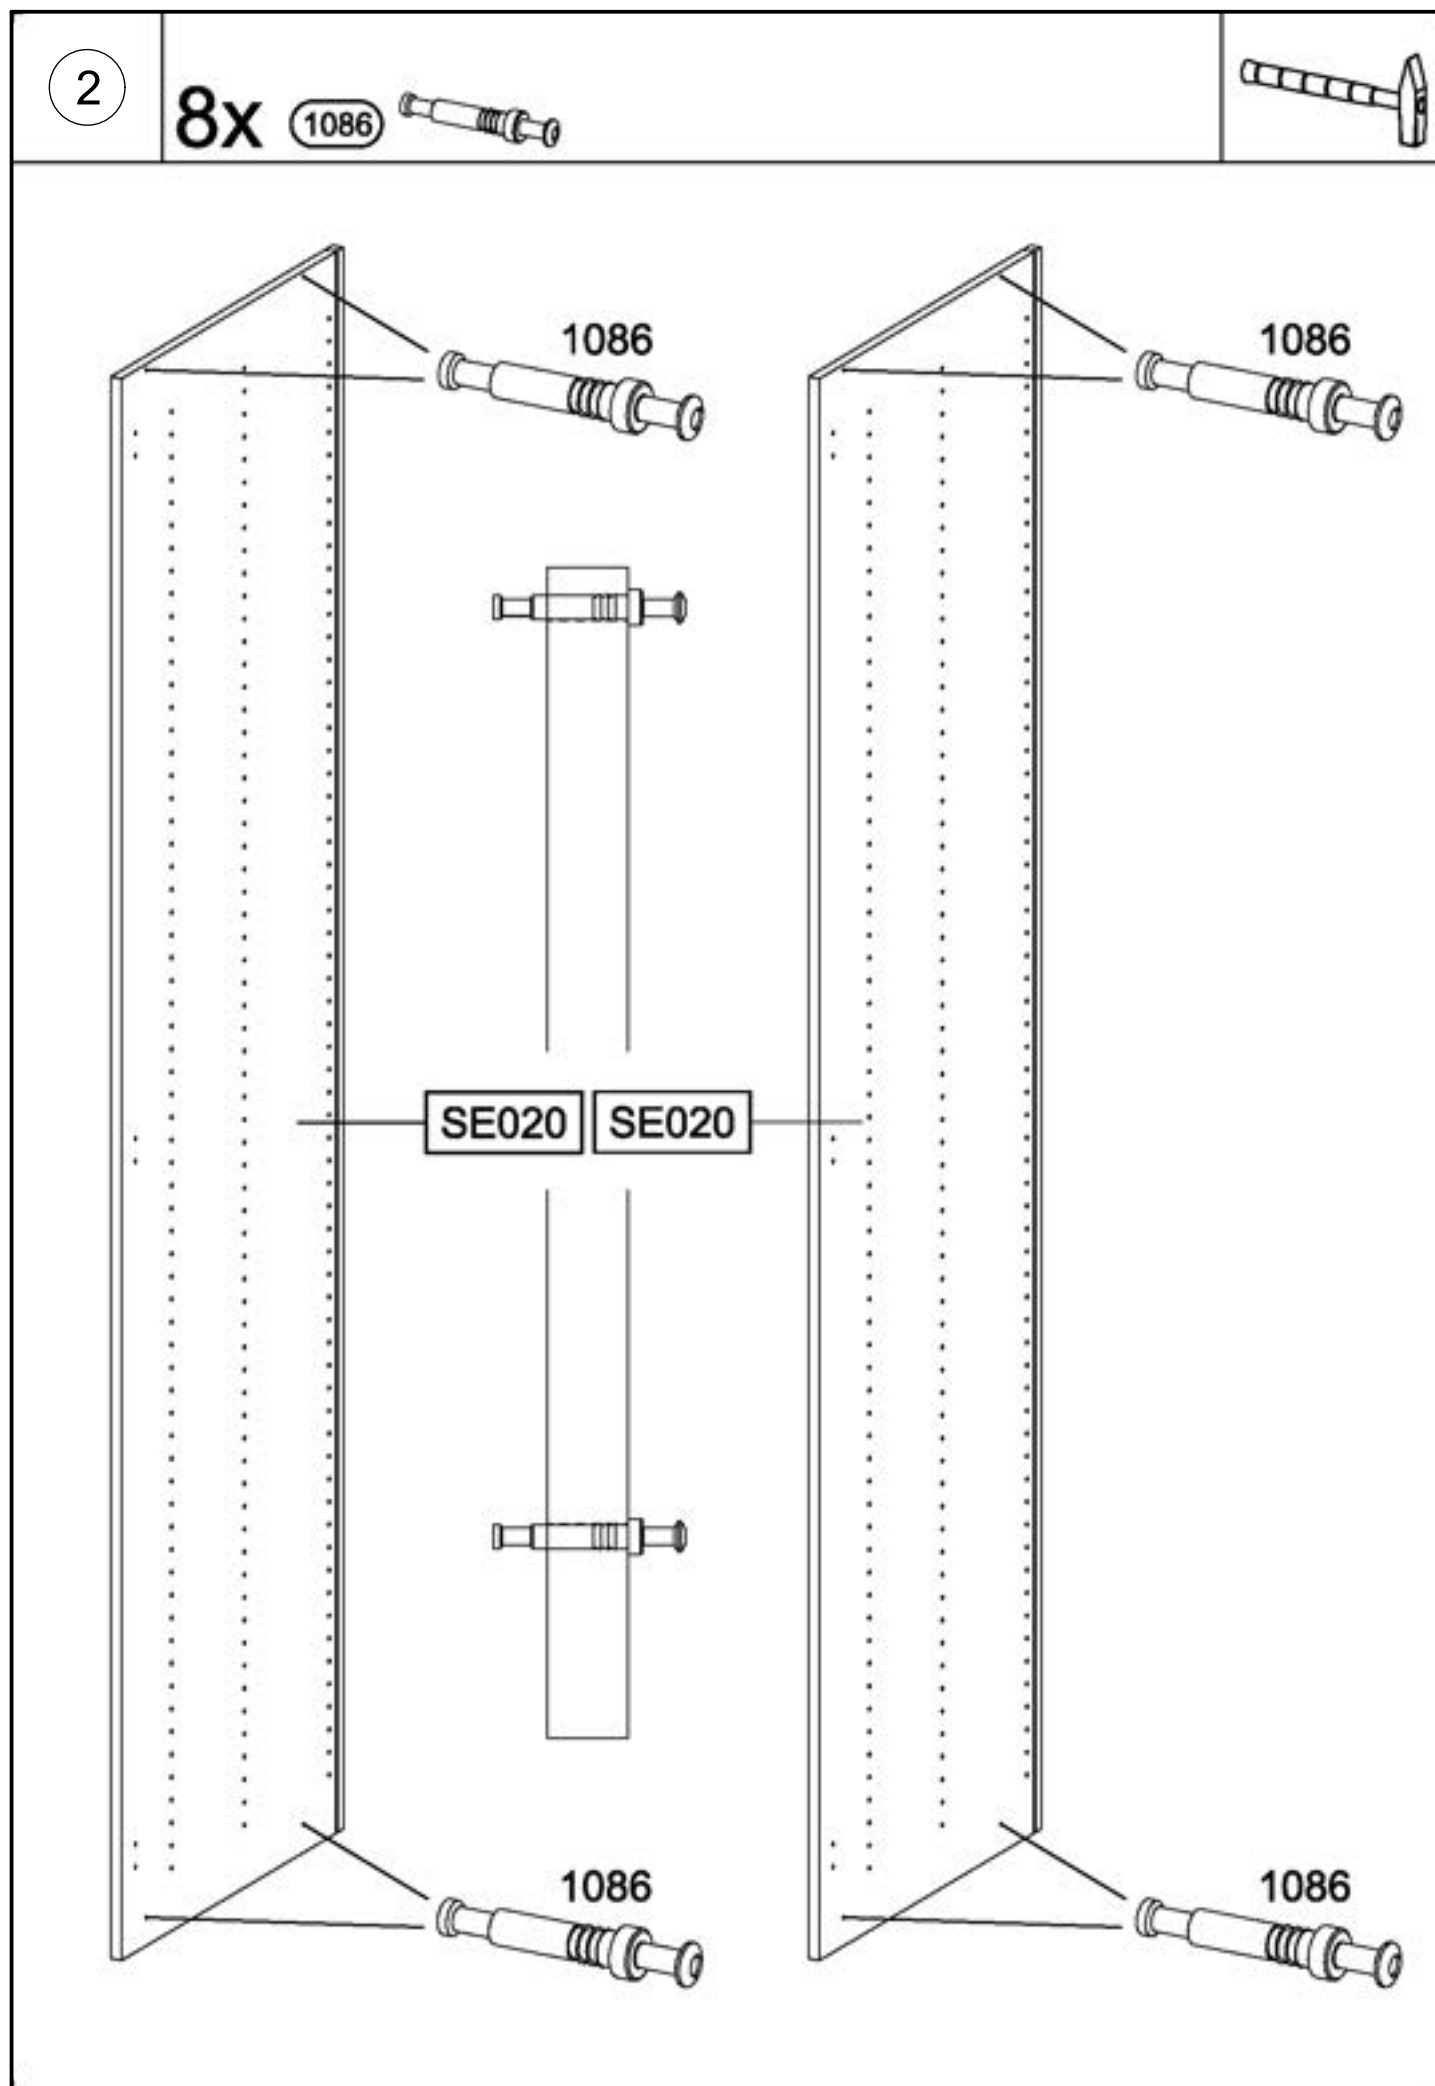




MD105



8.


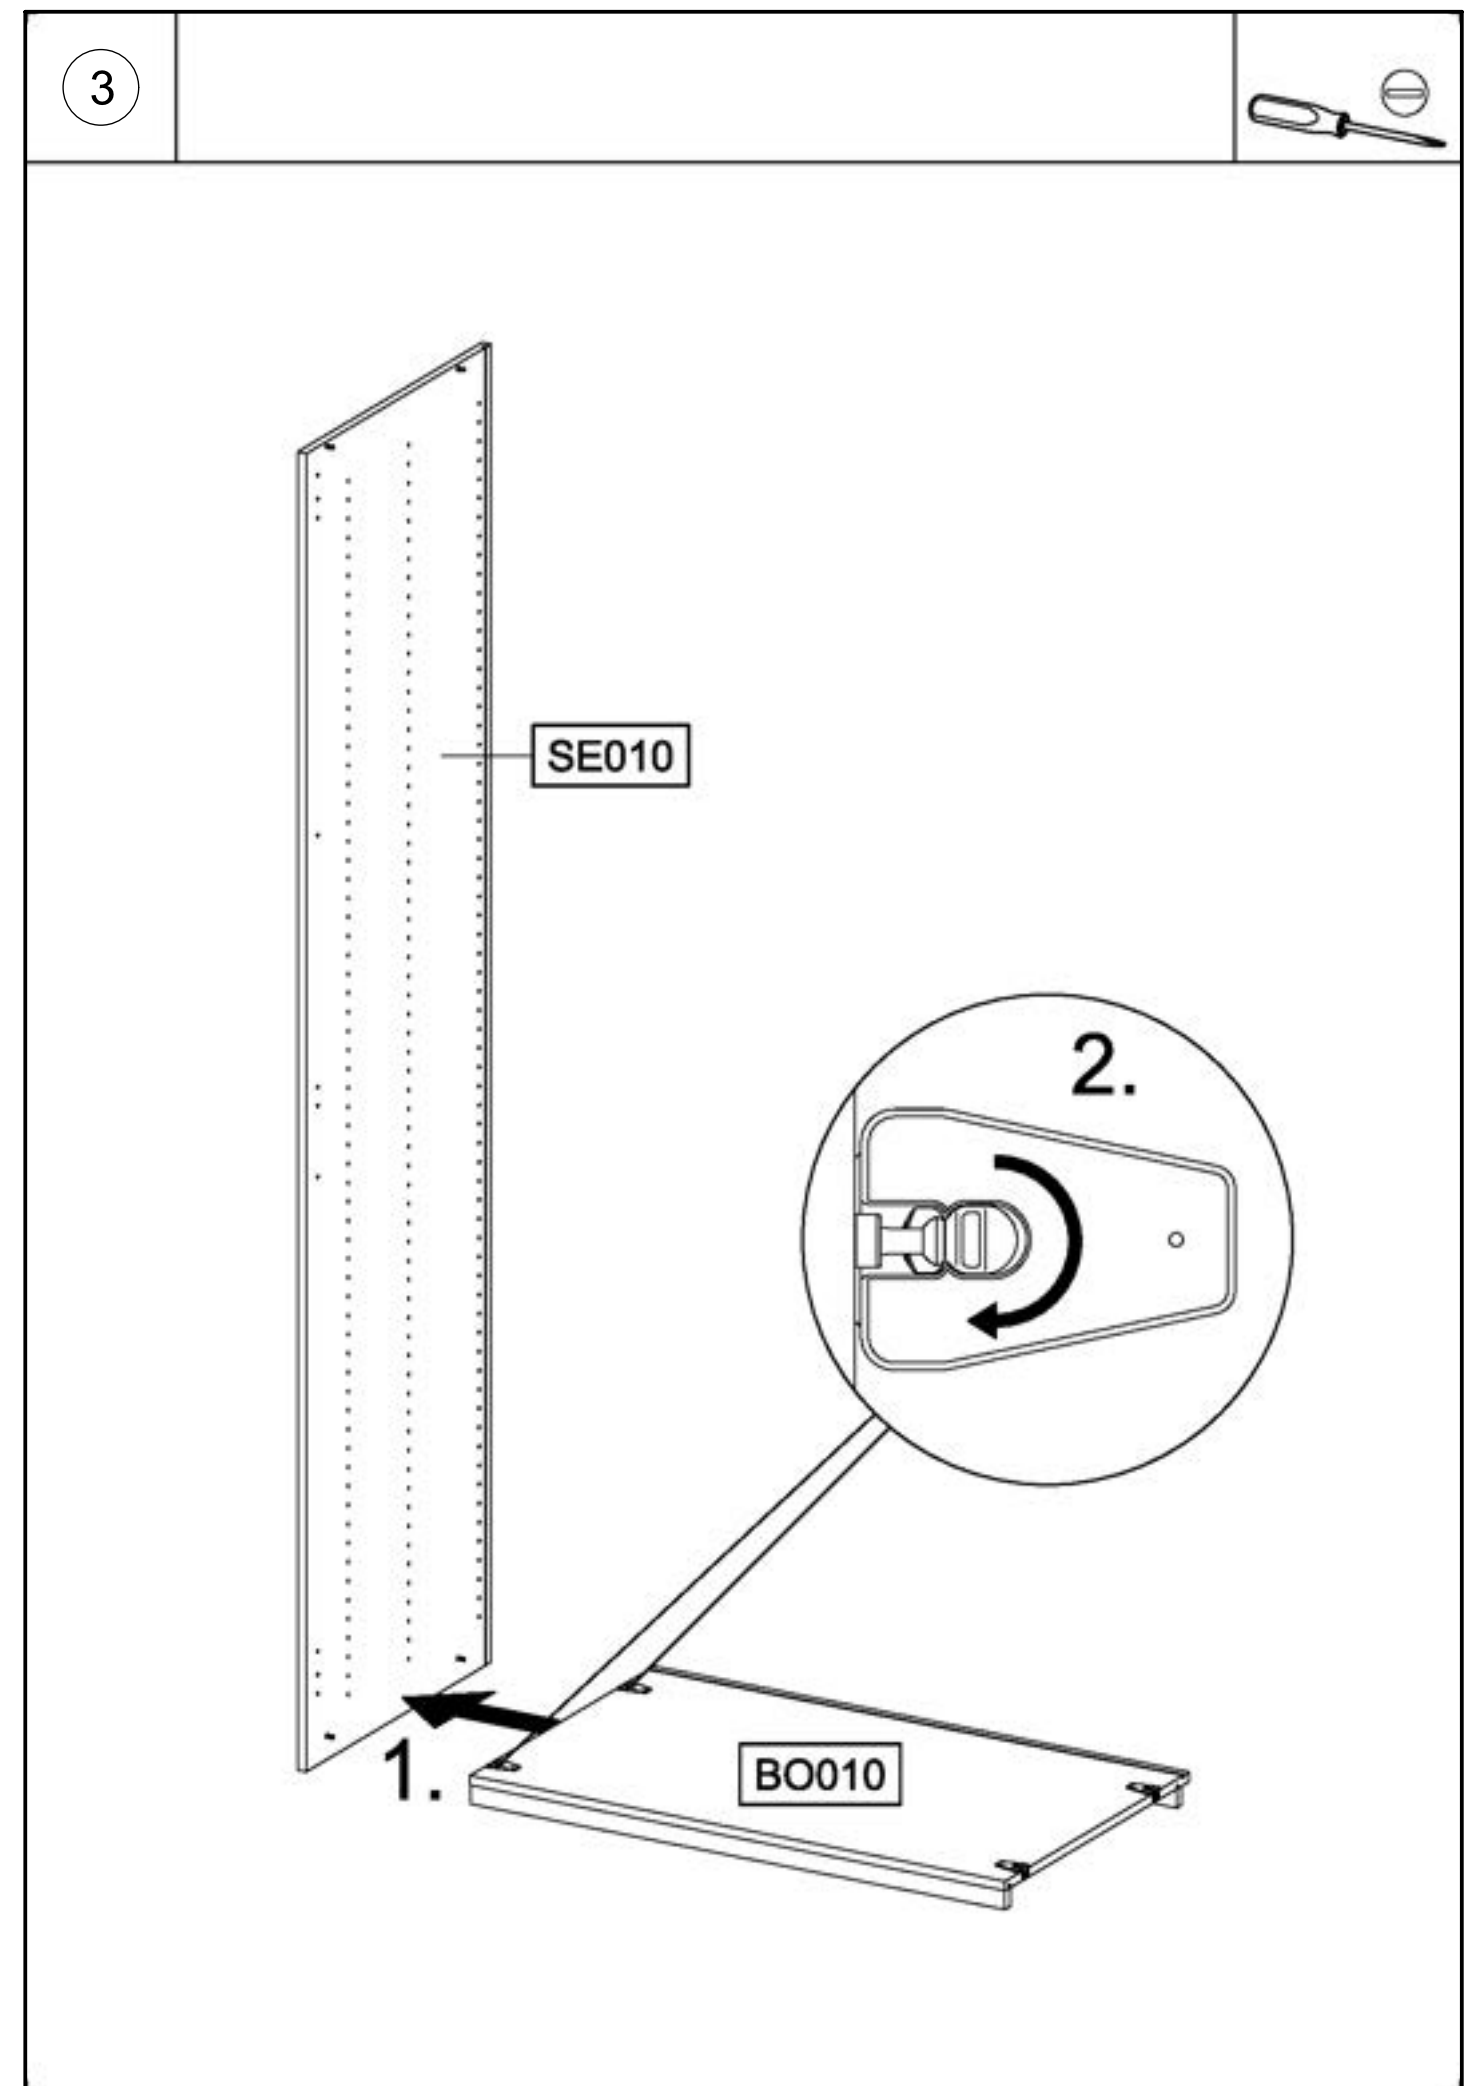




MD105

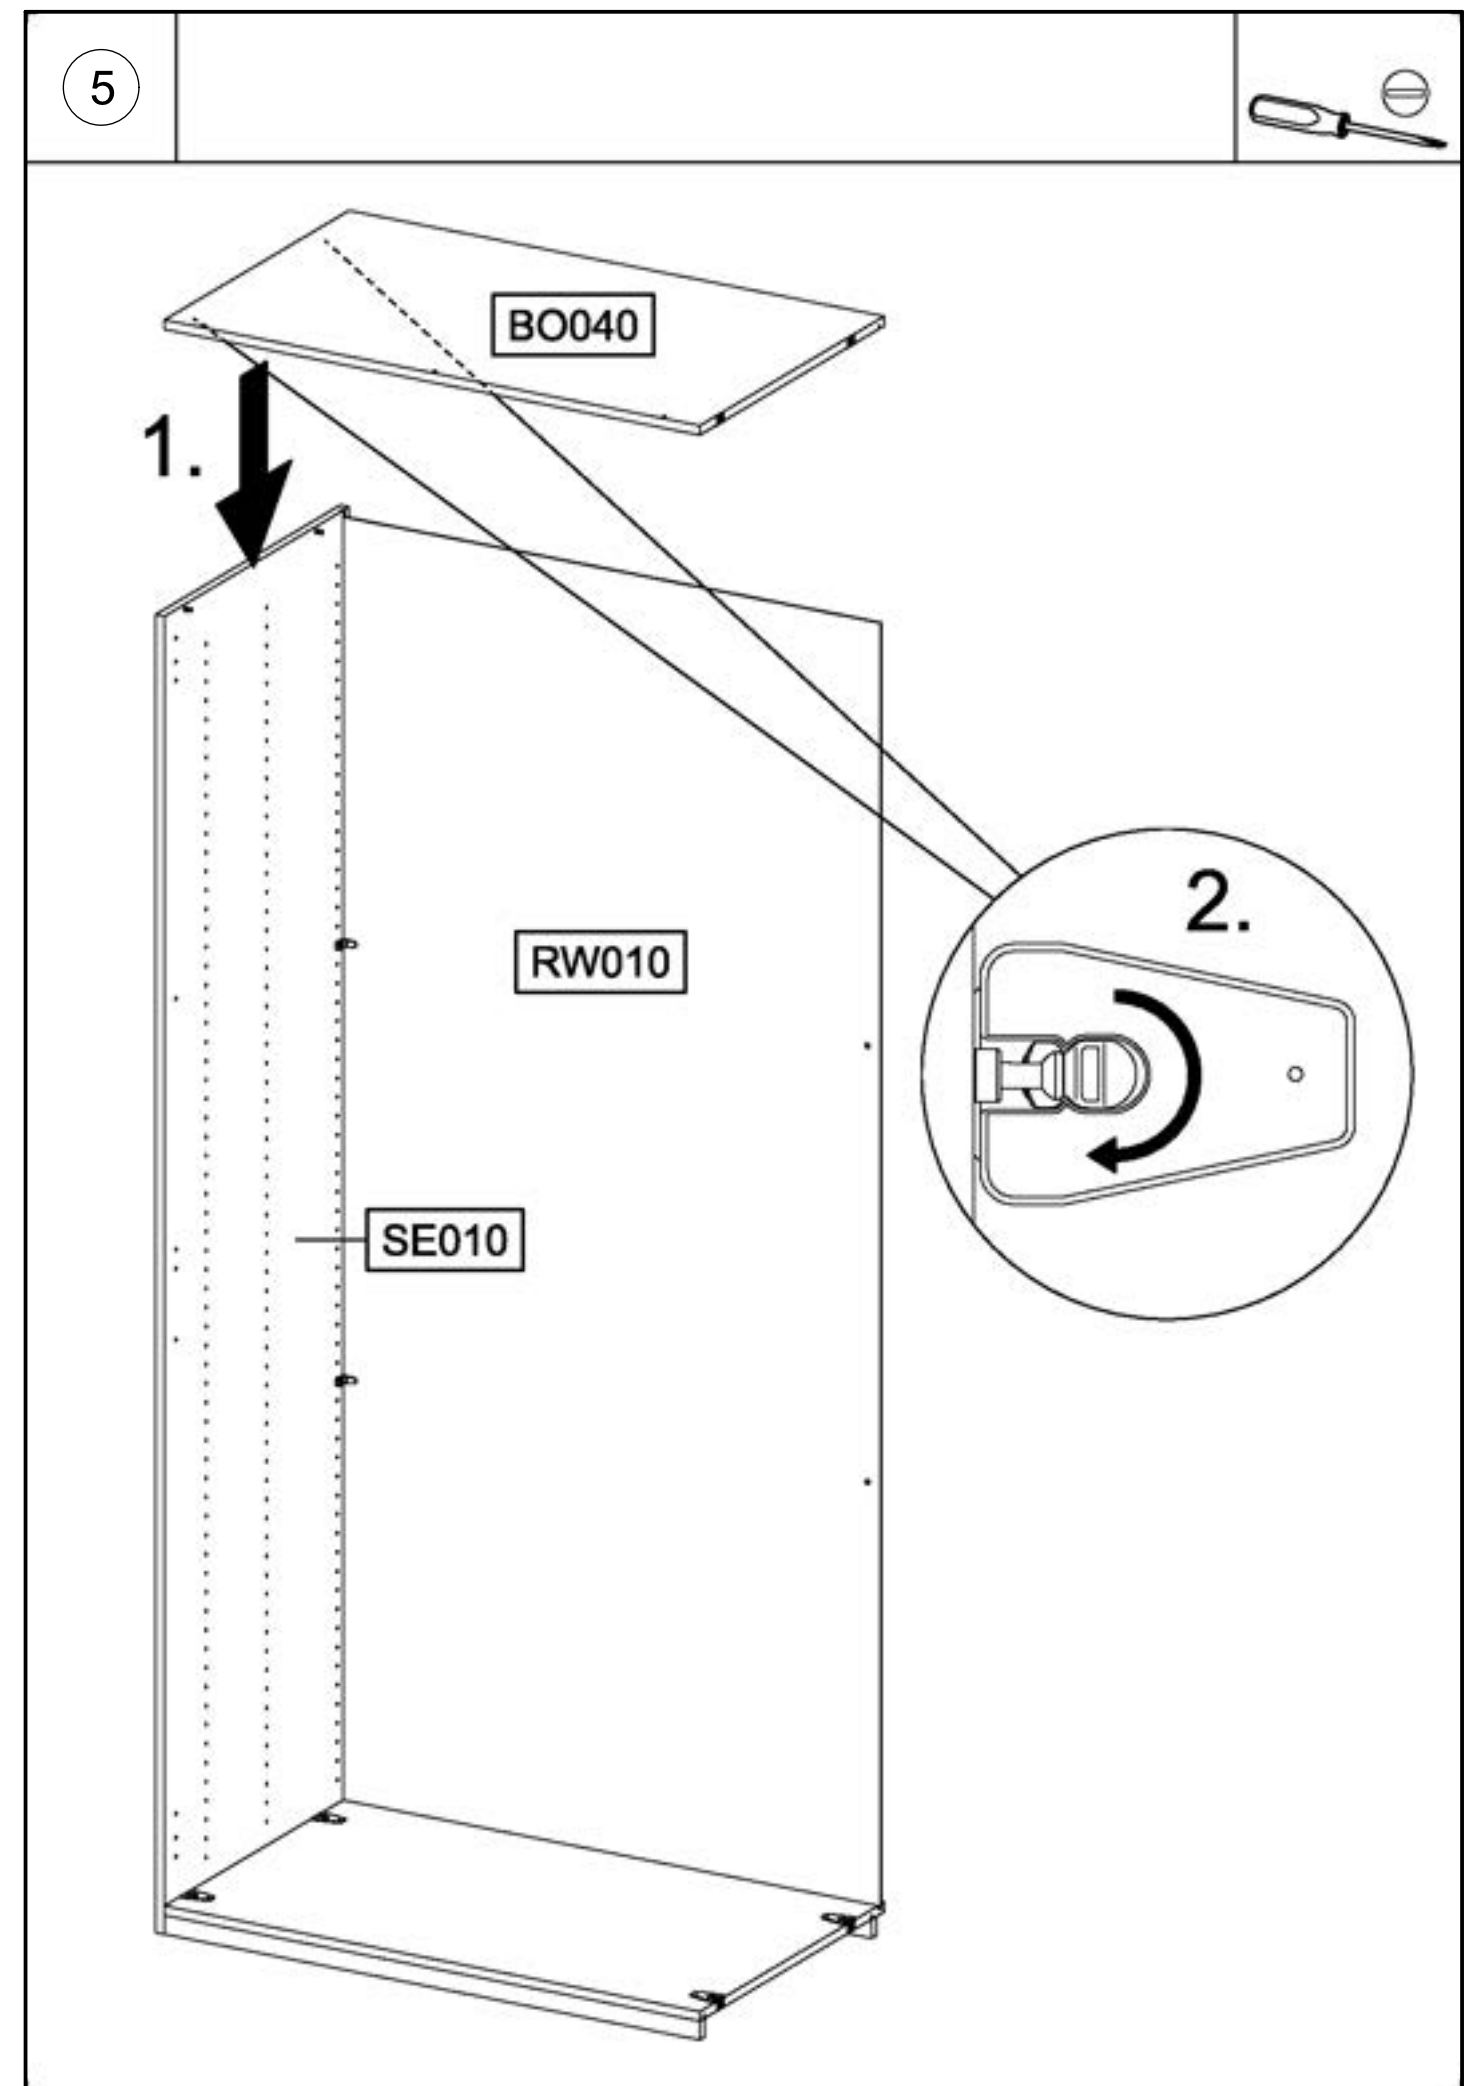
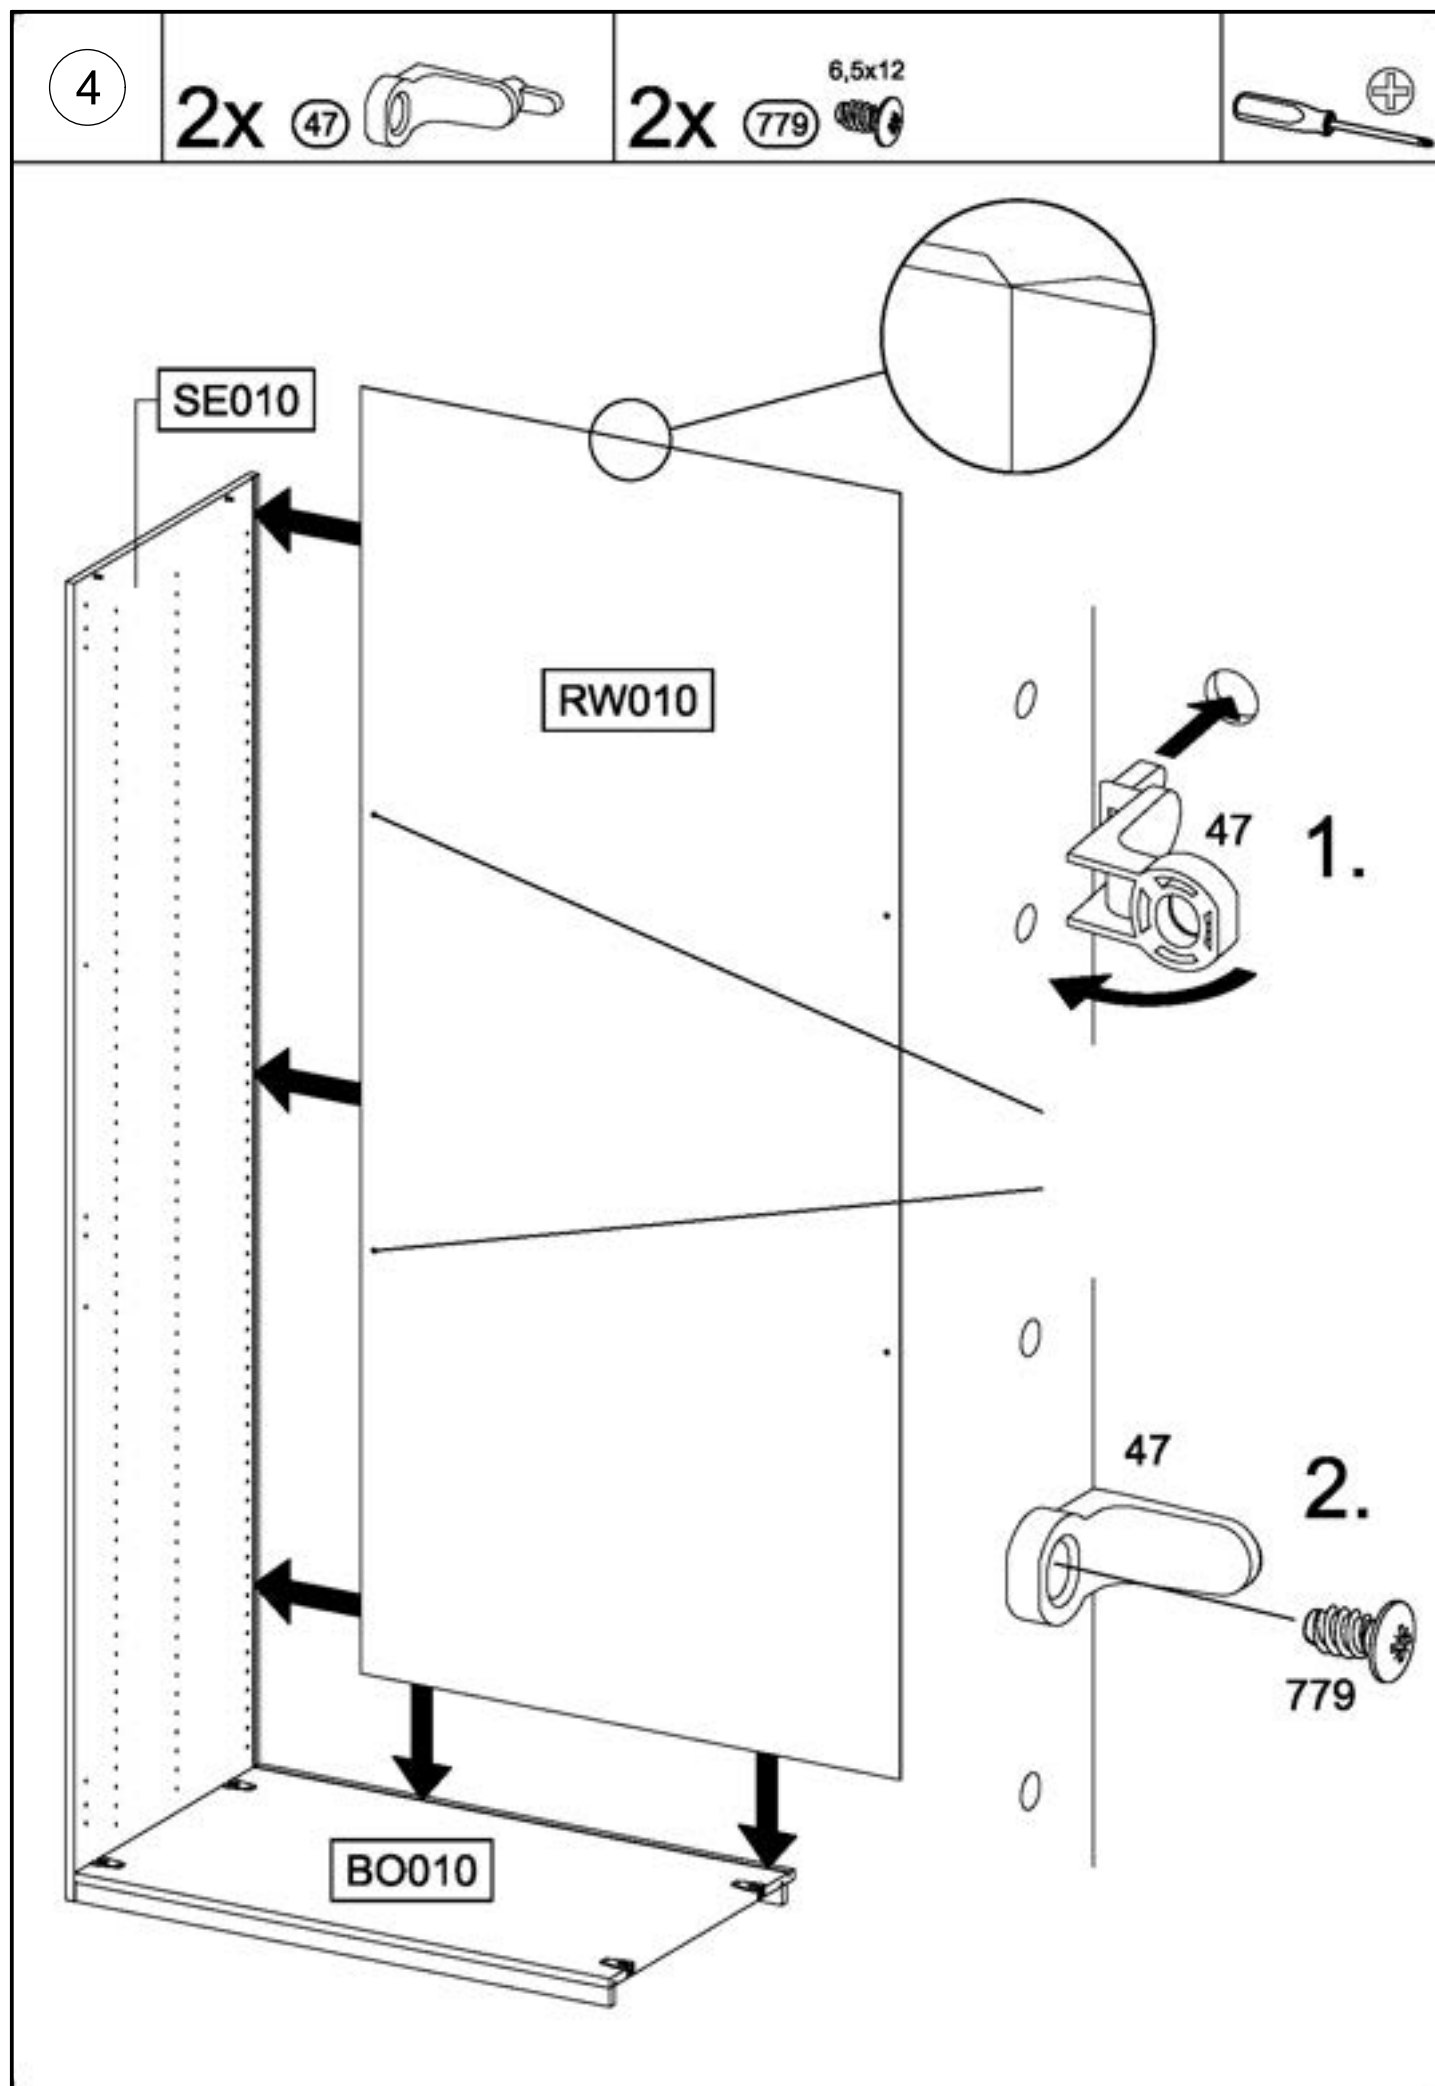


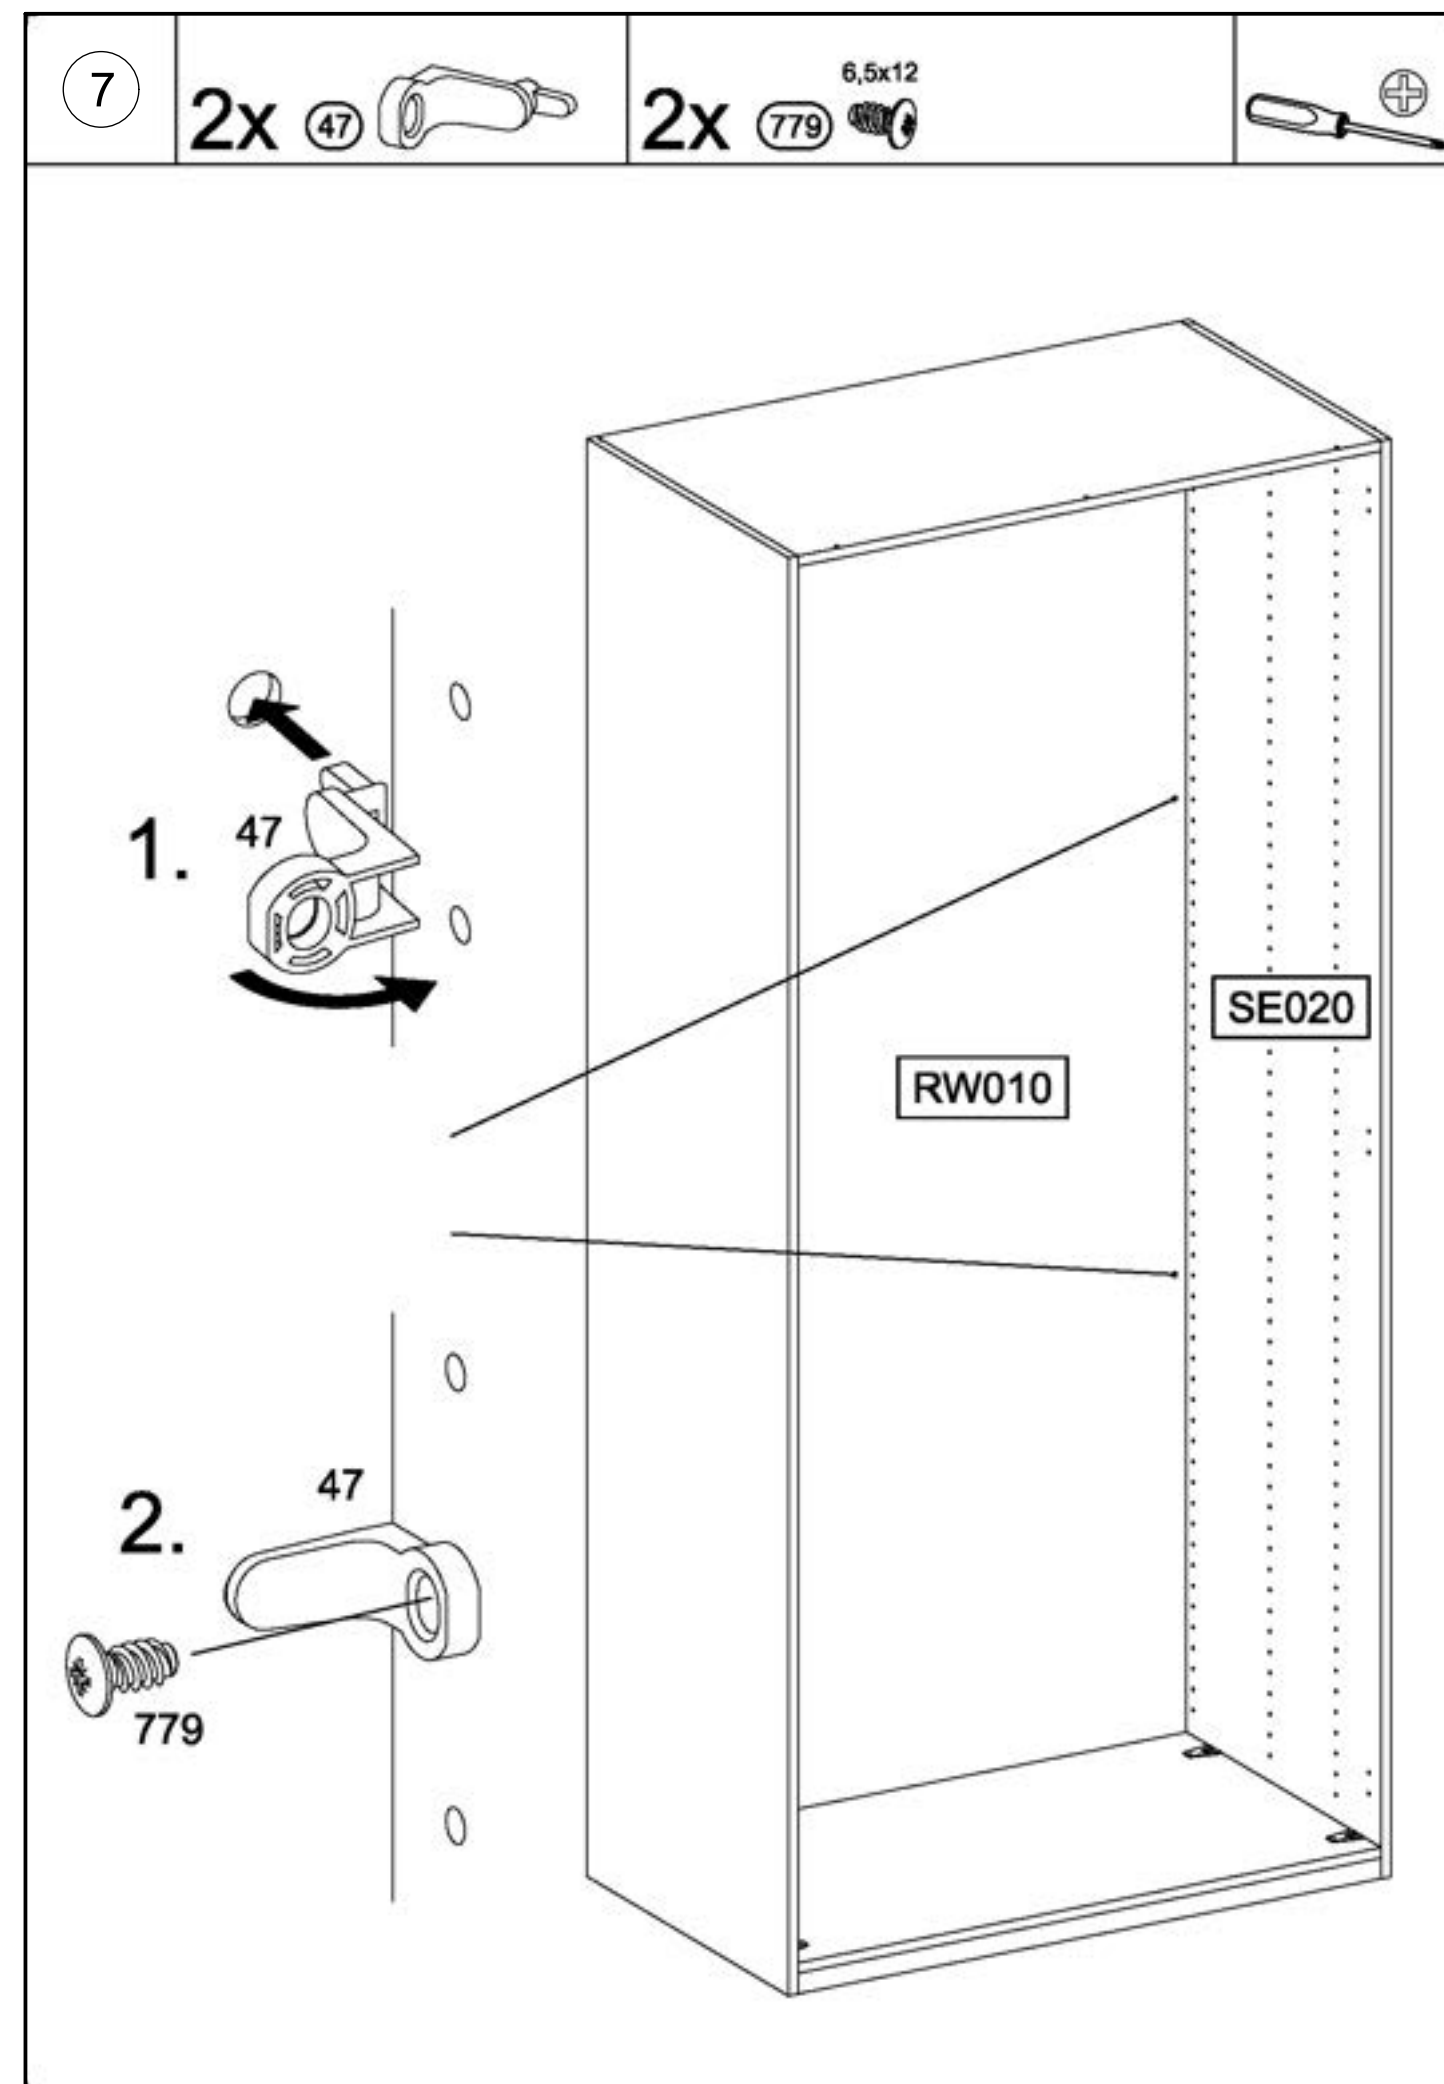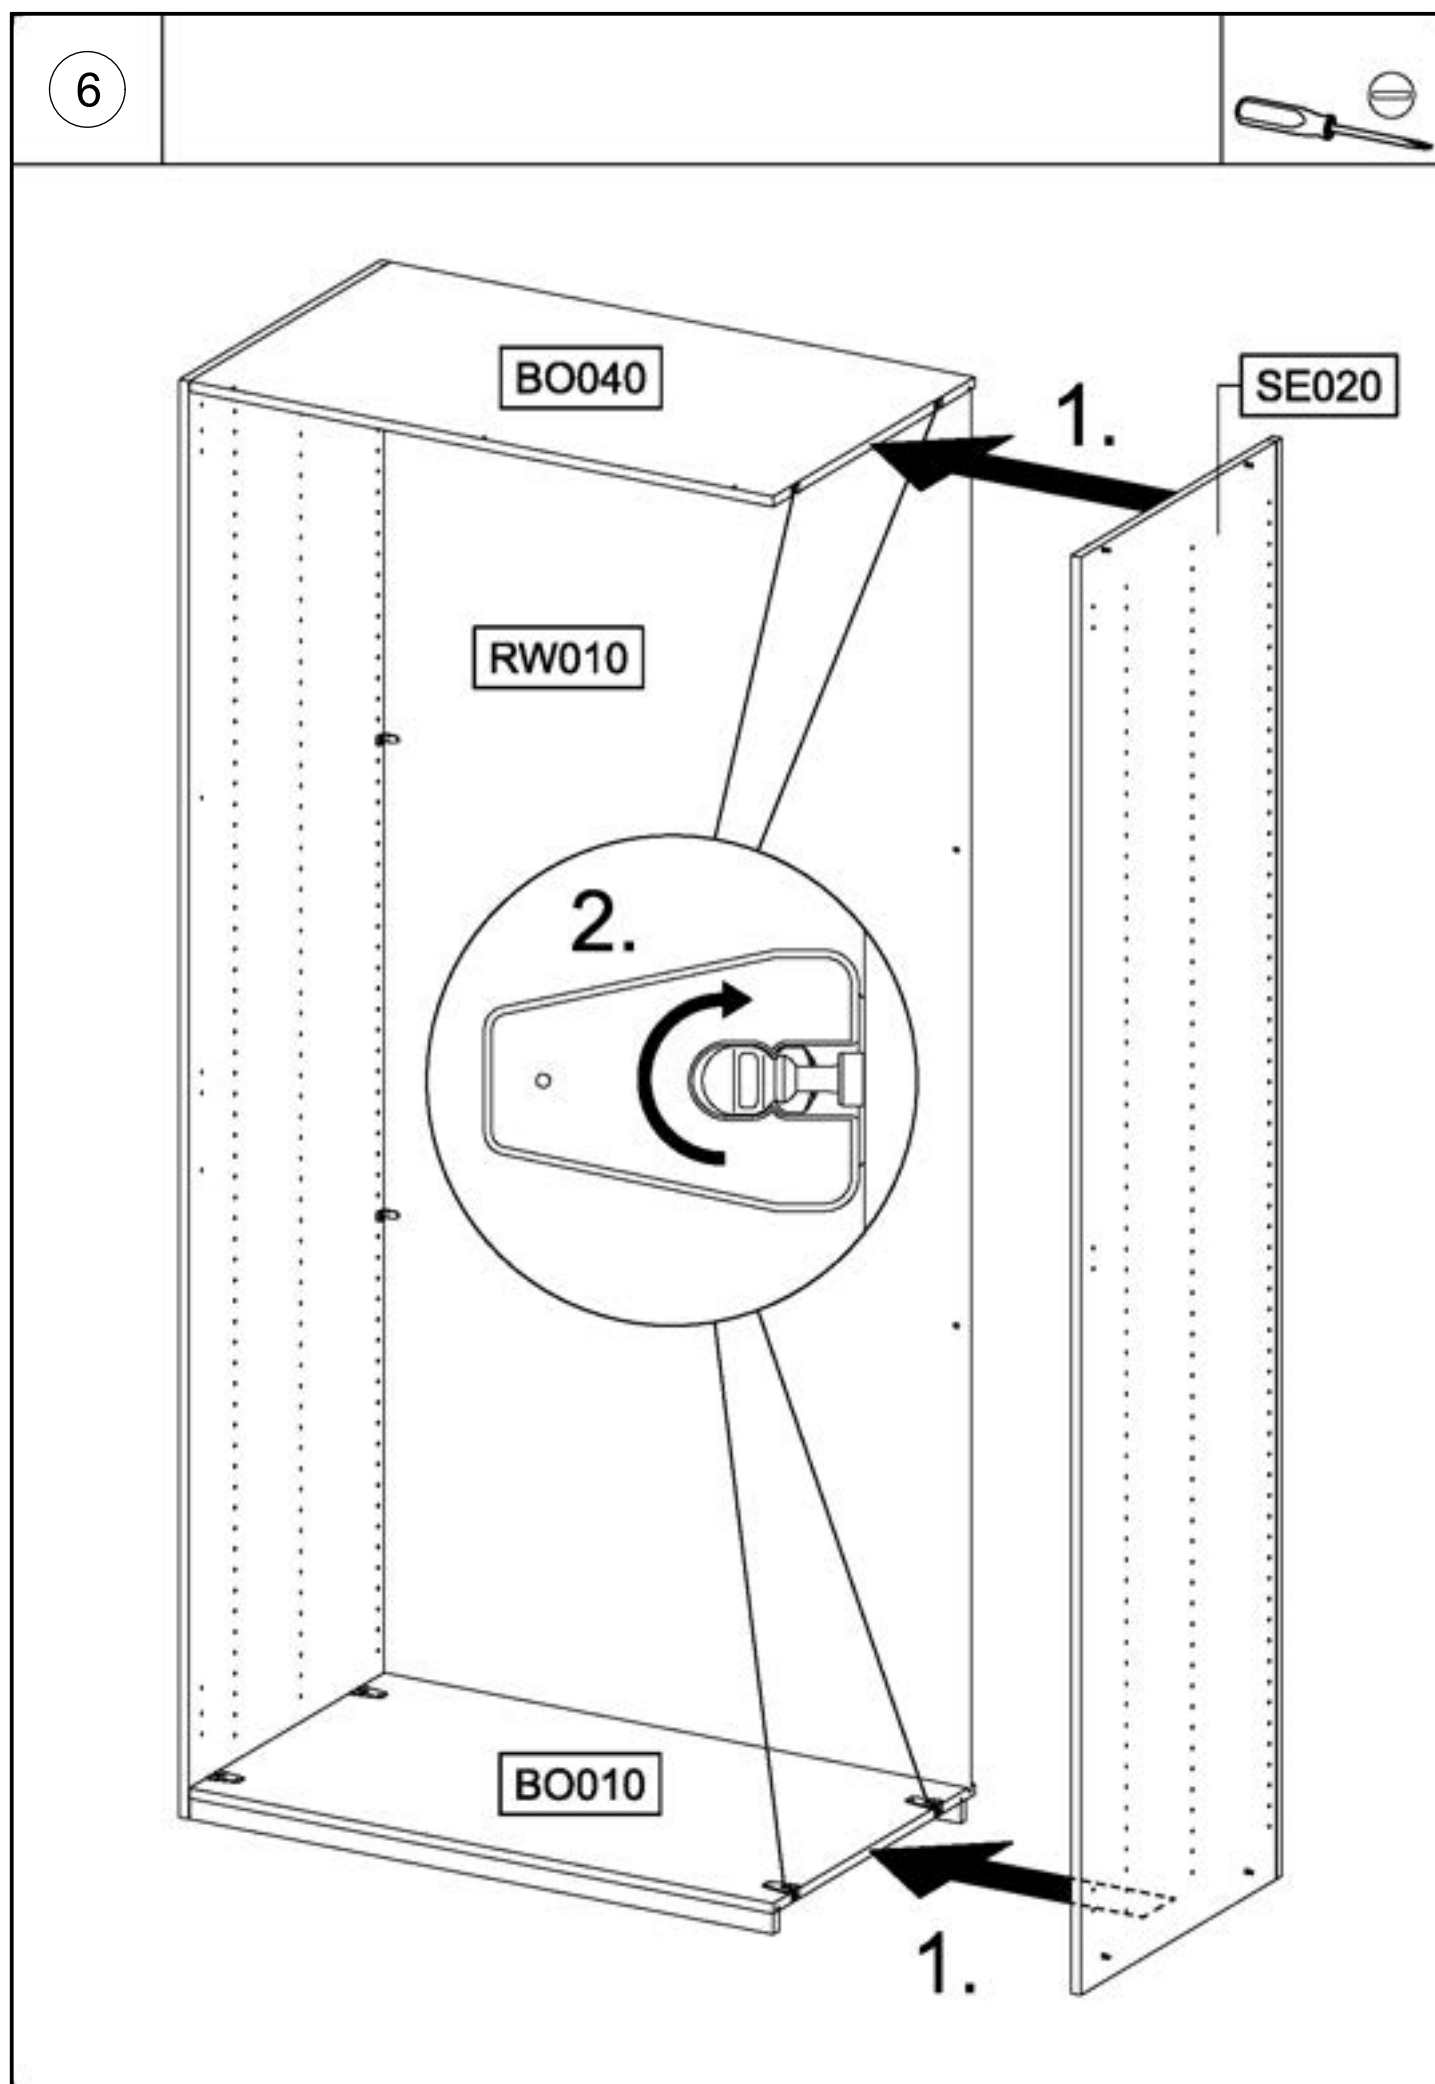

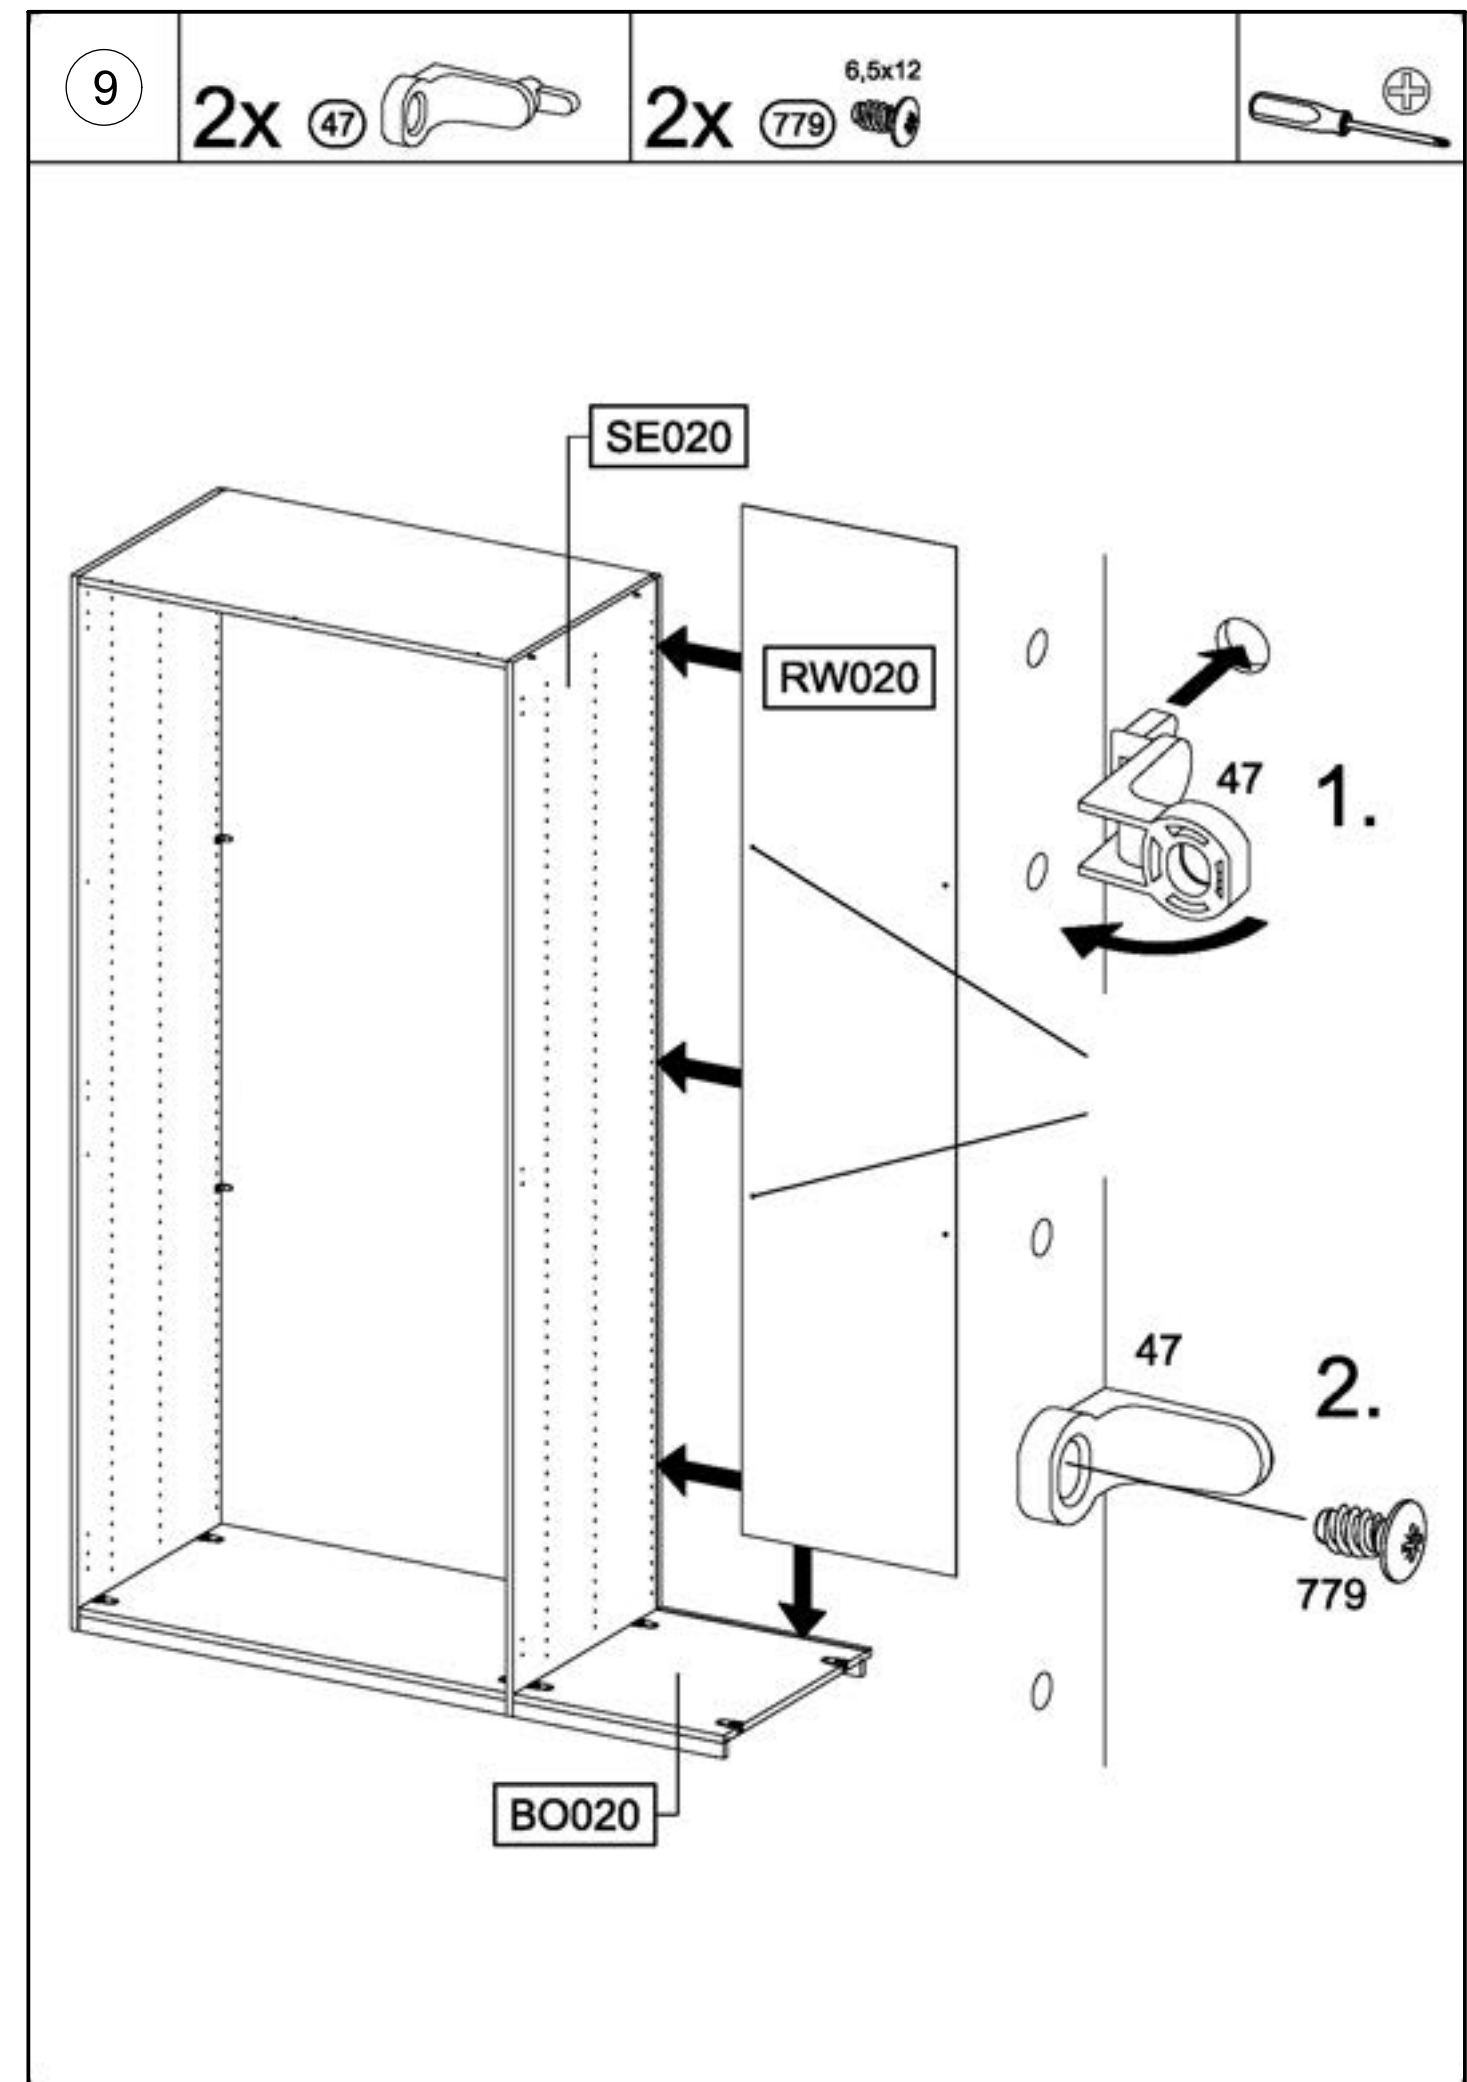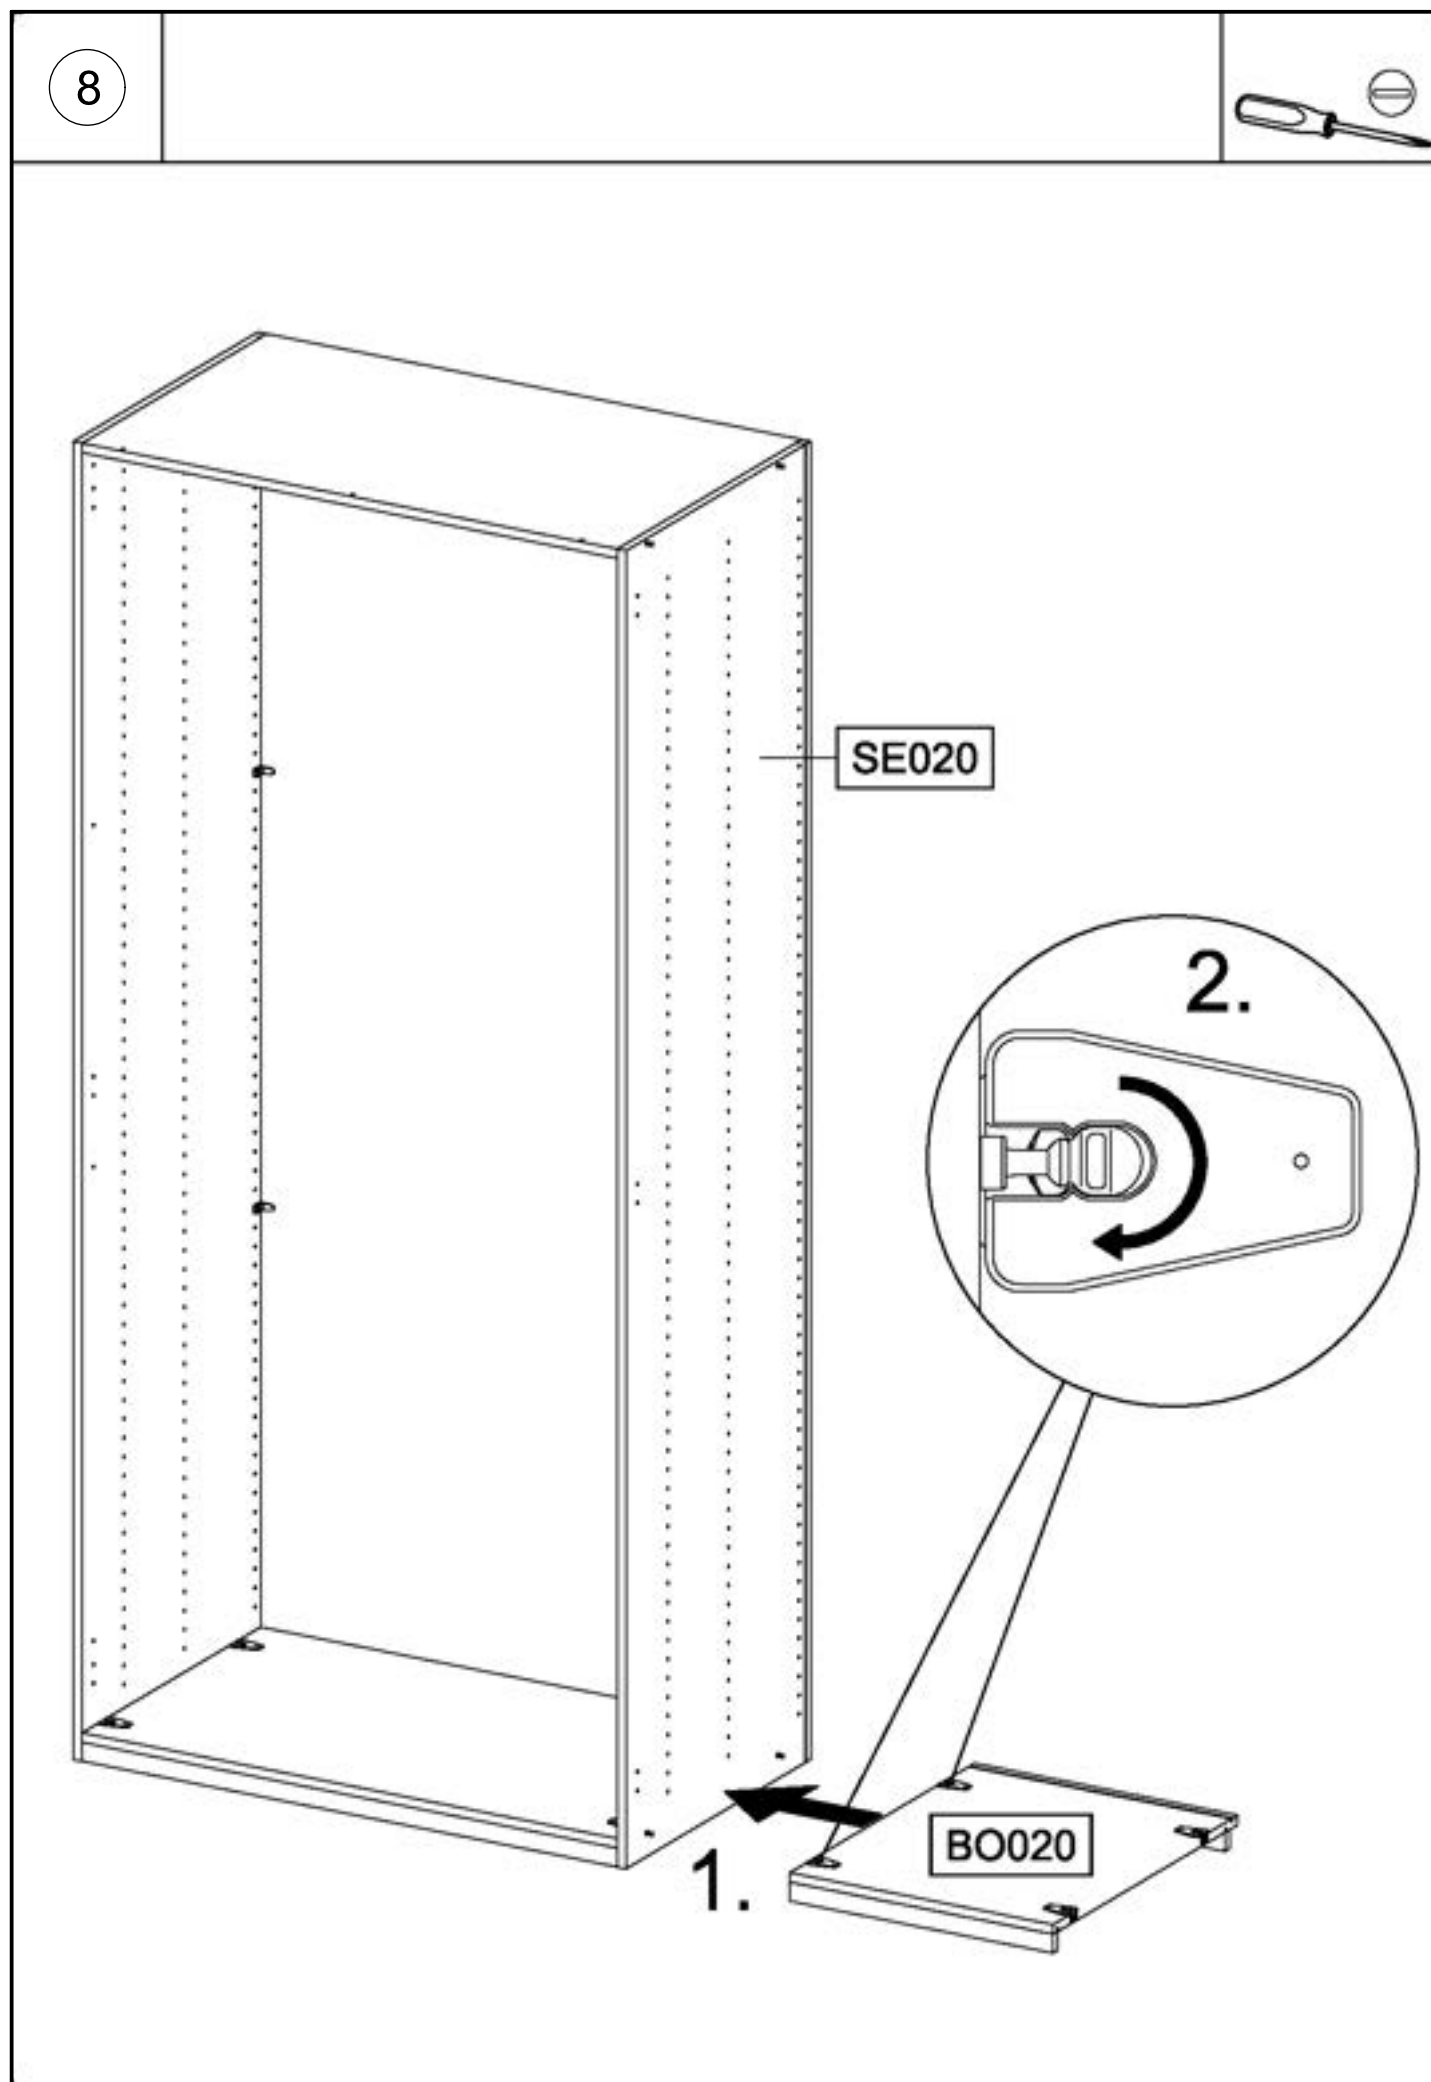


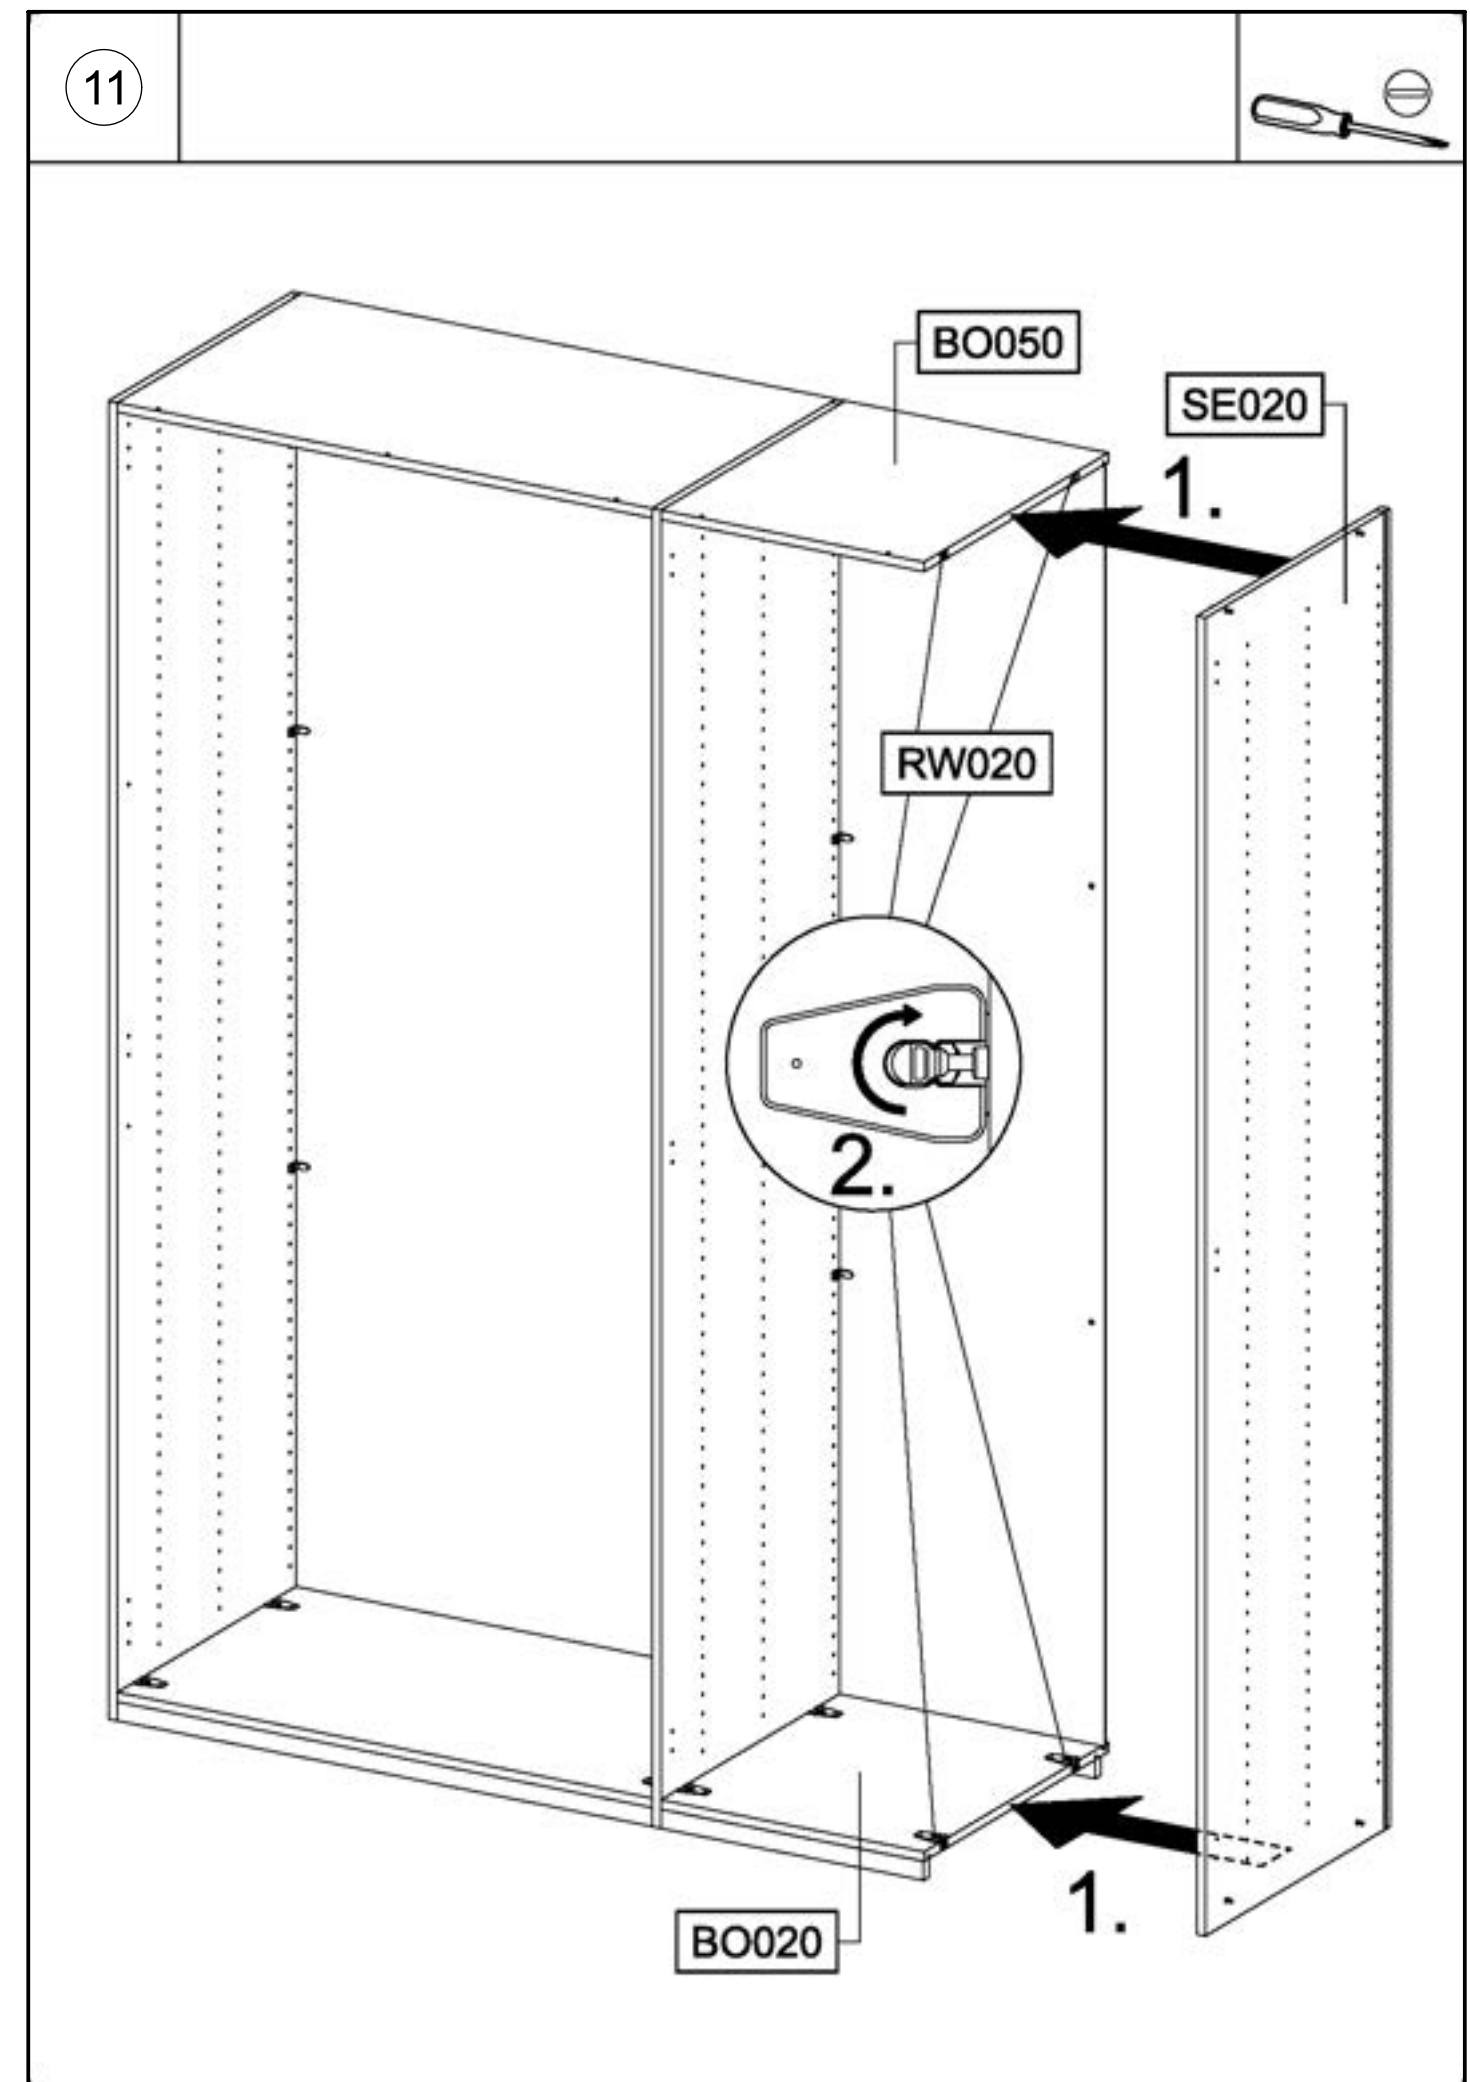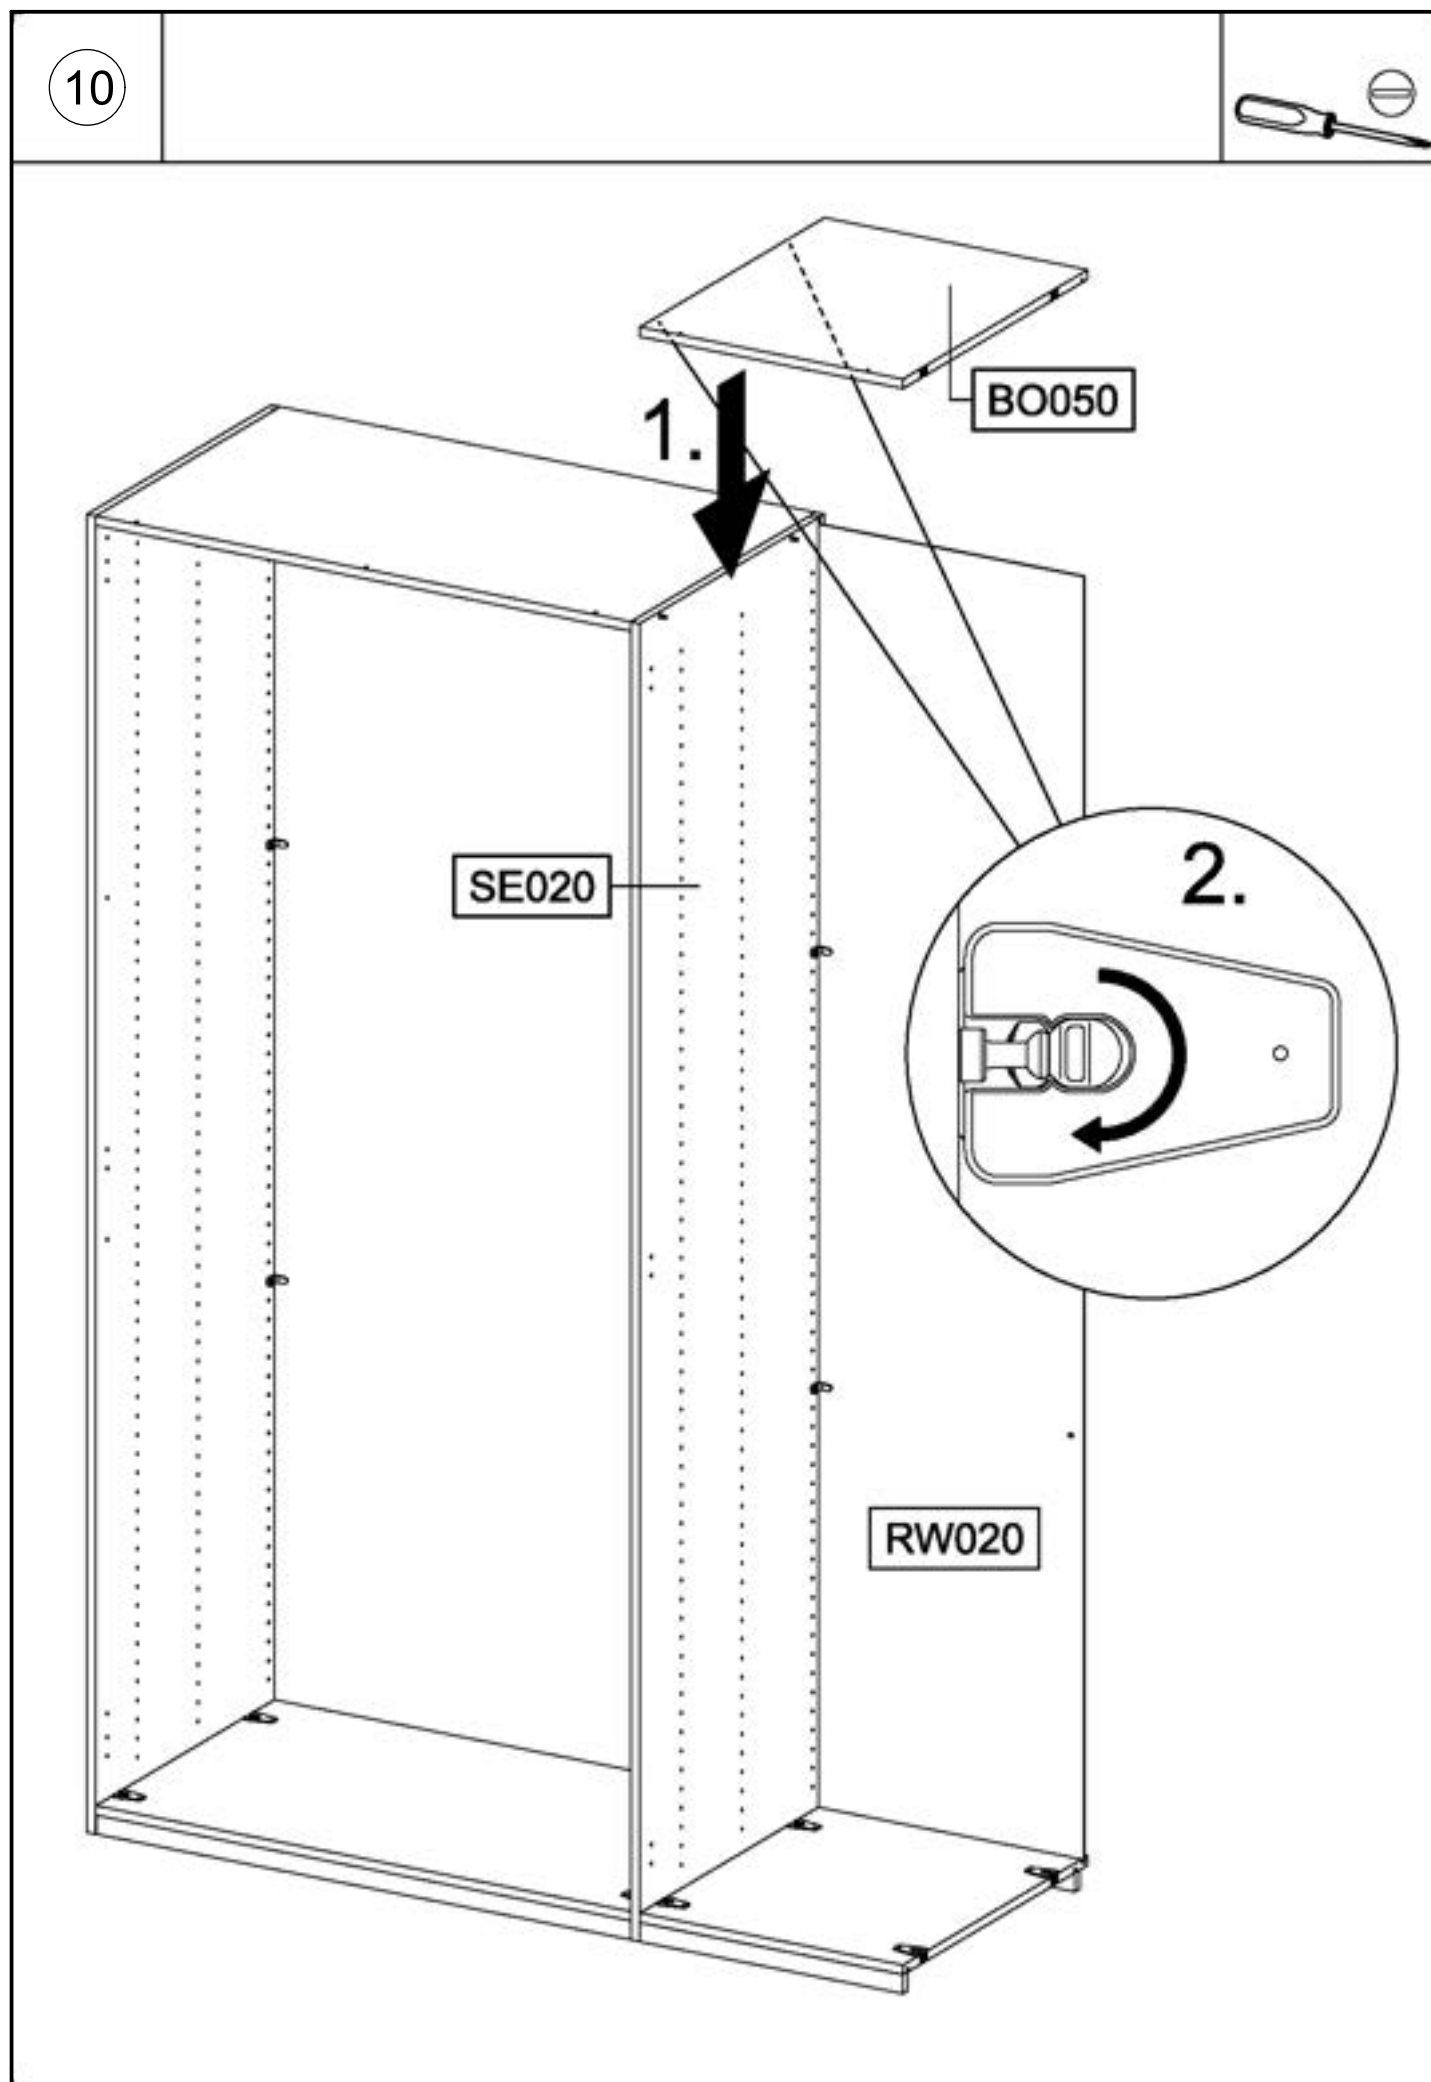

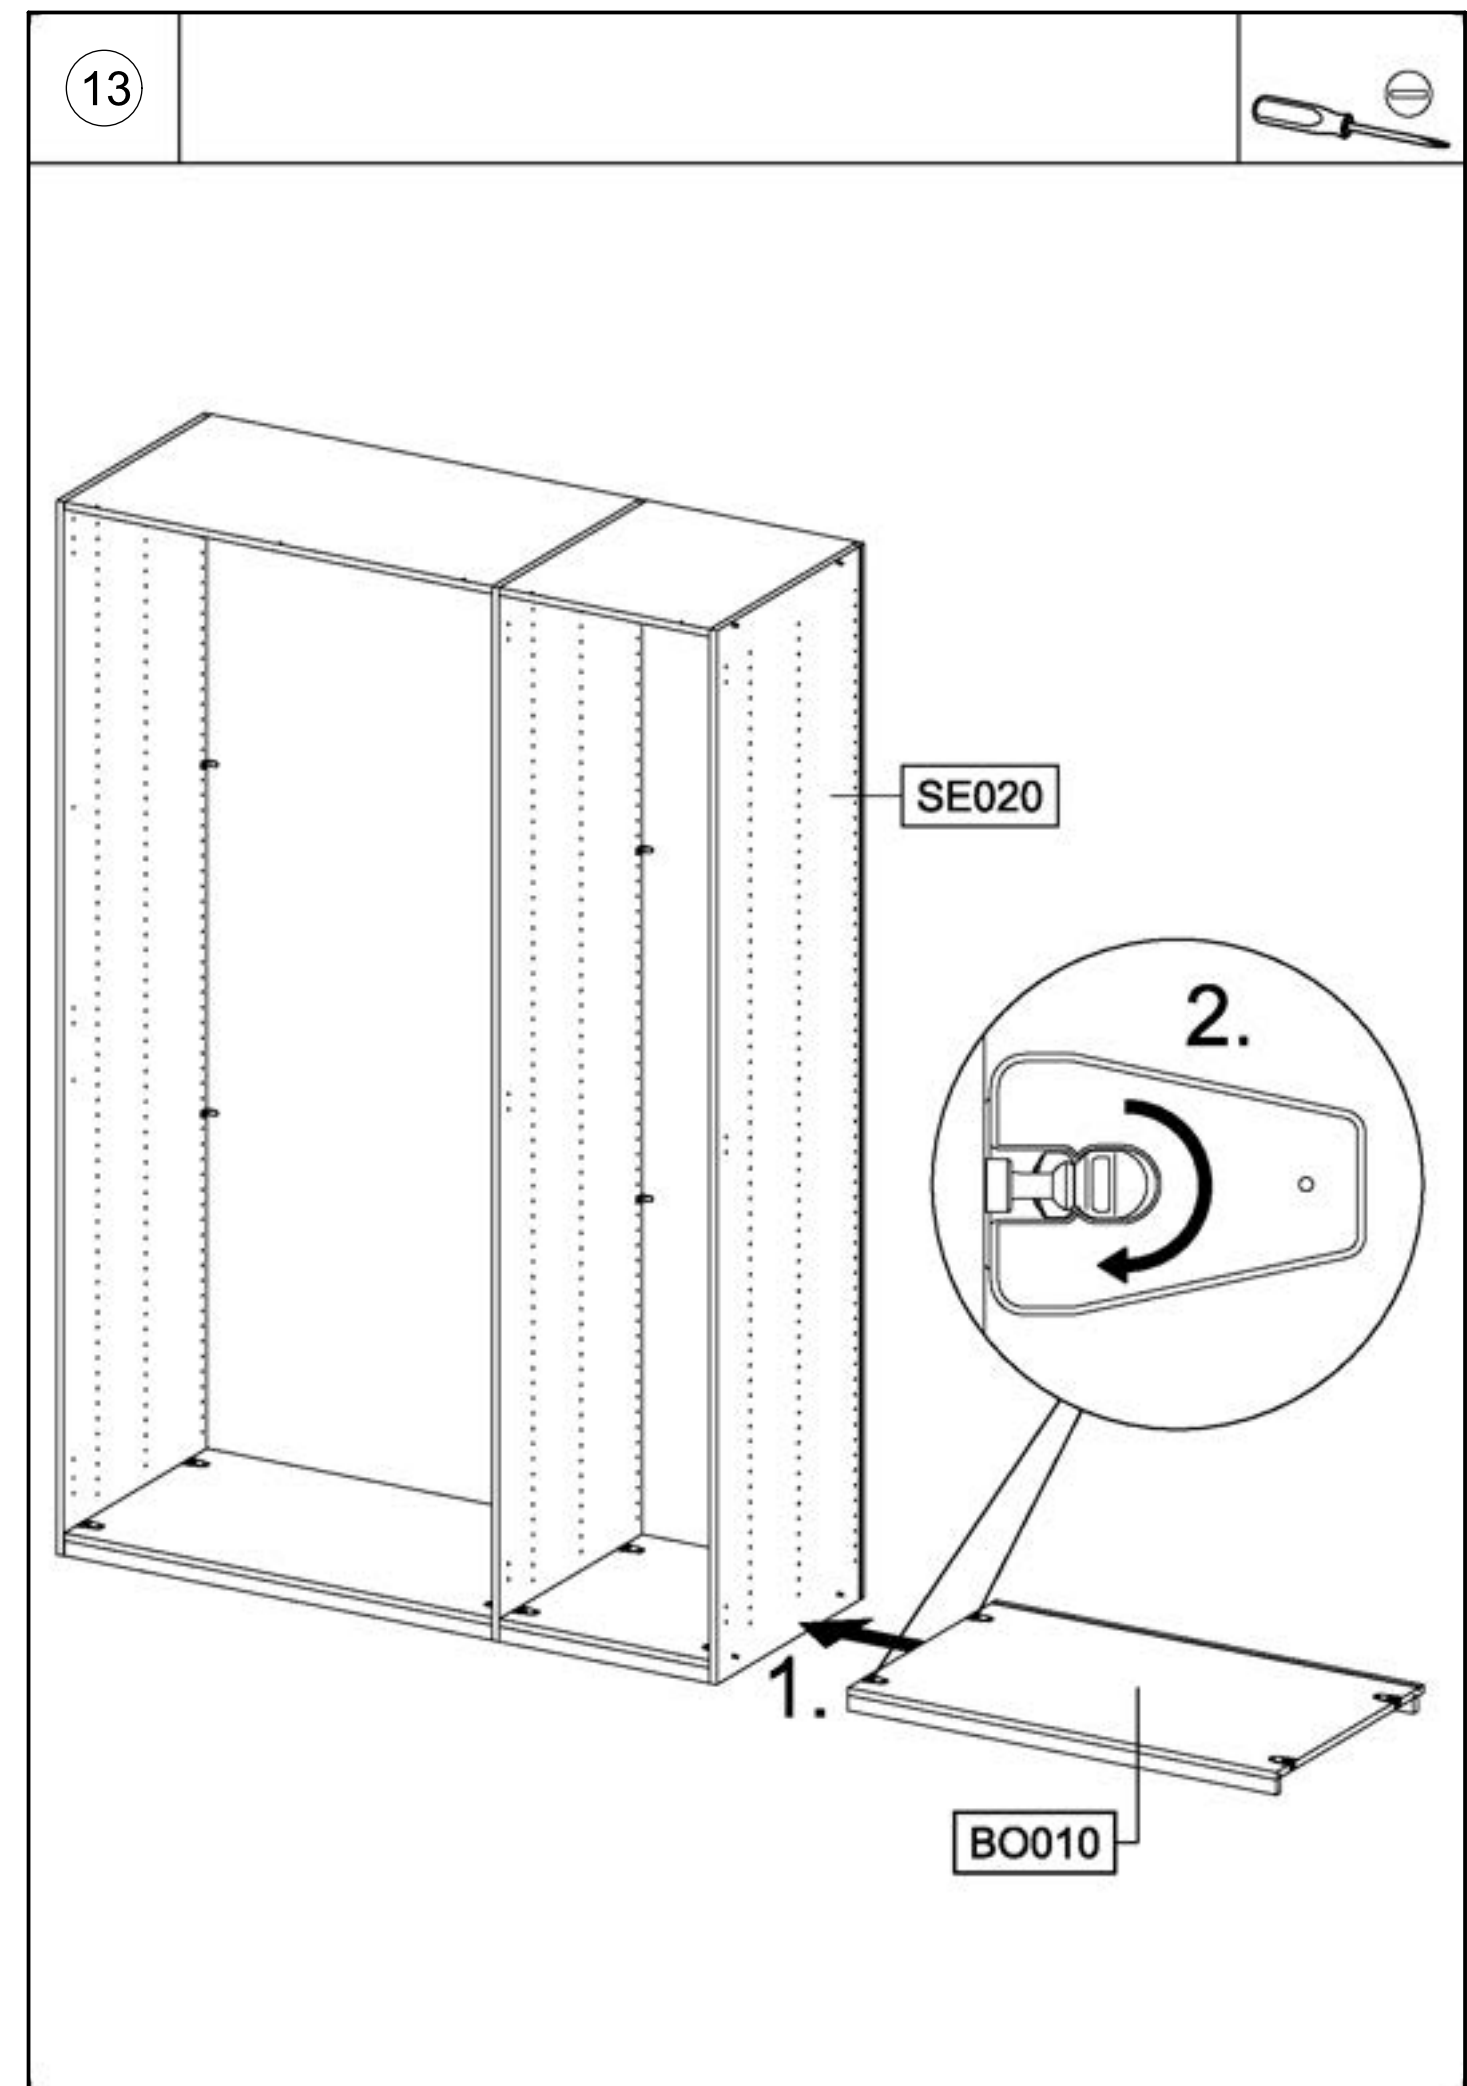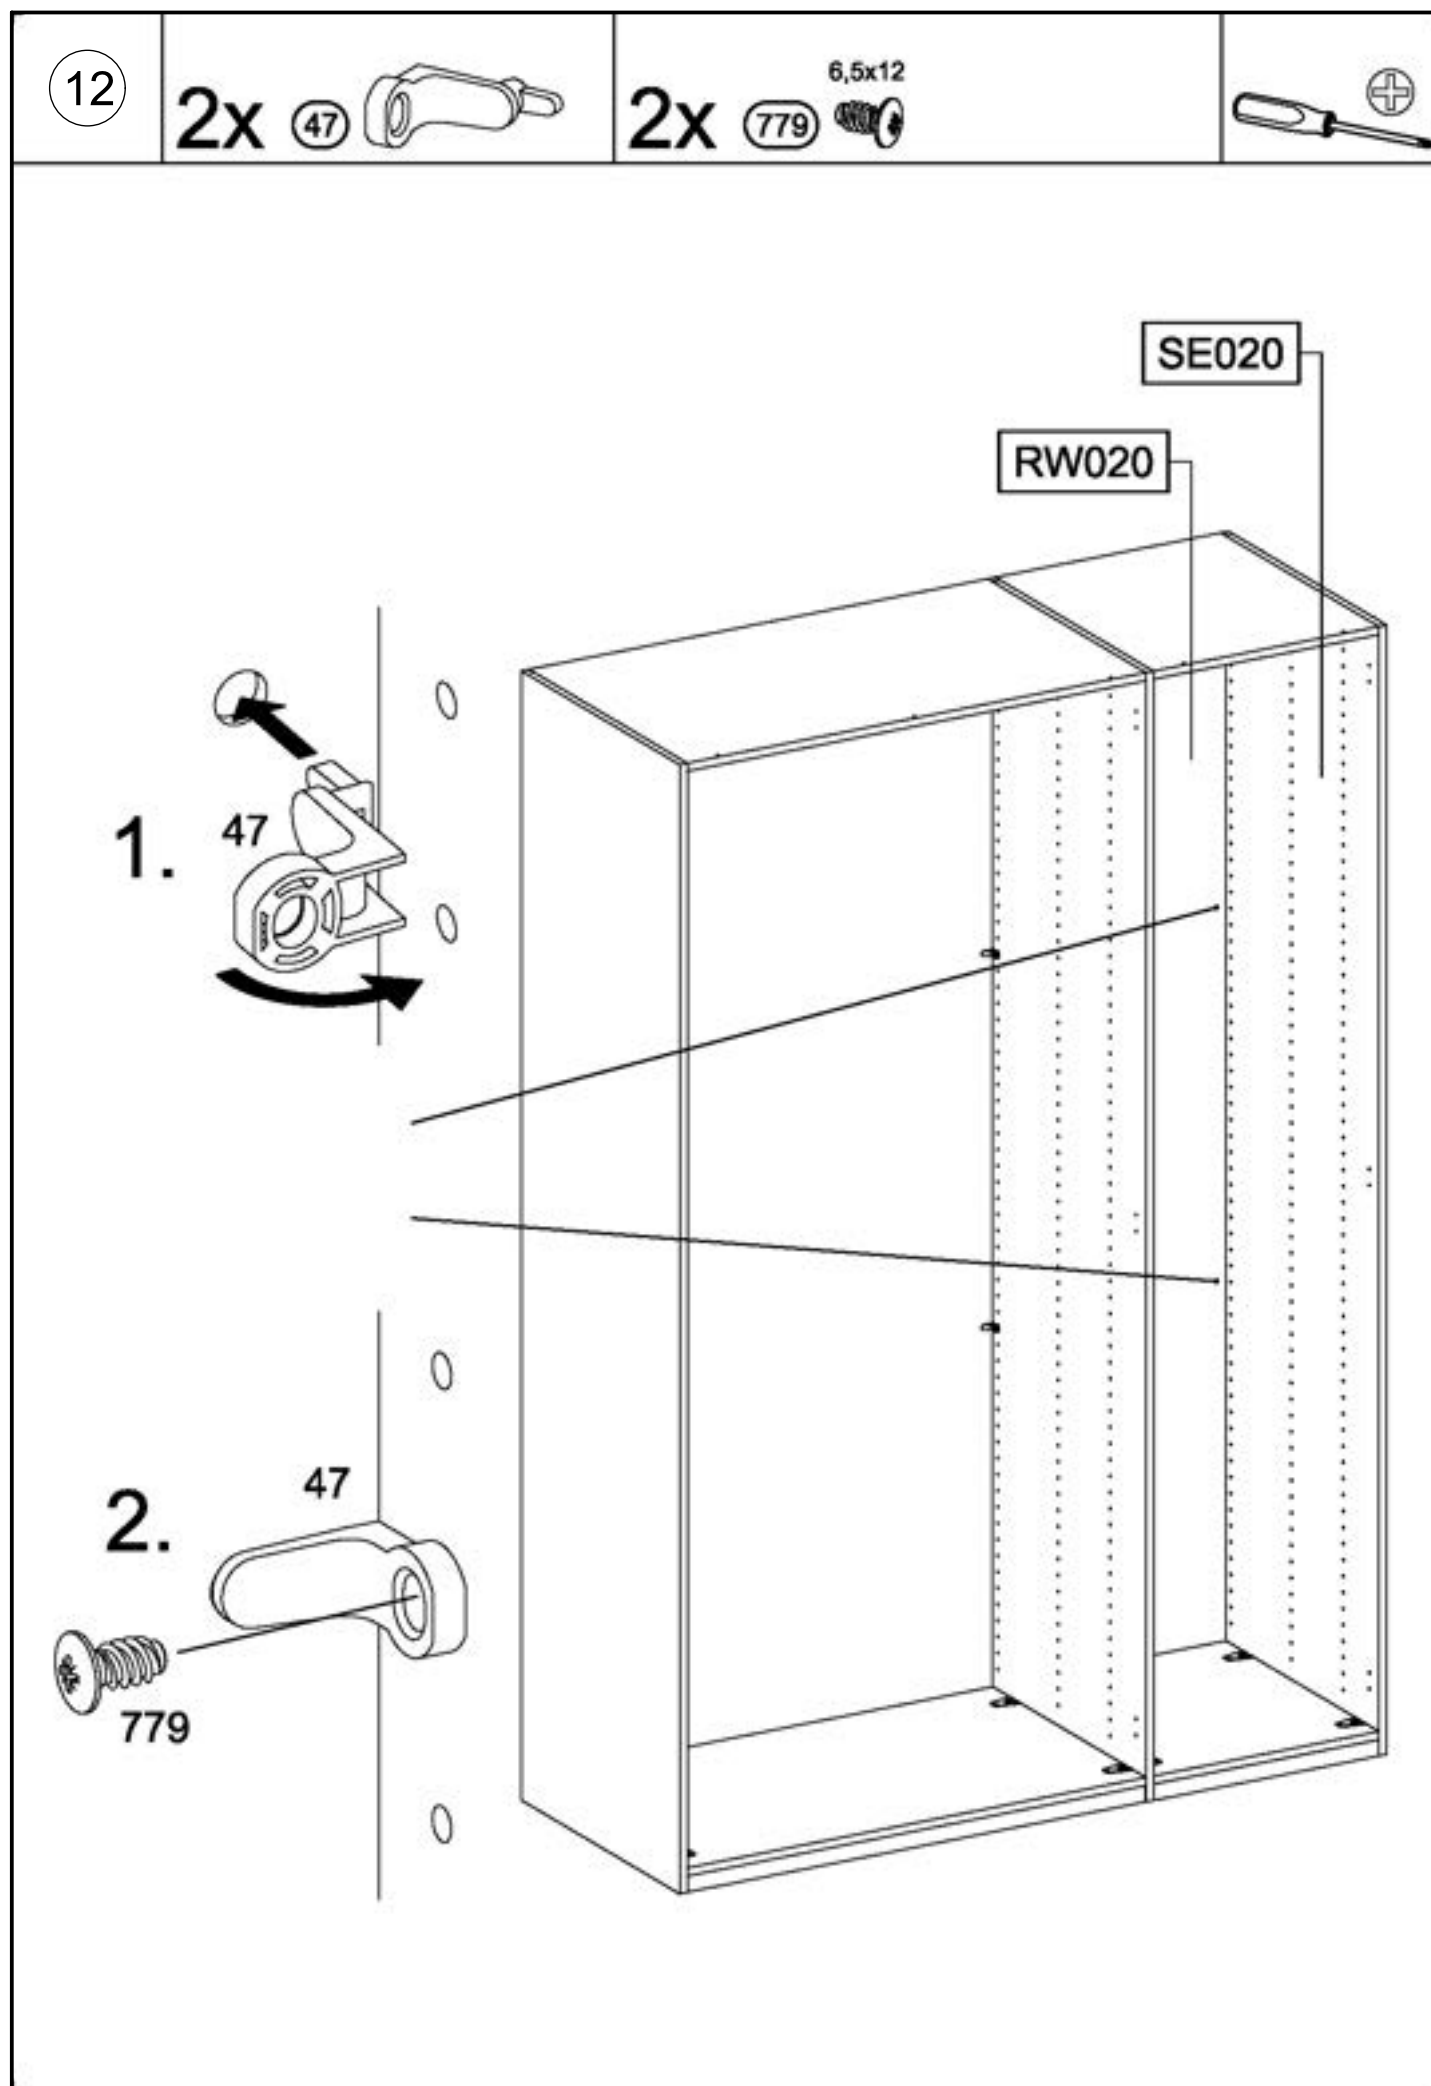

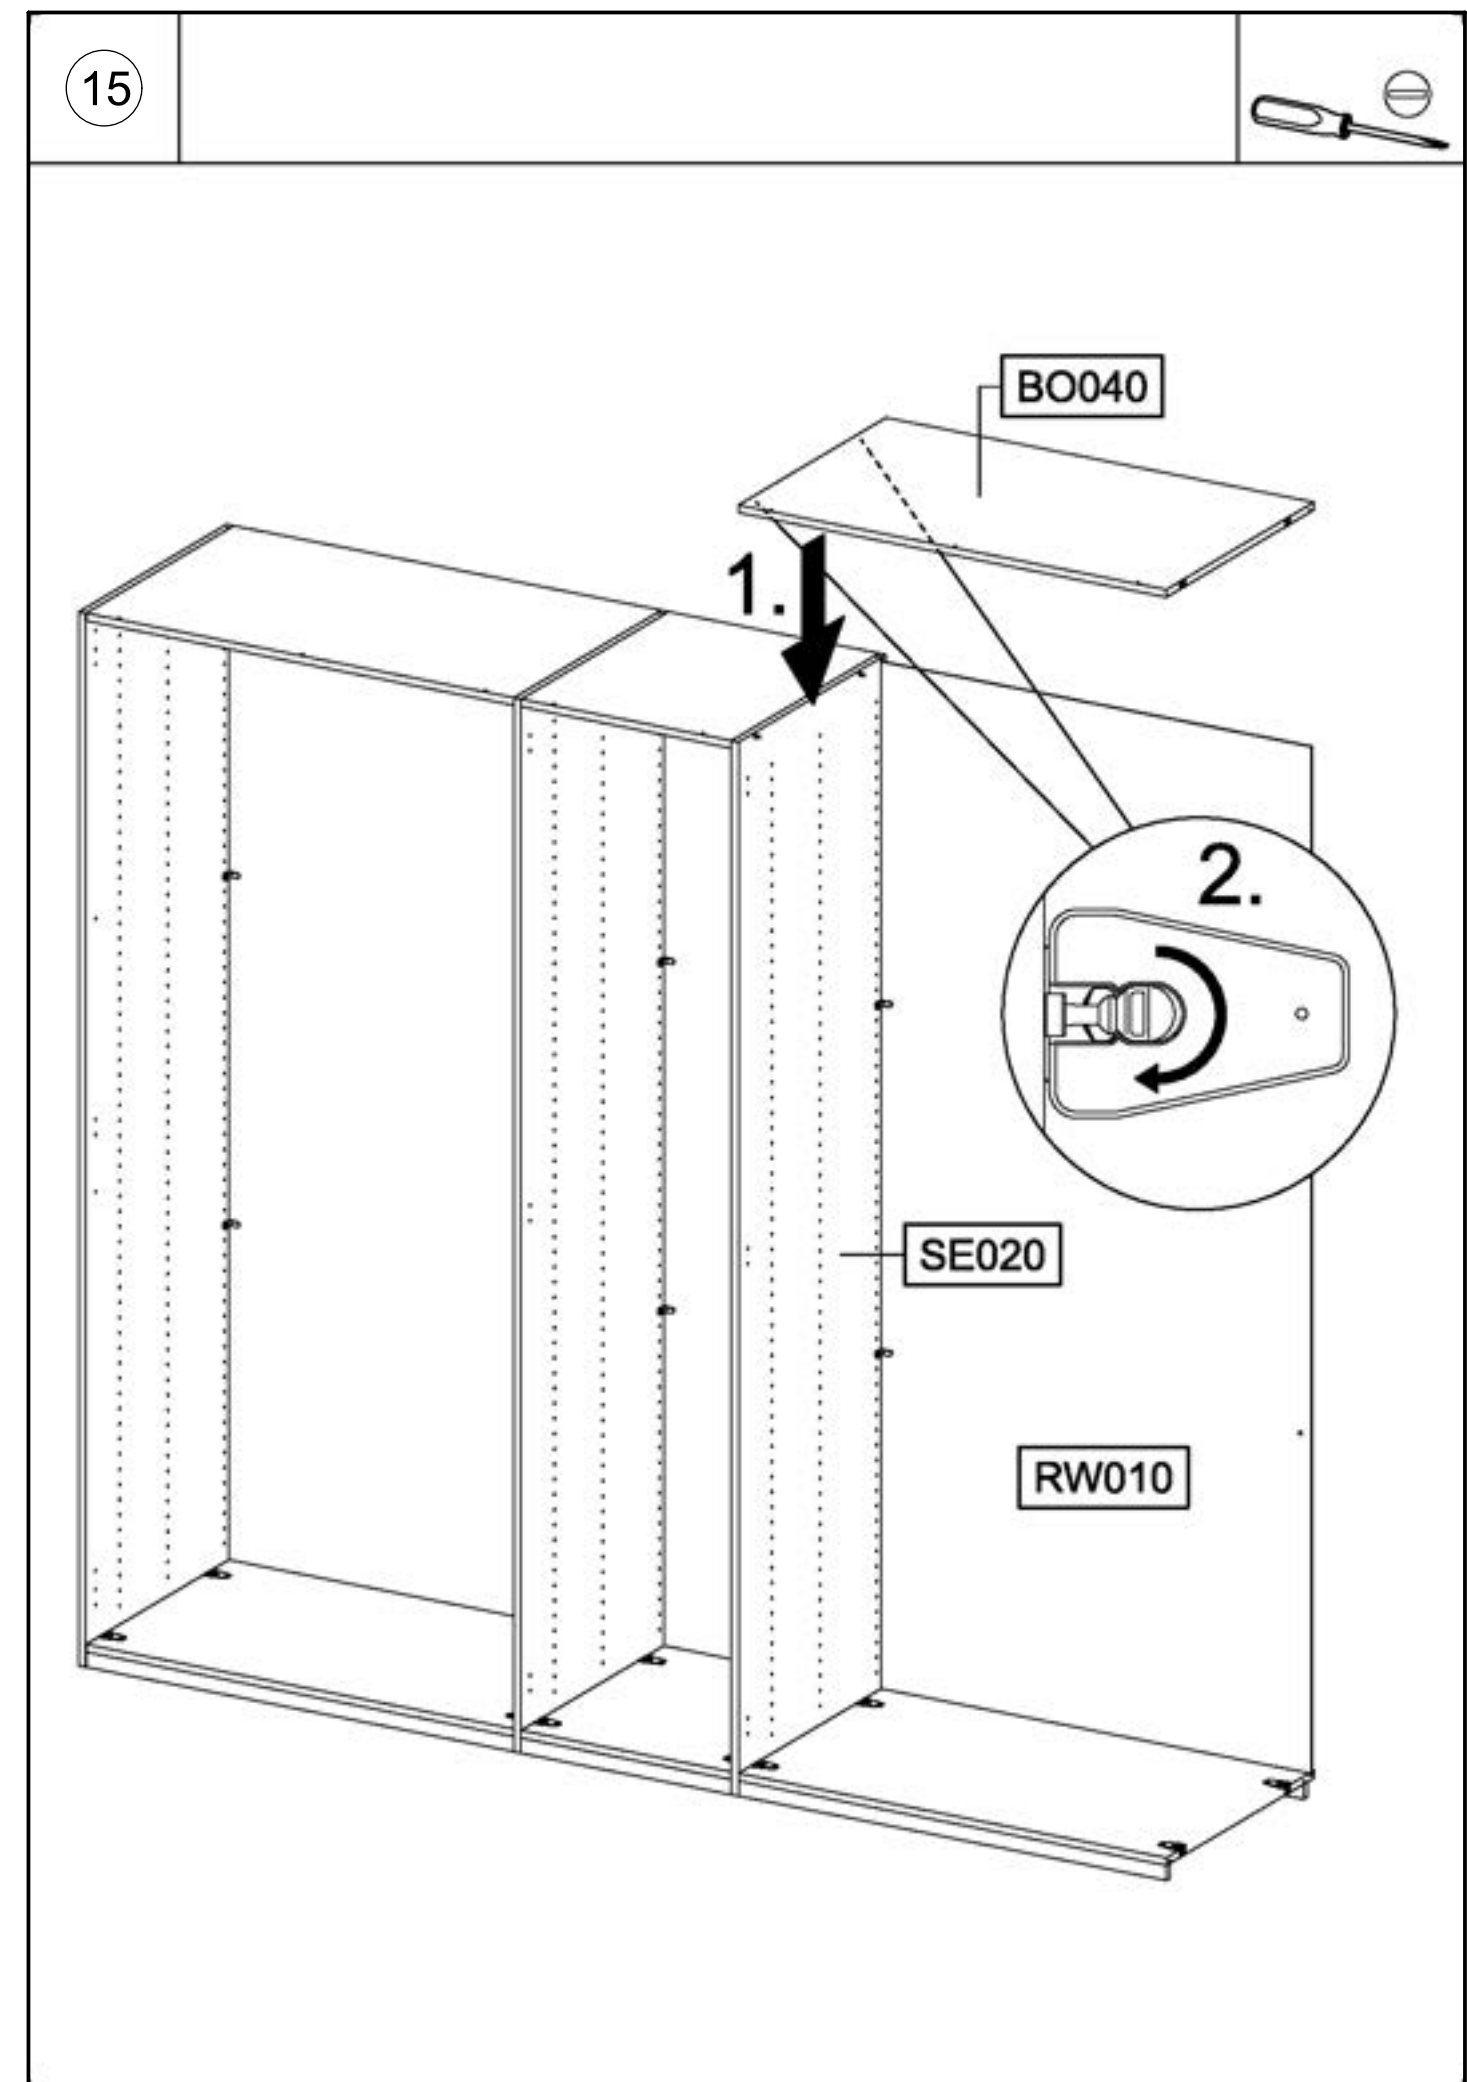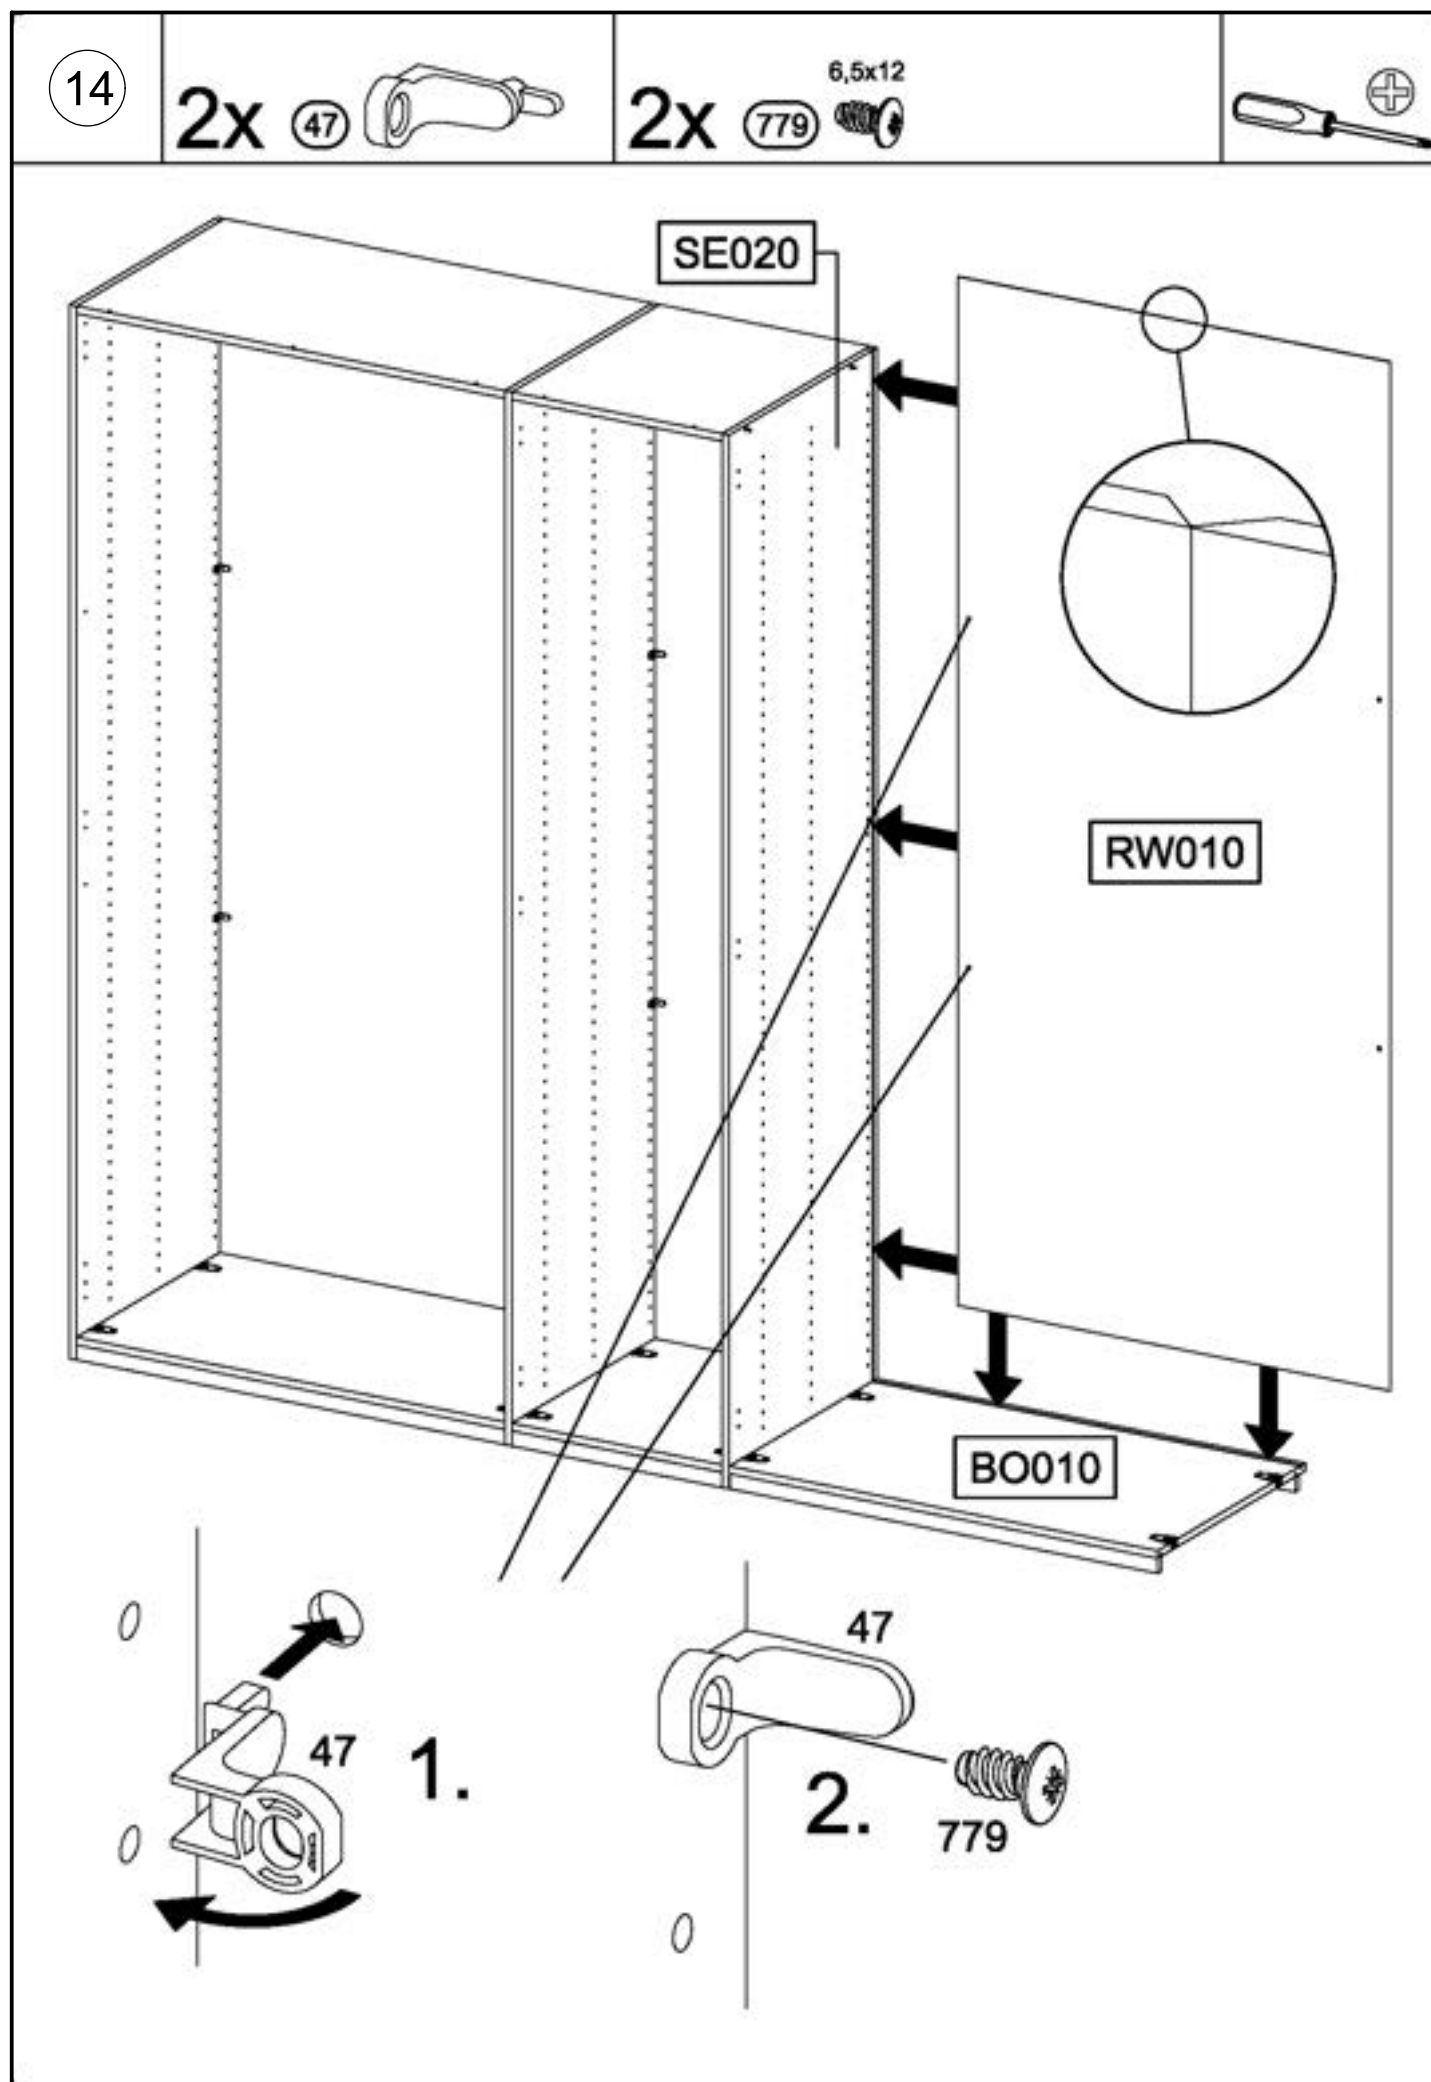

16

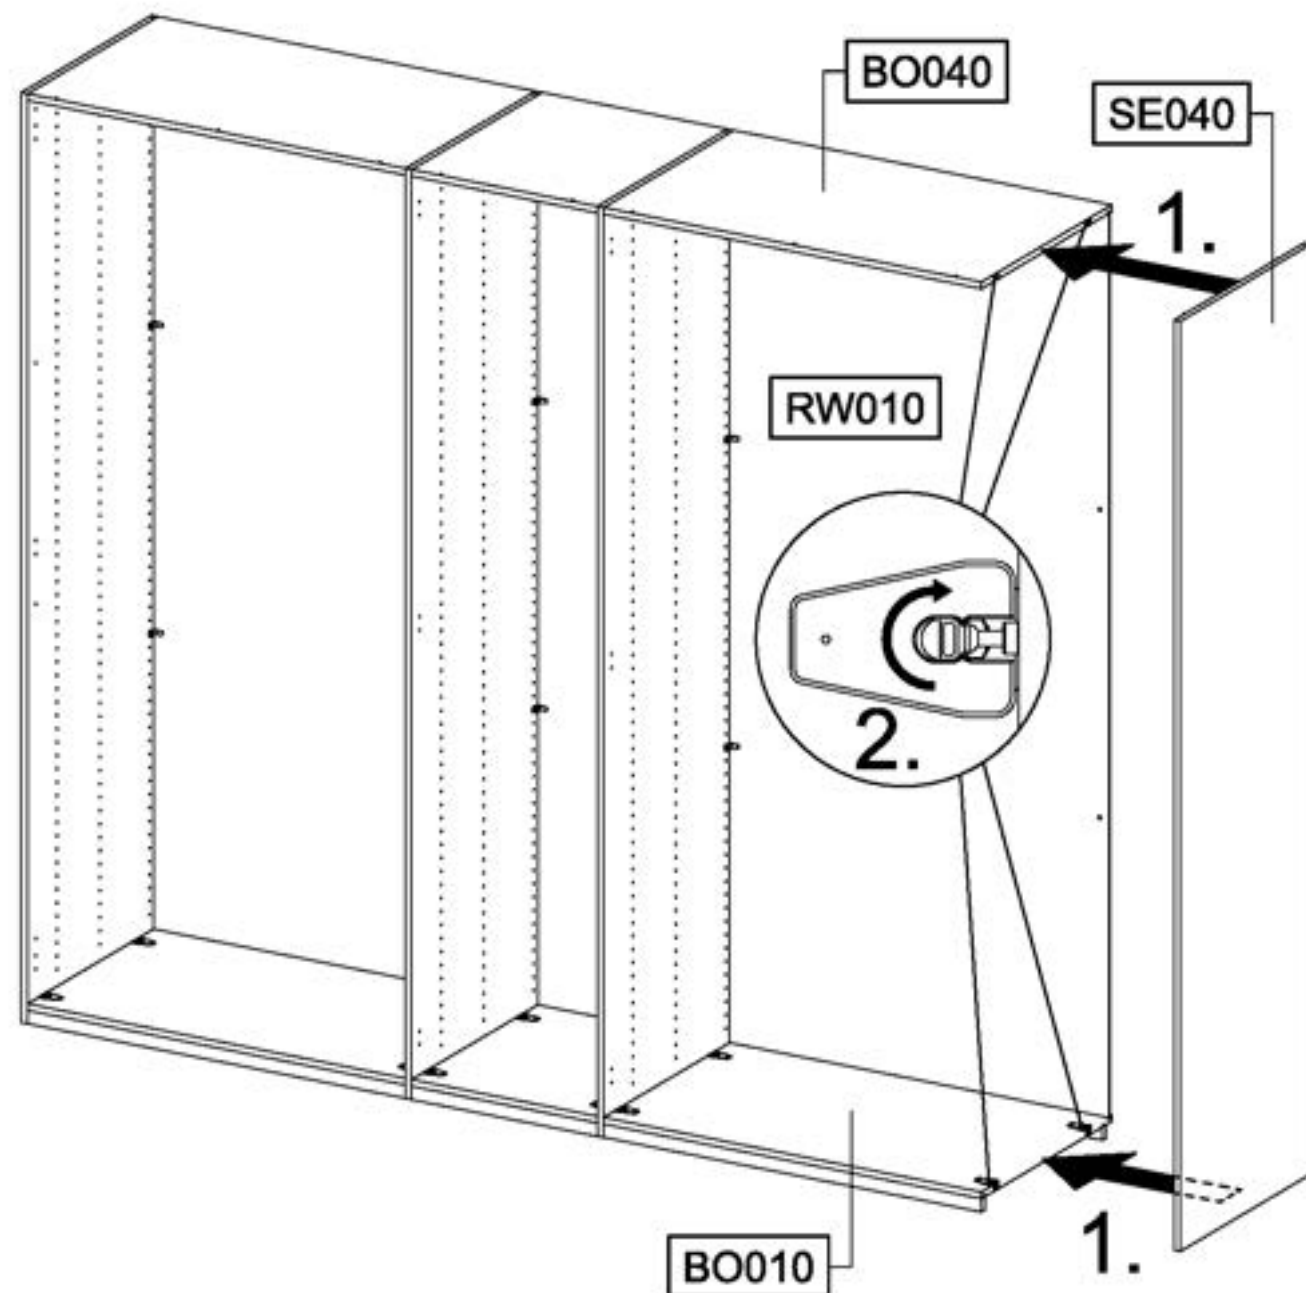


17

2x 47





2x 779 6,5x12

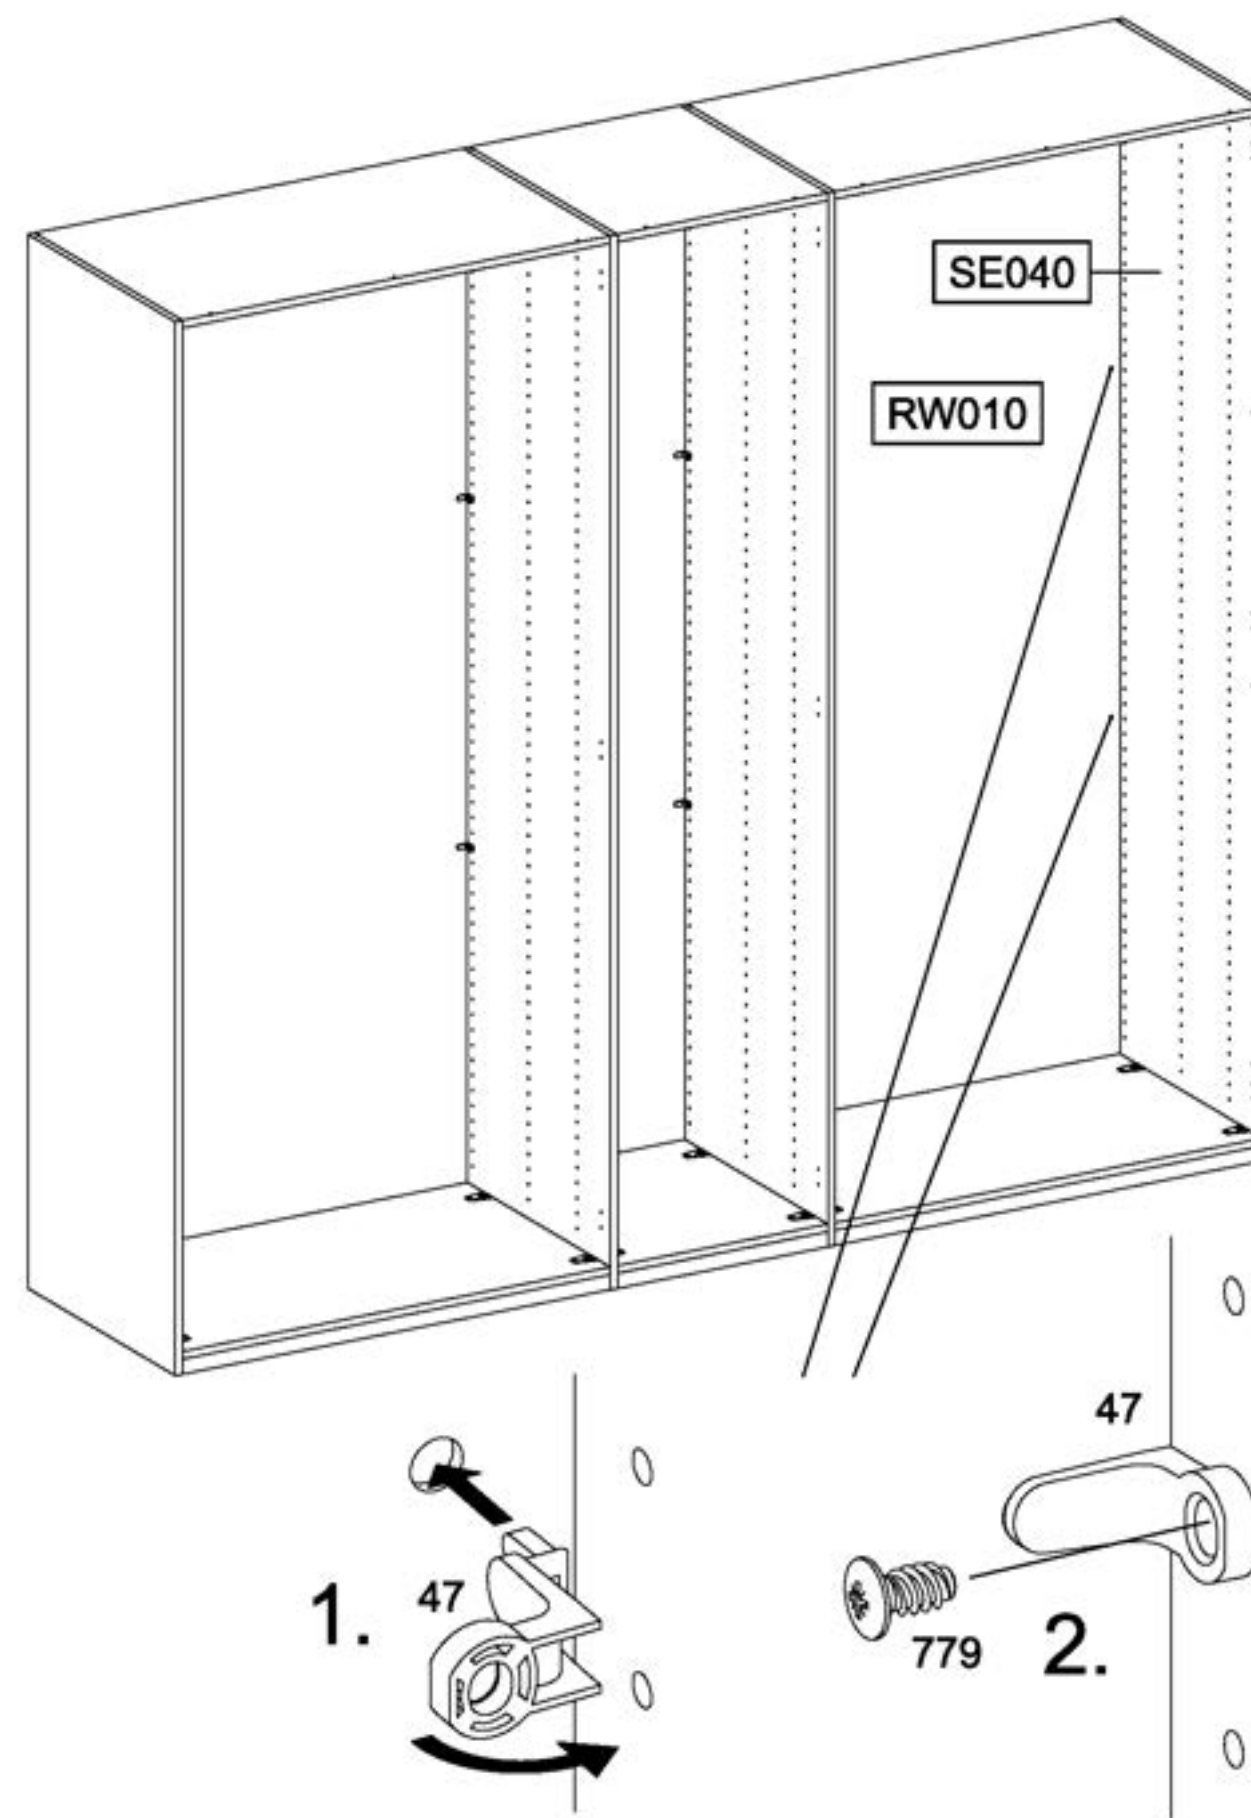

18

24x

1089

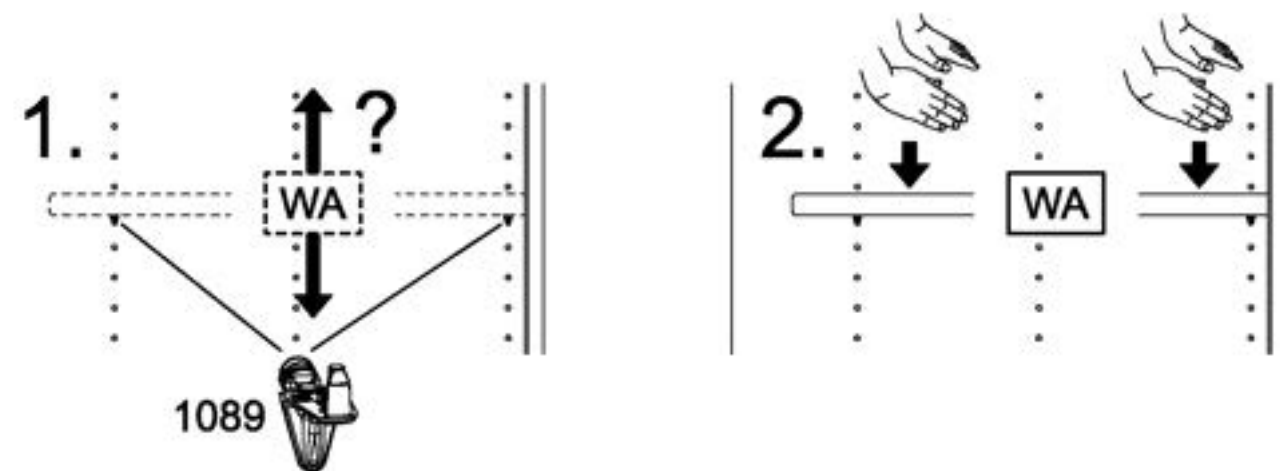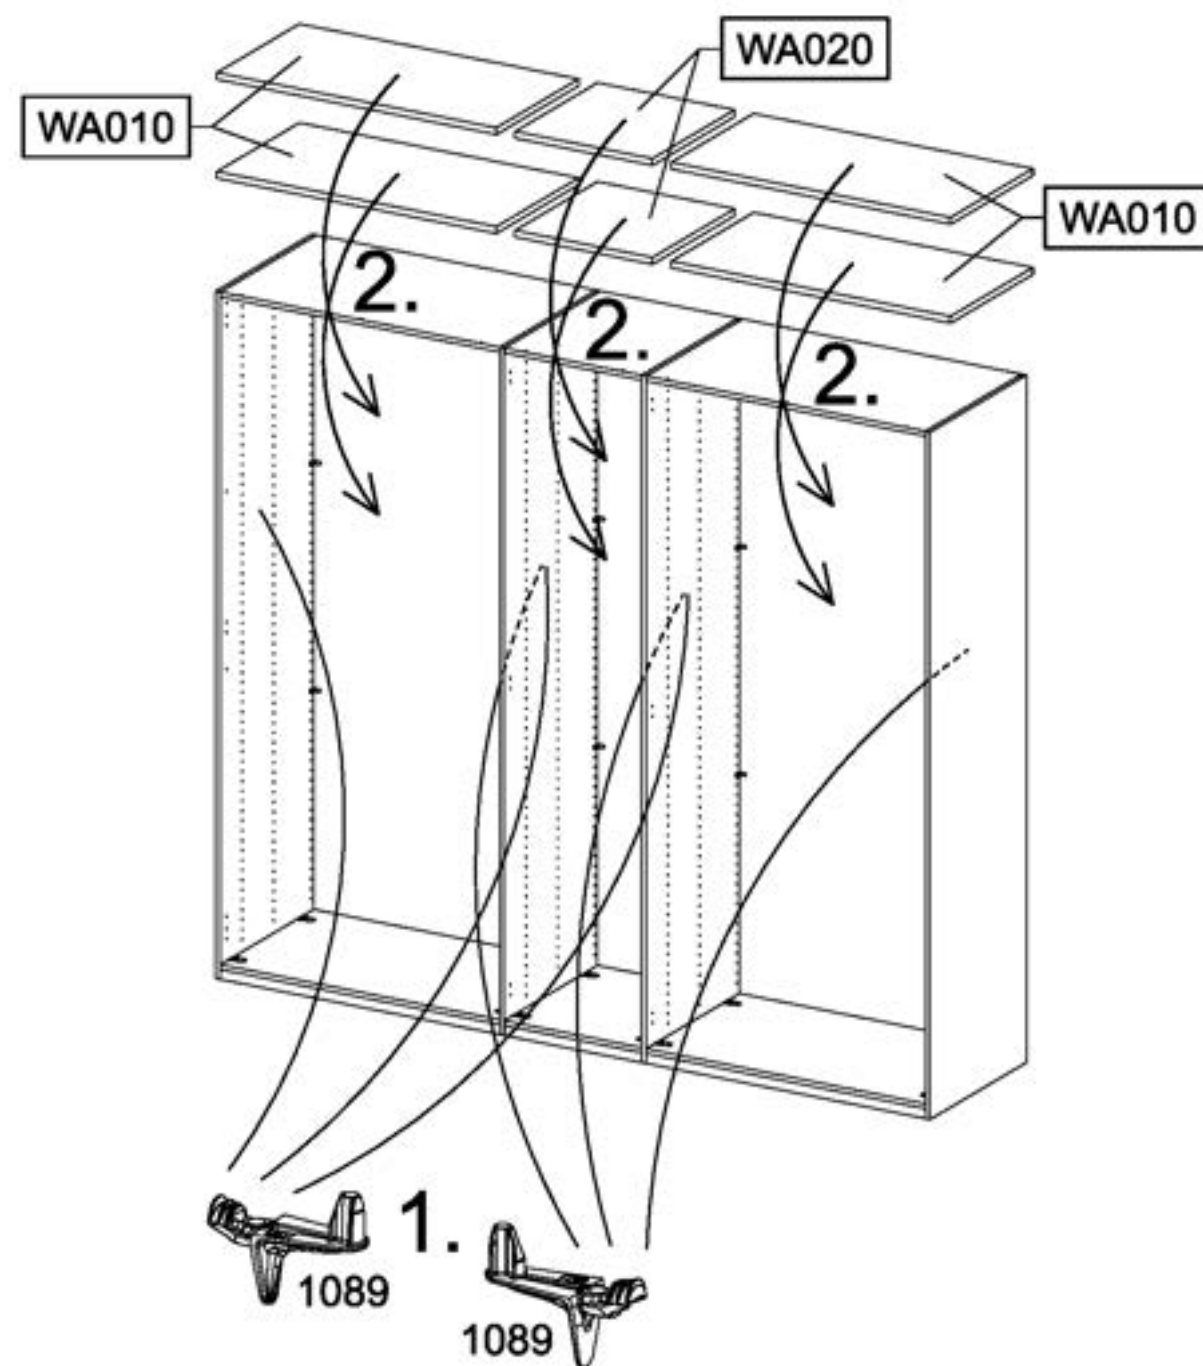

19

6x




29



6x




205

3,5x15

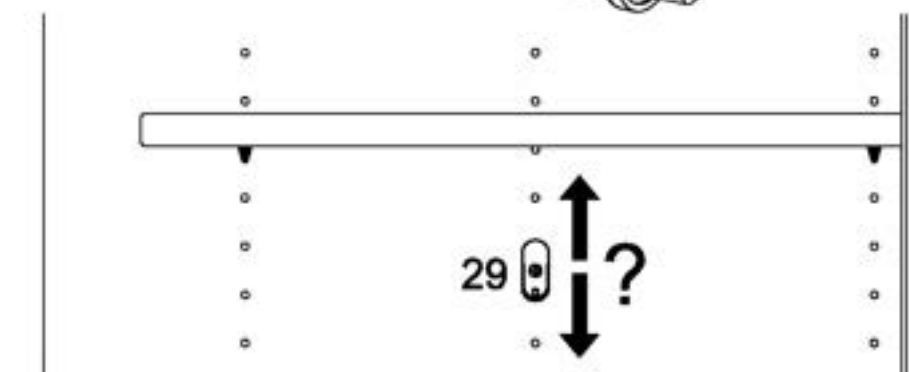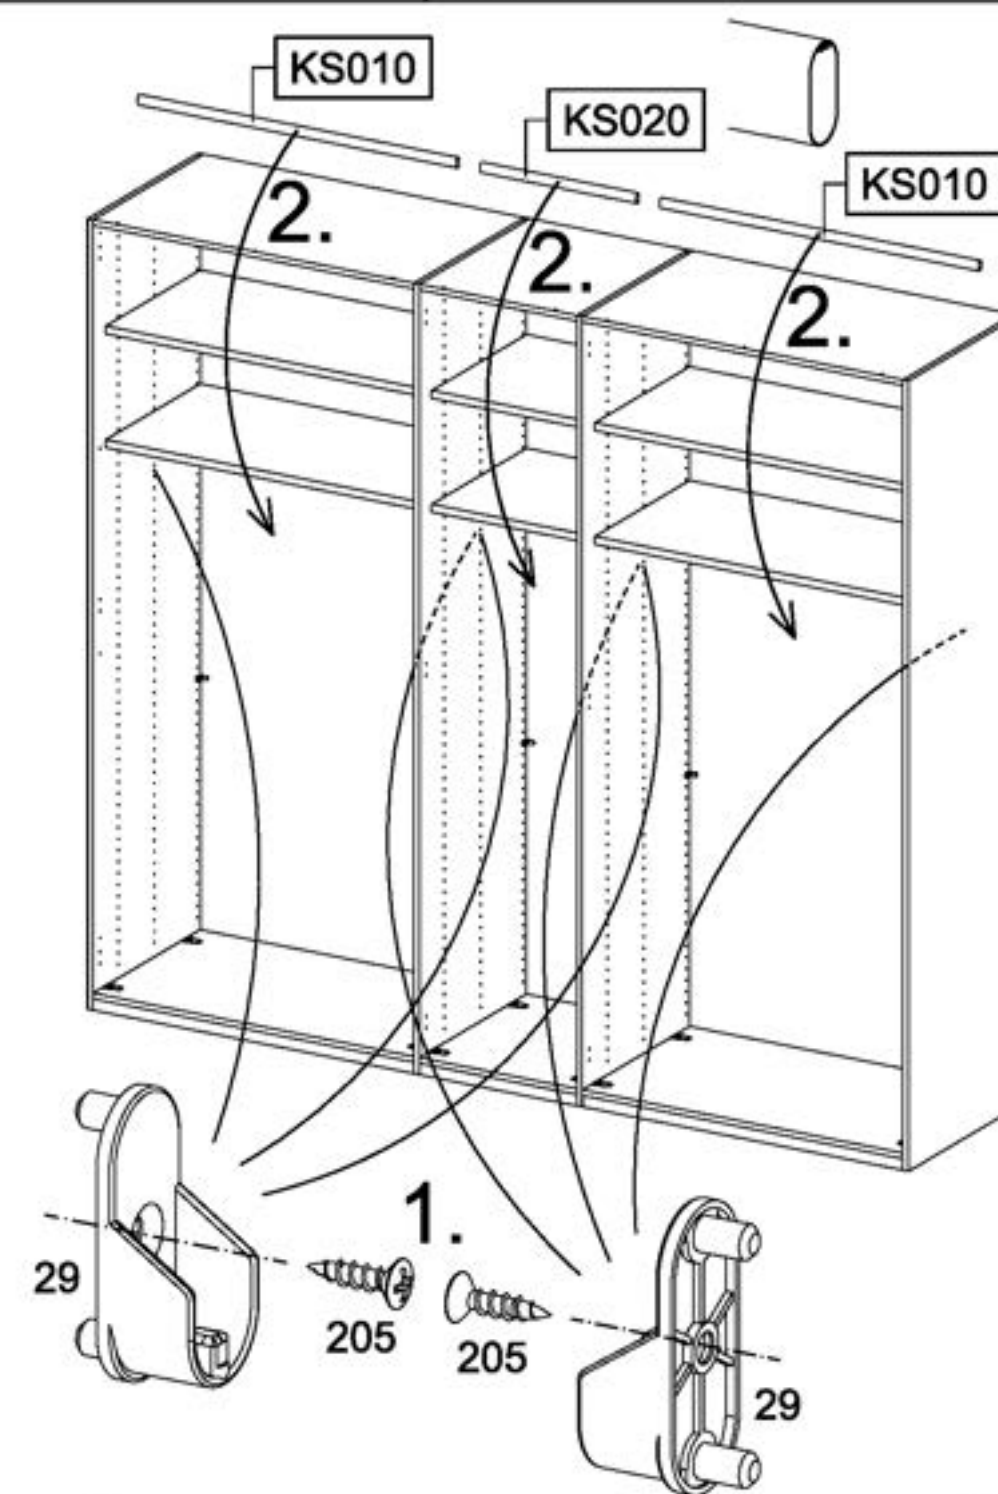




20



6x 620

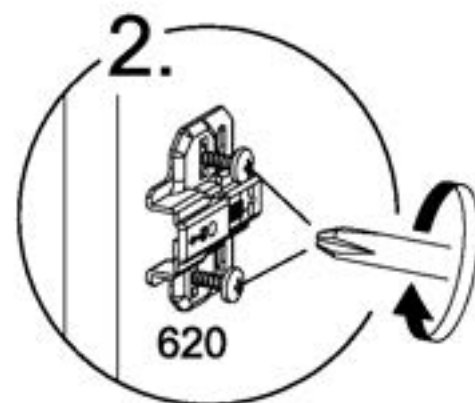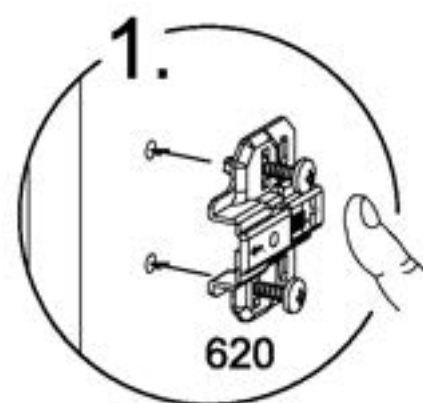
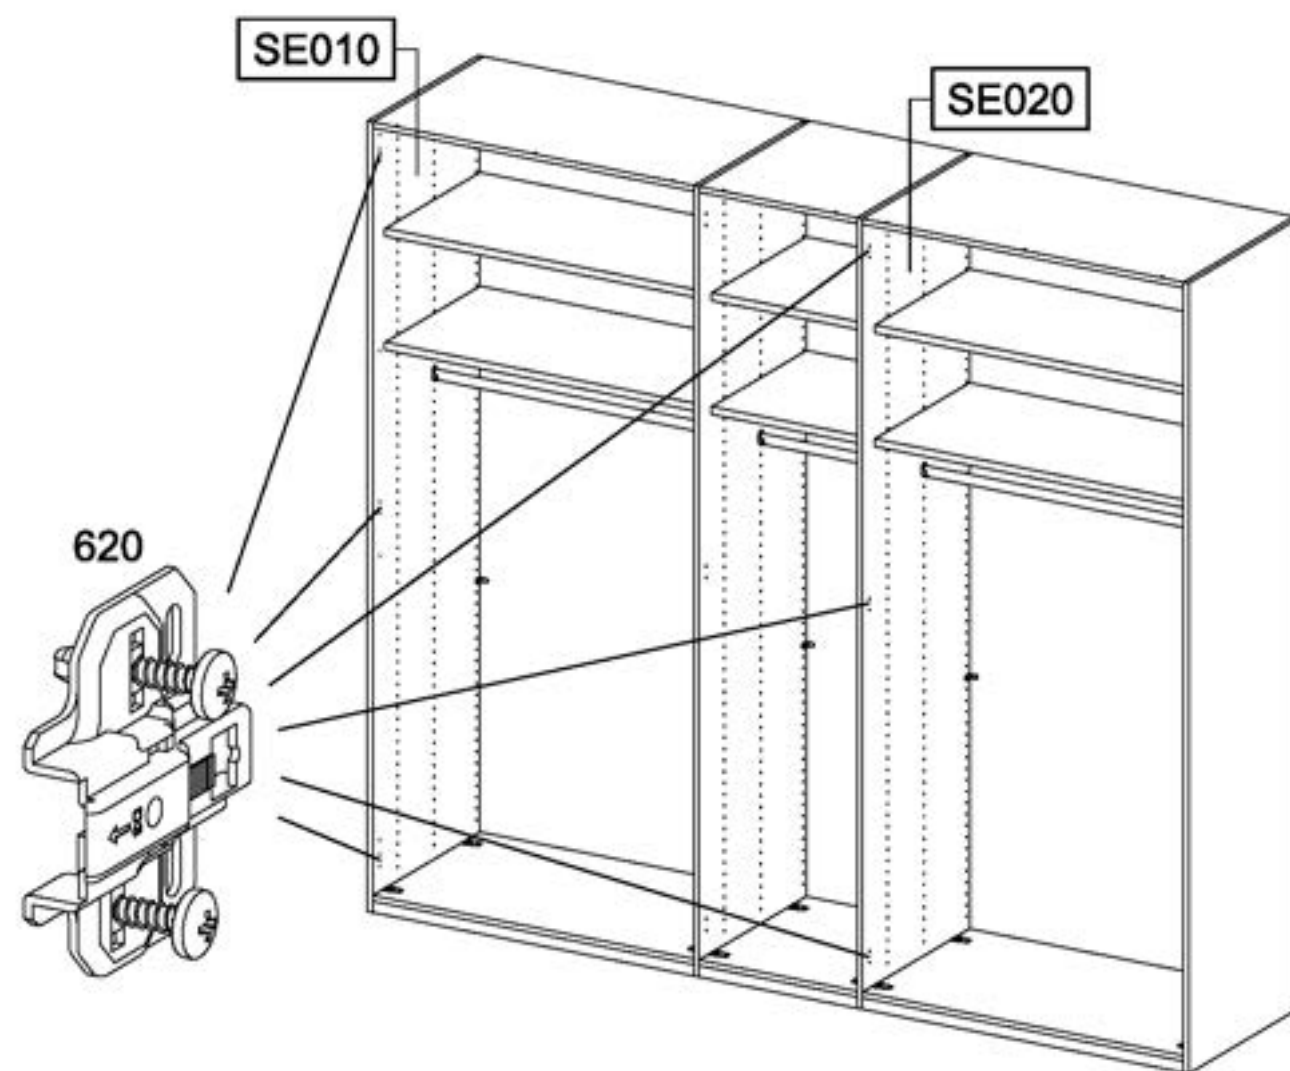




21

9x 620

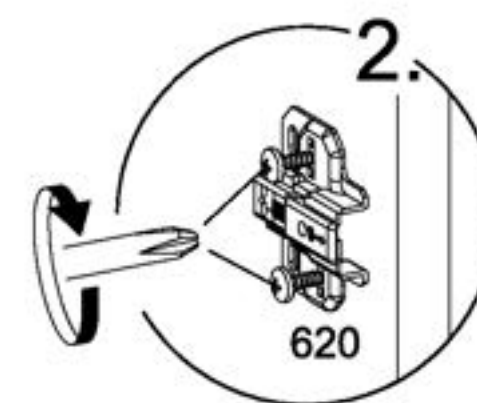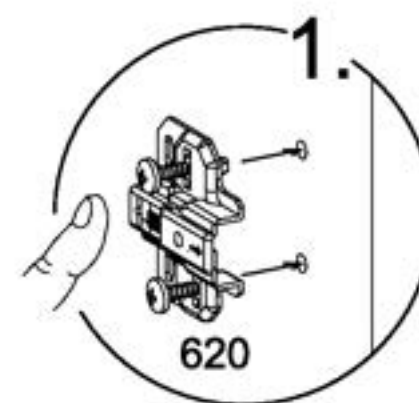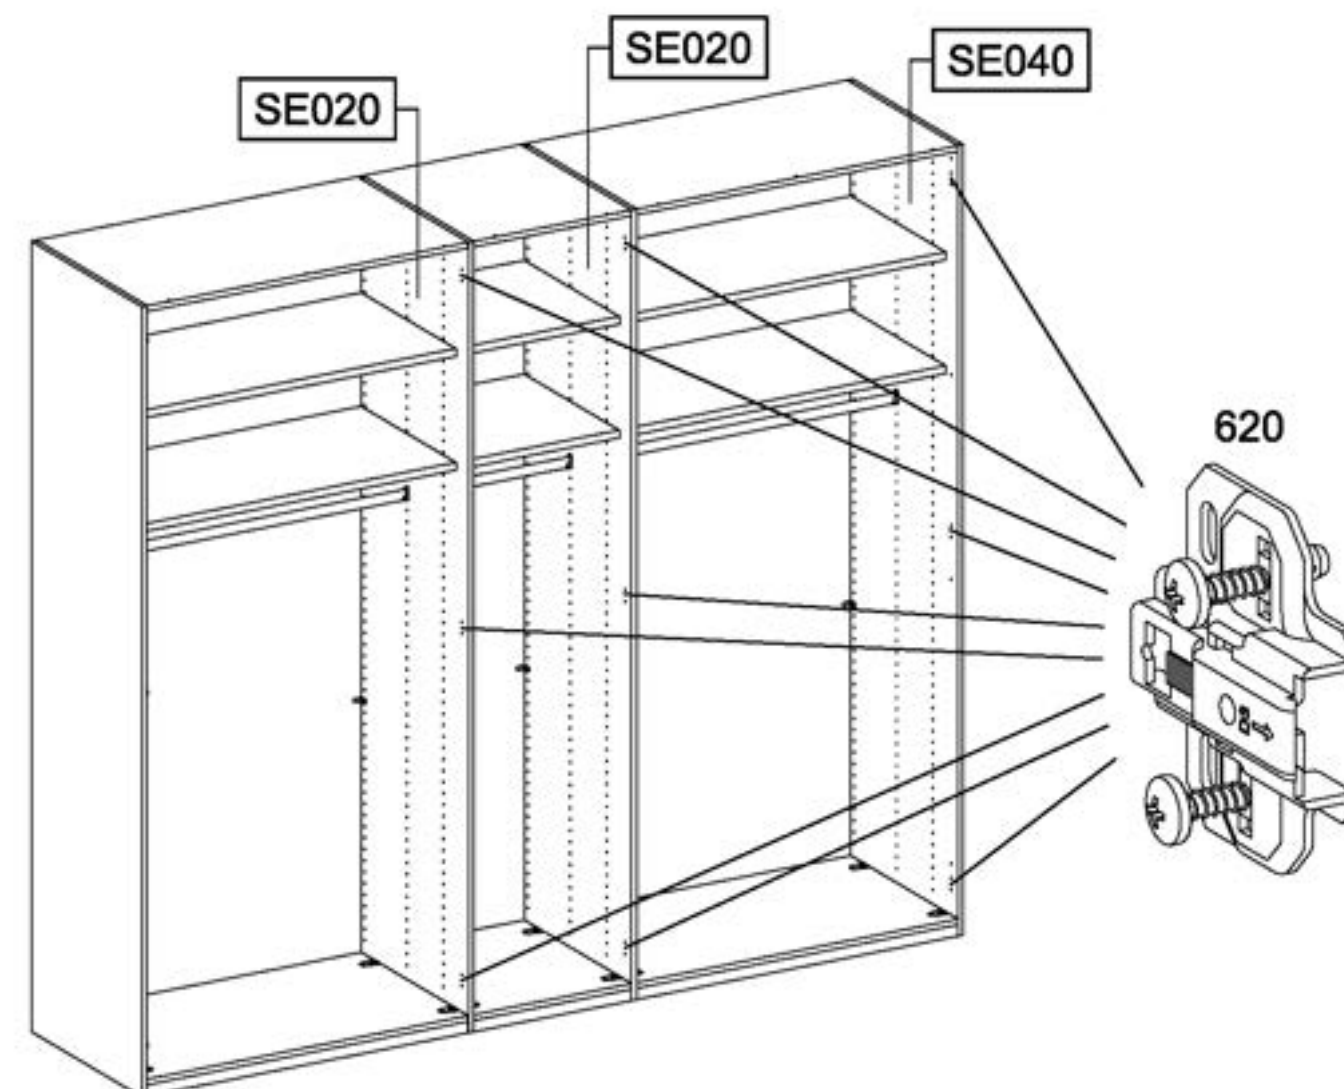

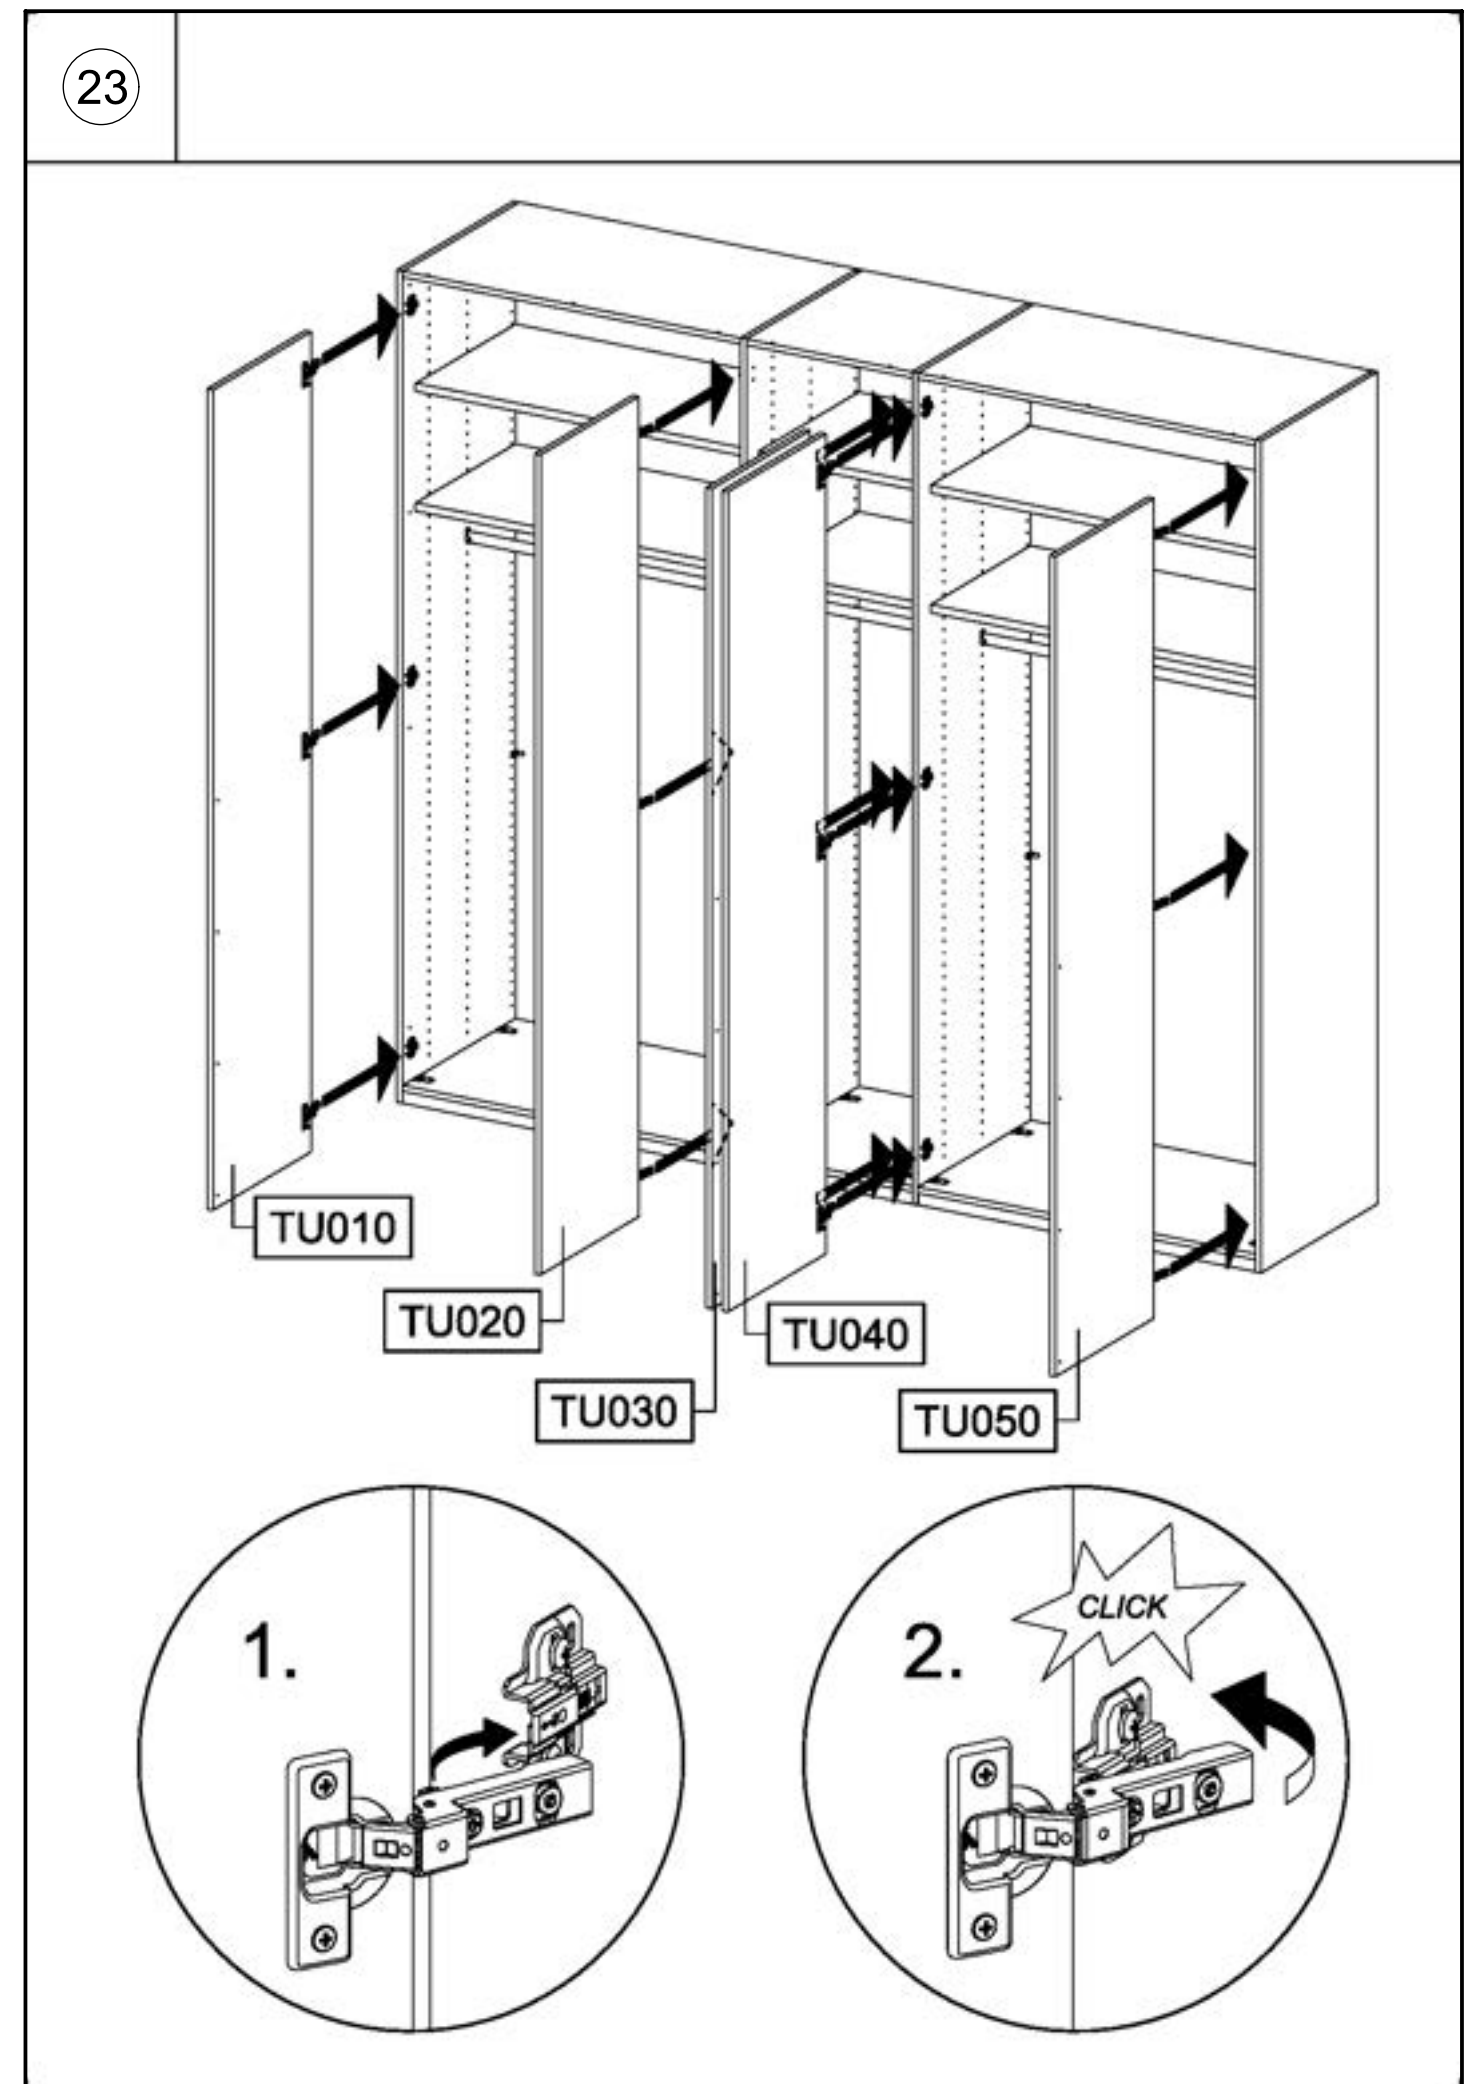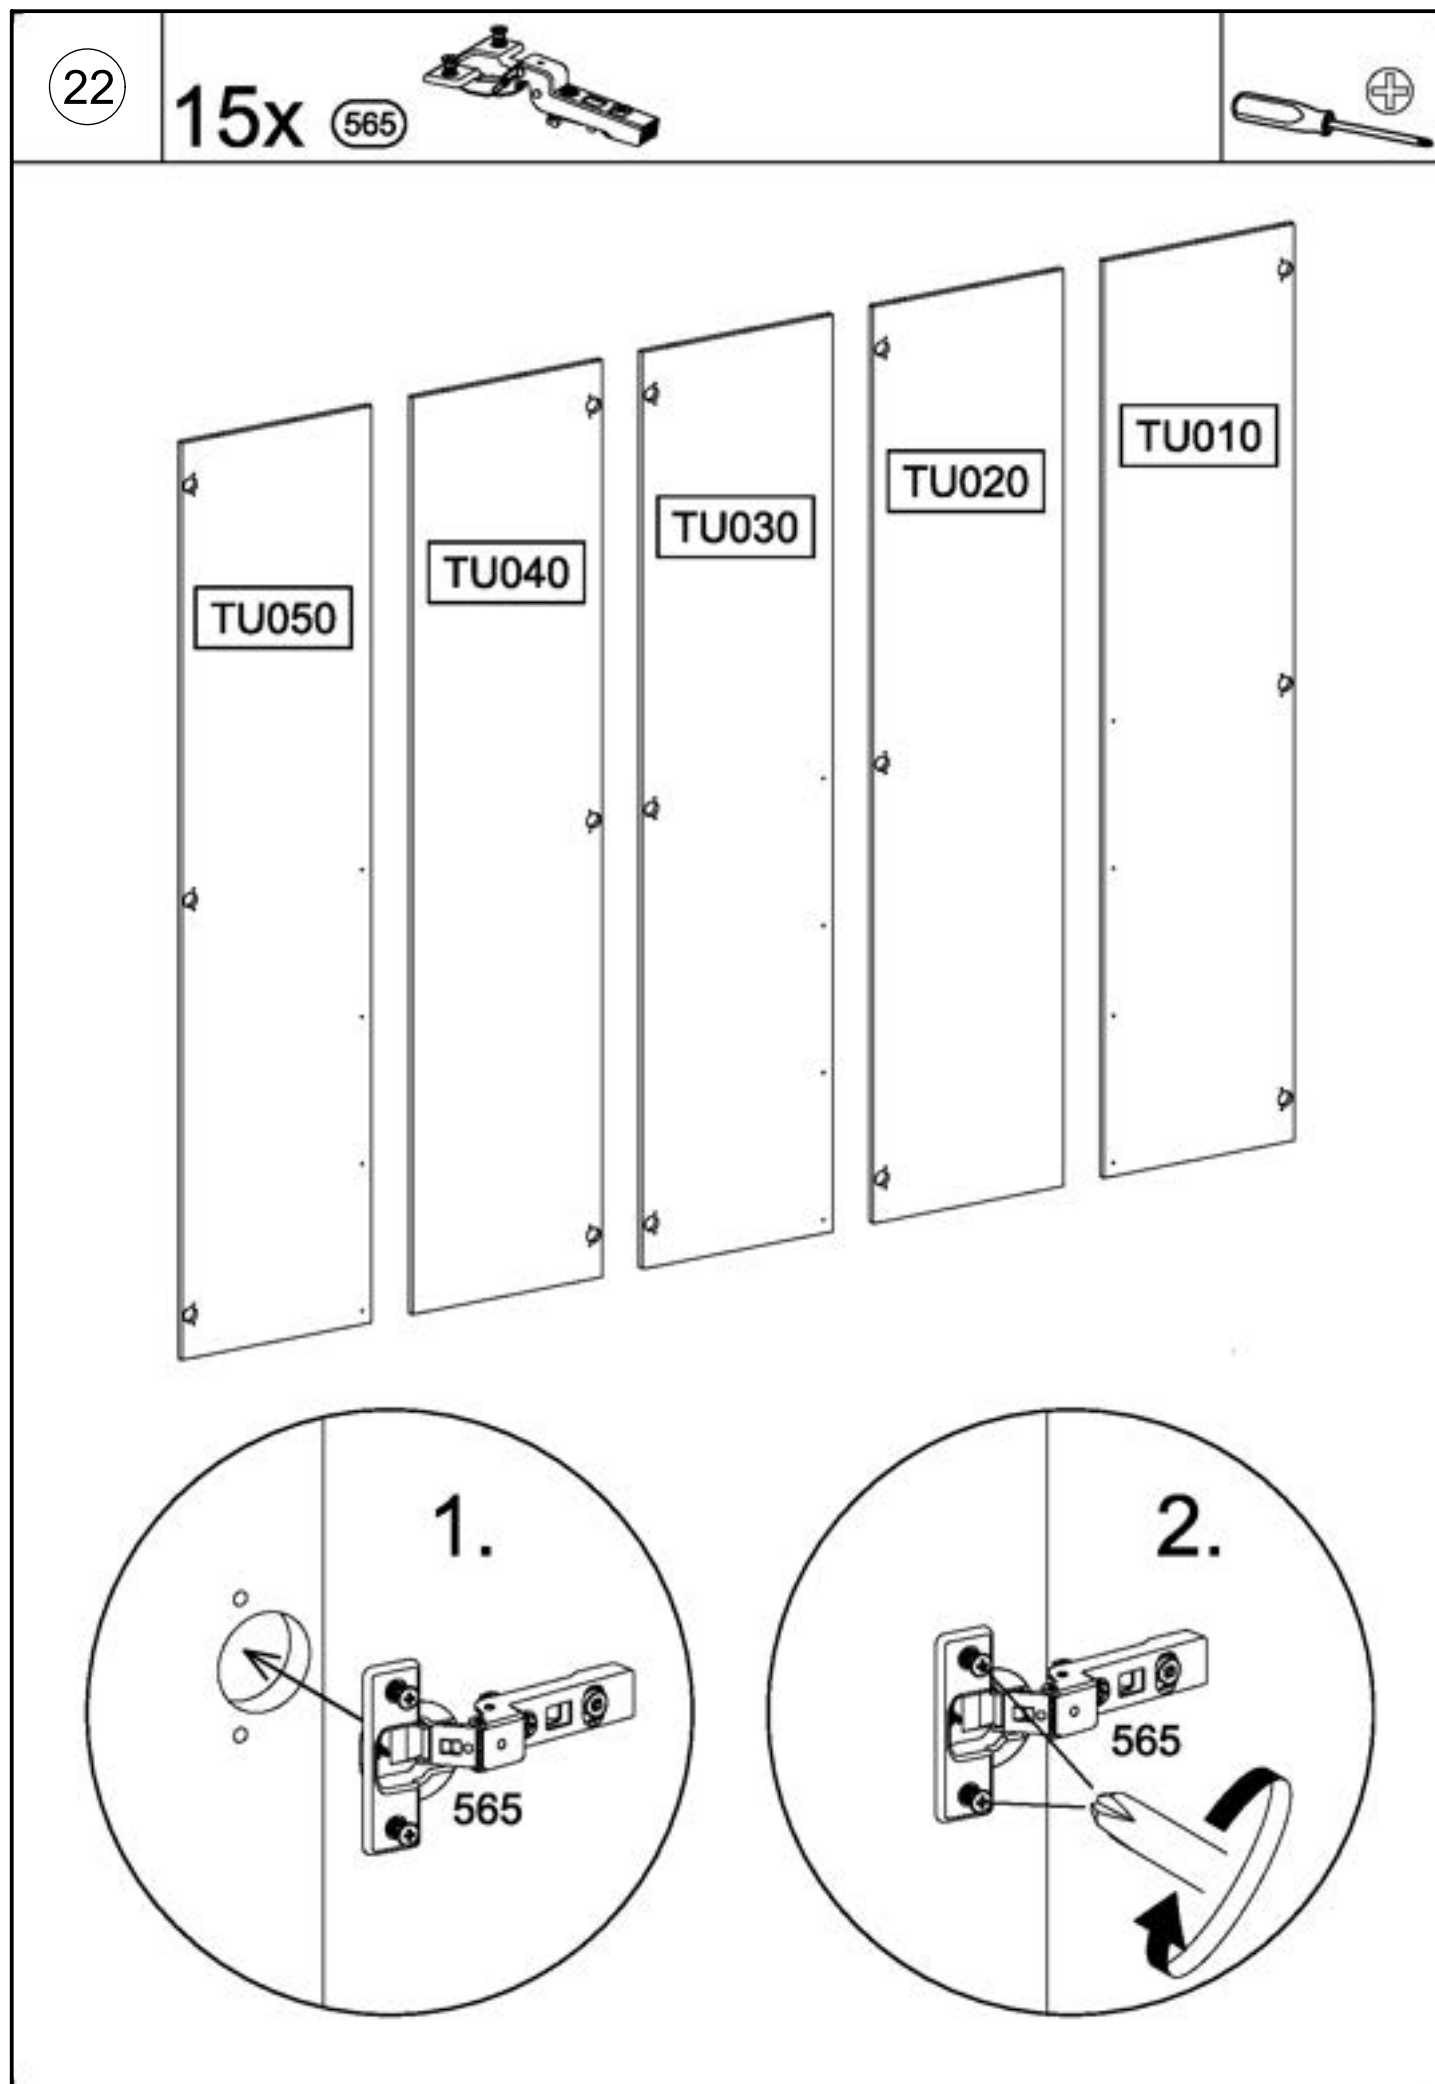

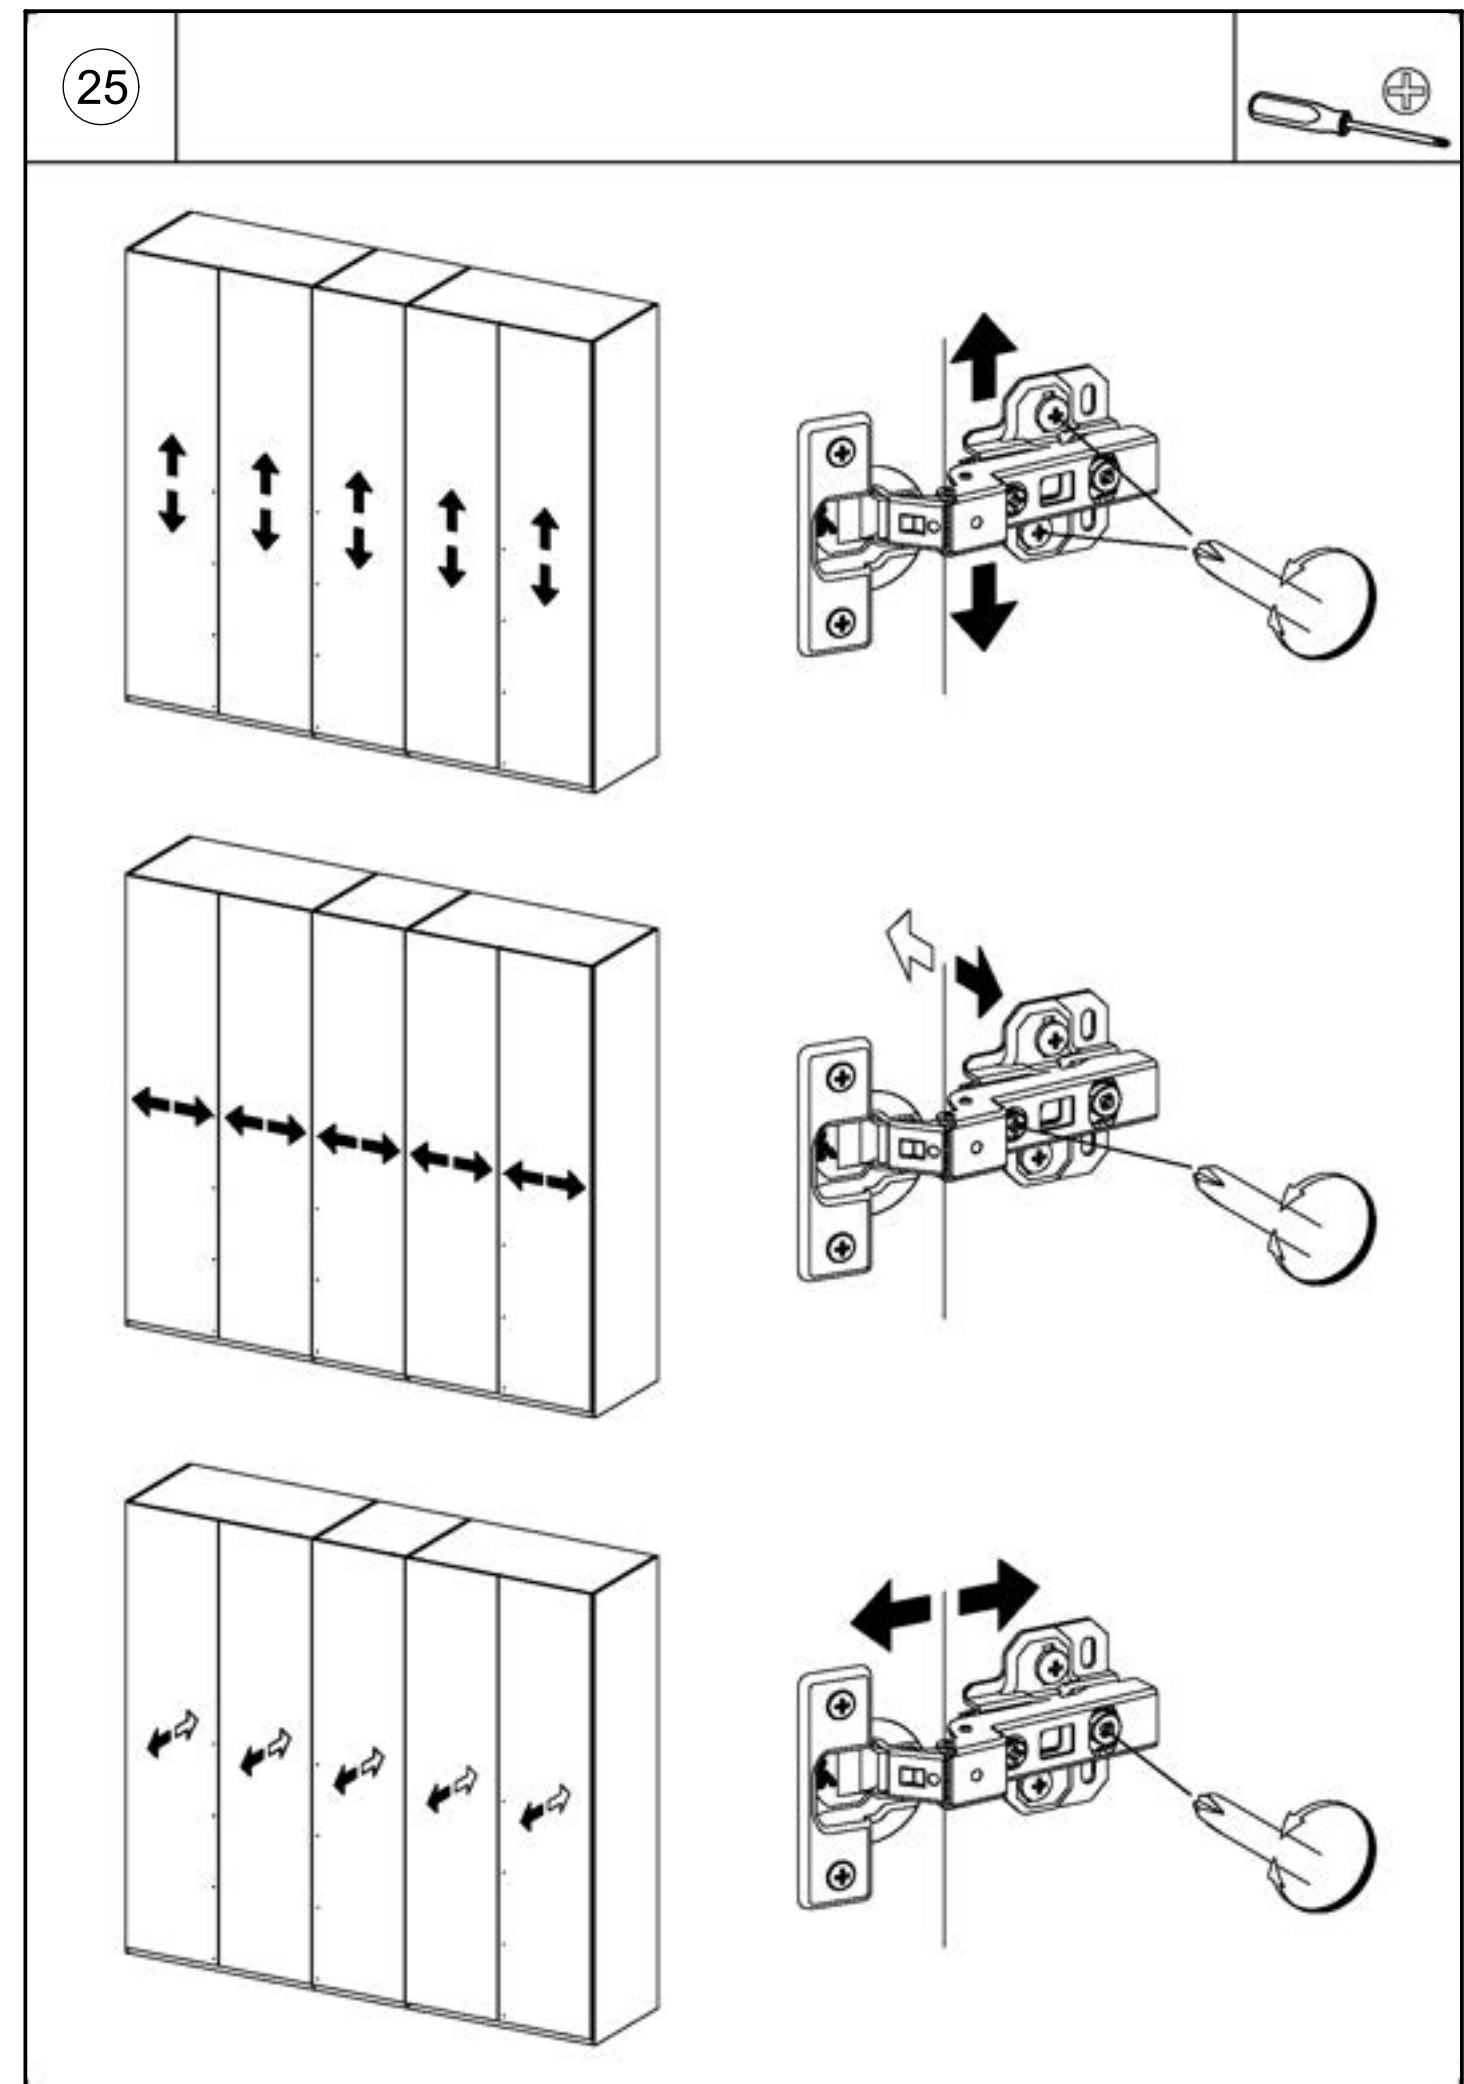
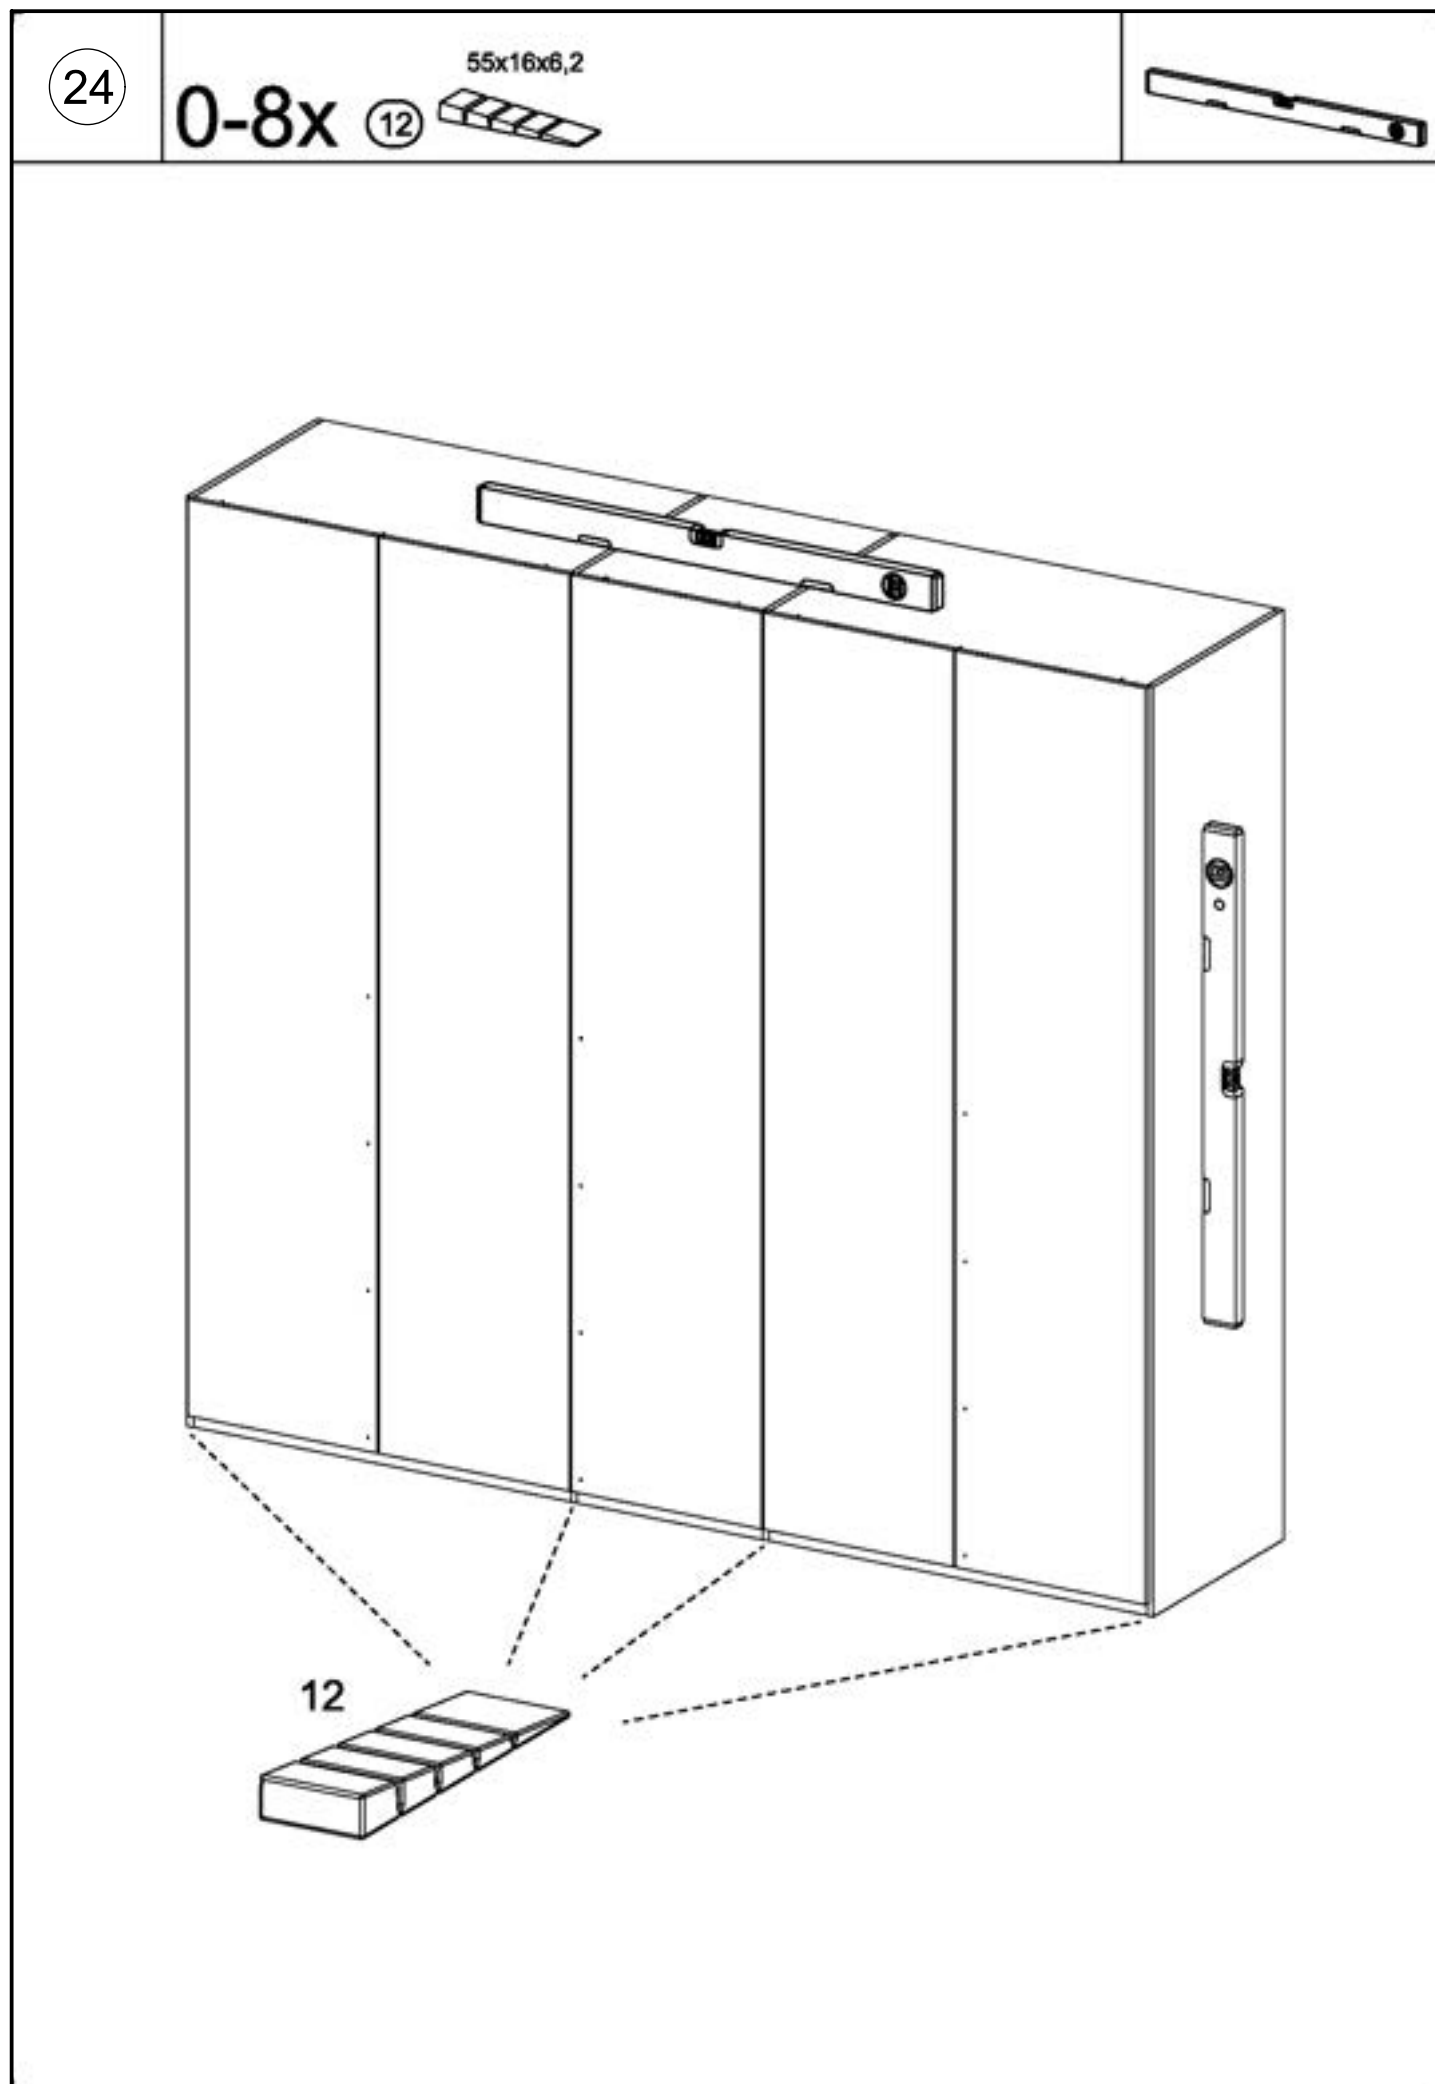


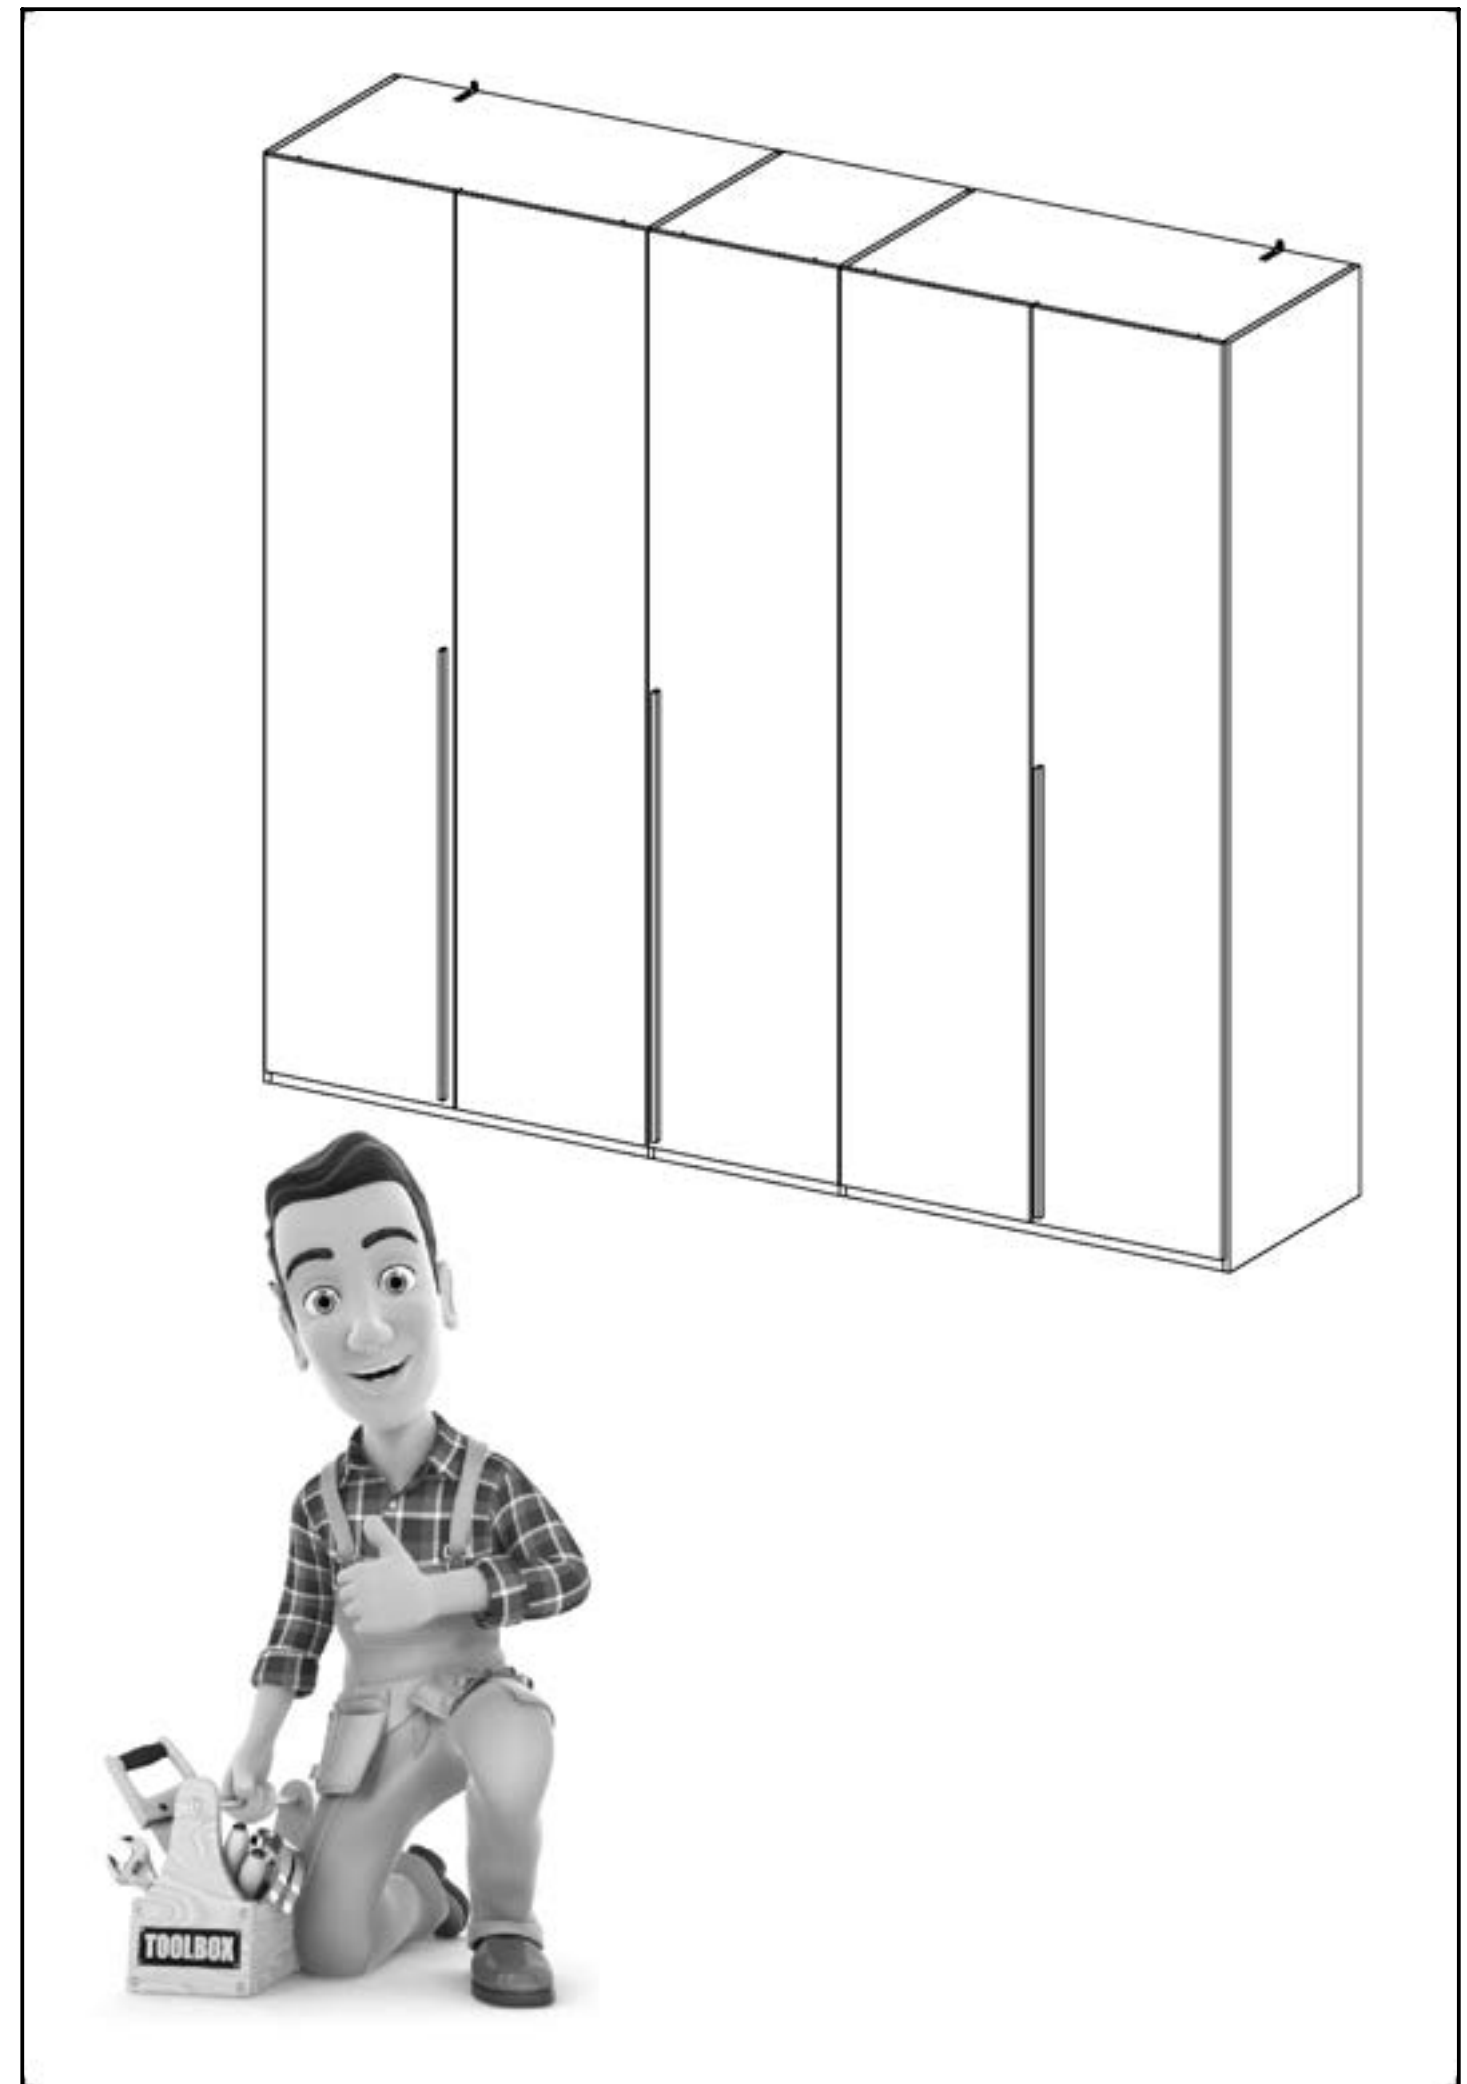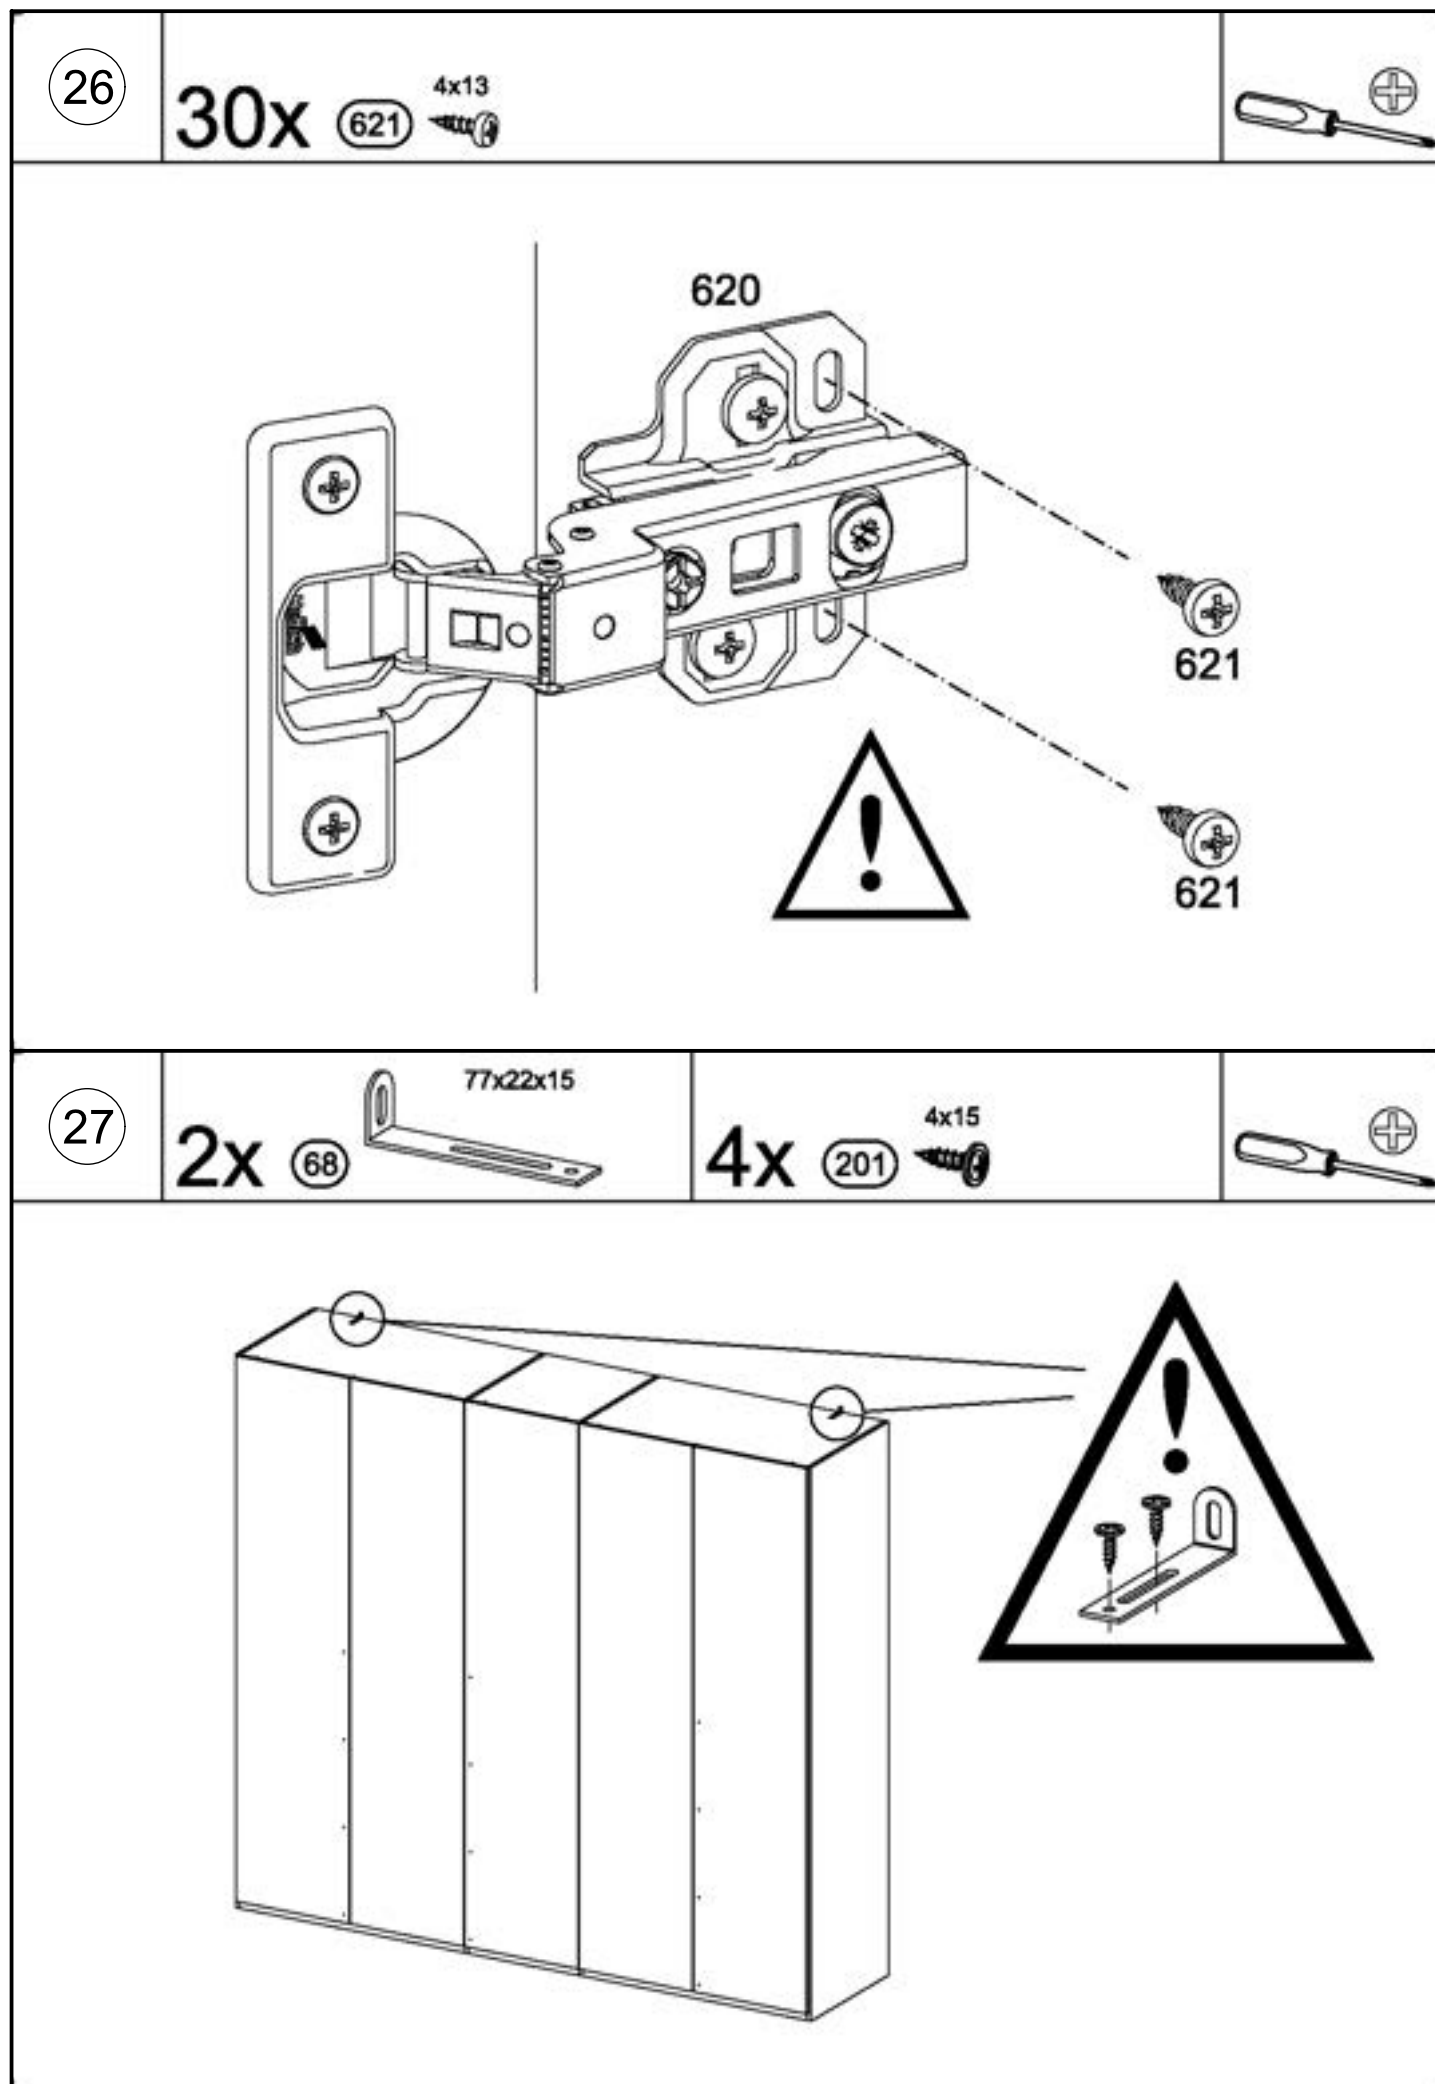


1.

ME190_02


rauch

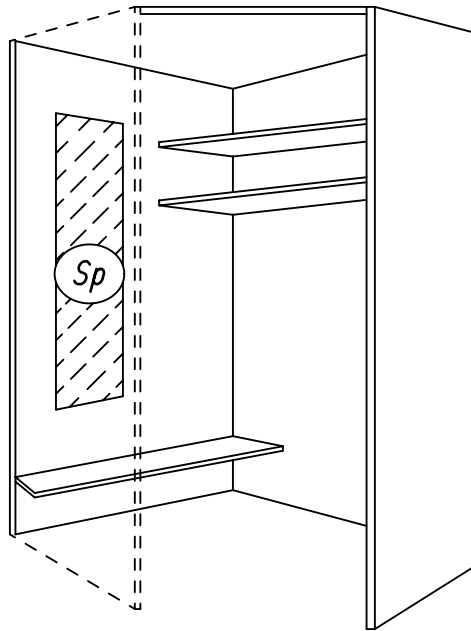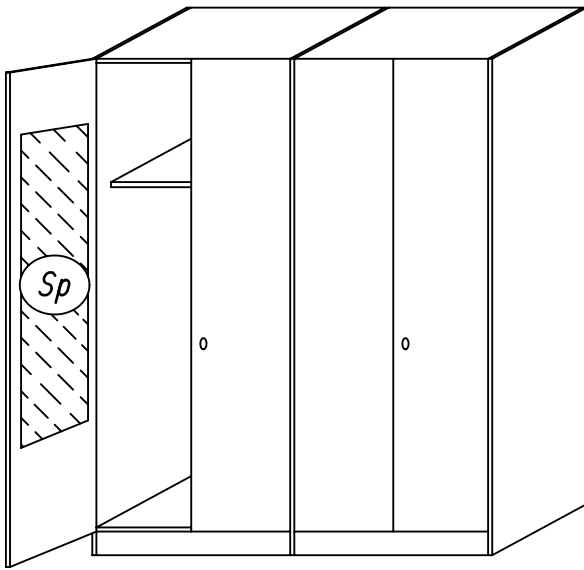

637




492




3x15


1

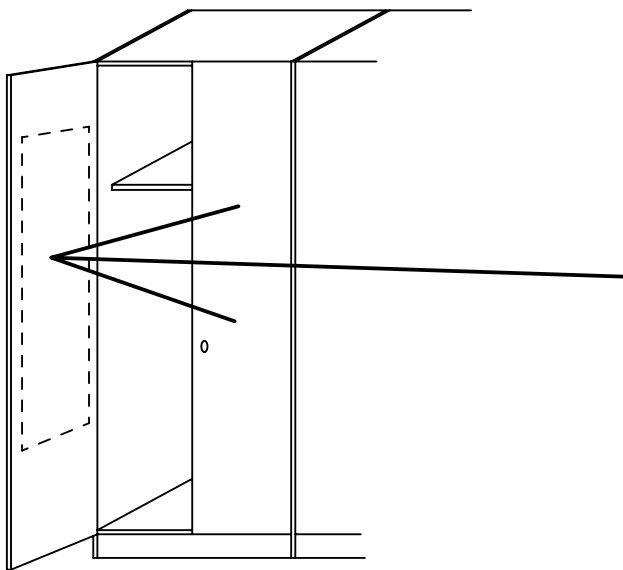



2

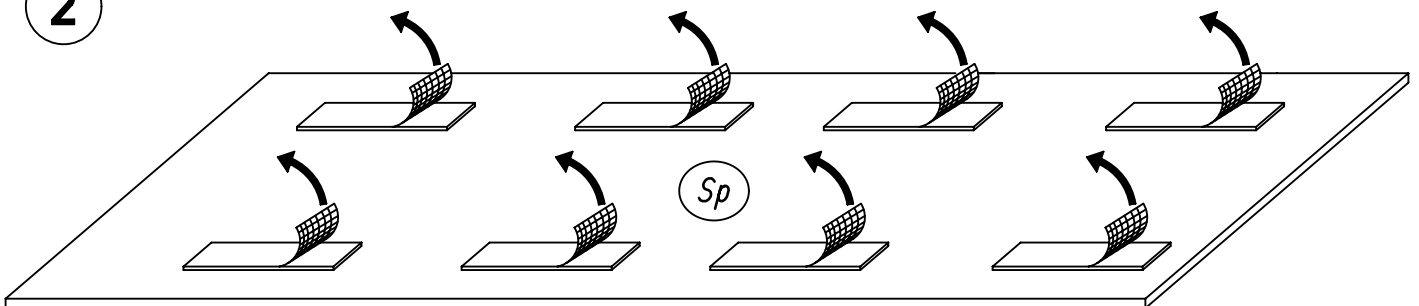

3

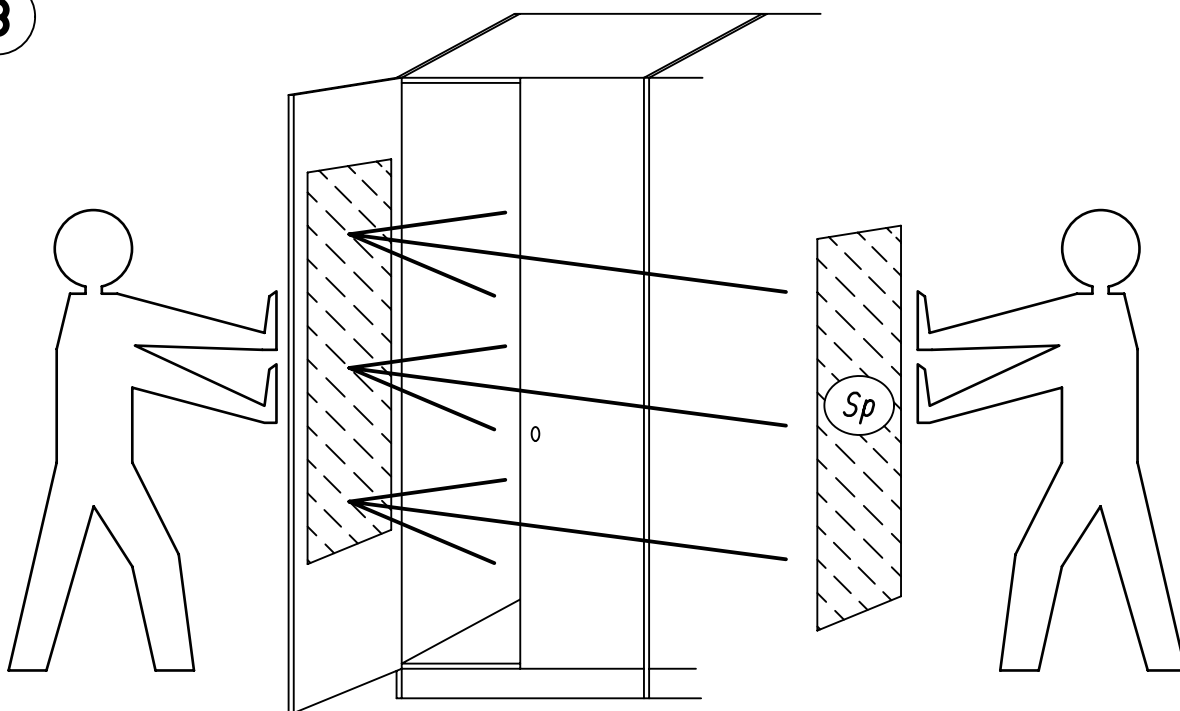

4

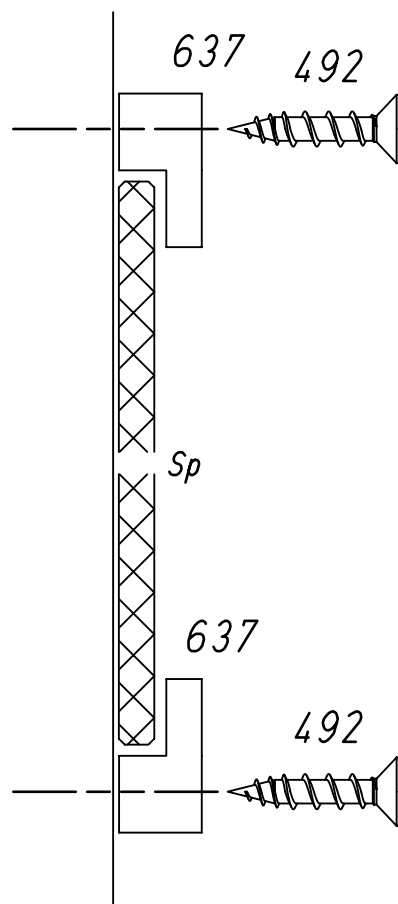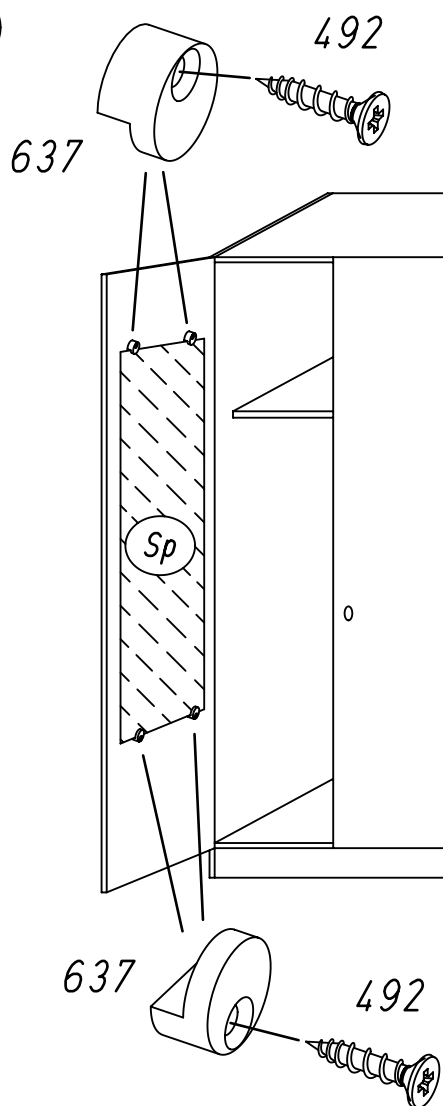

1.

MZ081_01

rauch

Kn

1

1.

Typ I

Typ II

2.



4x

70mm


70mm

2.



2

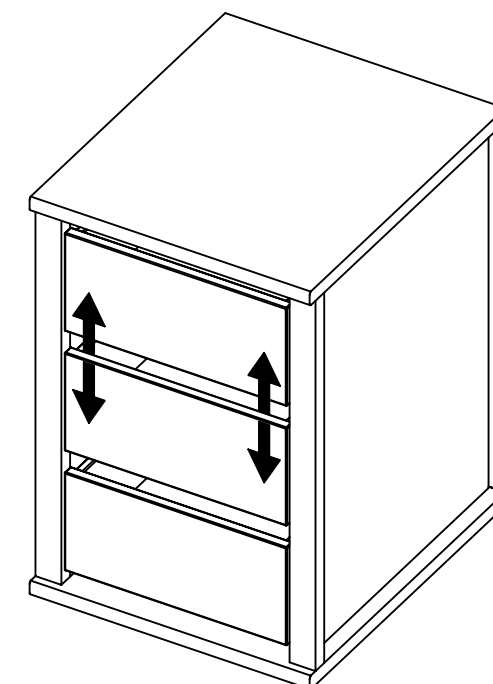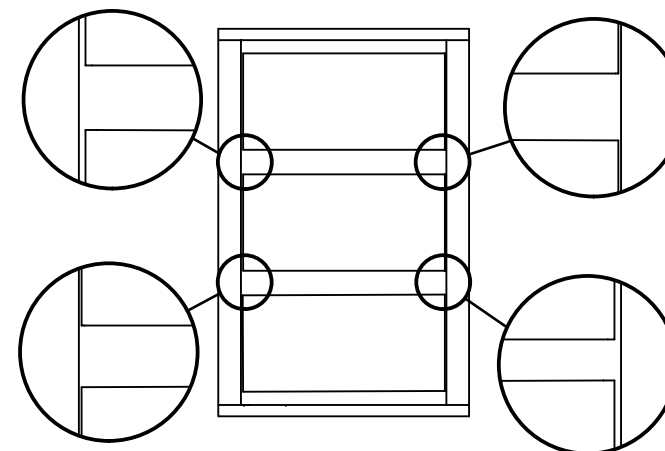

1.

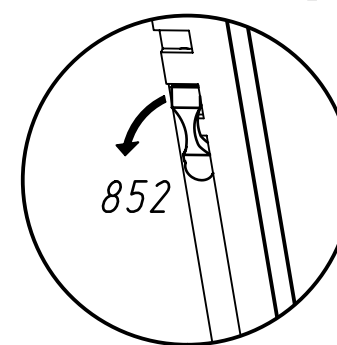


852

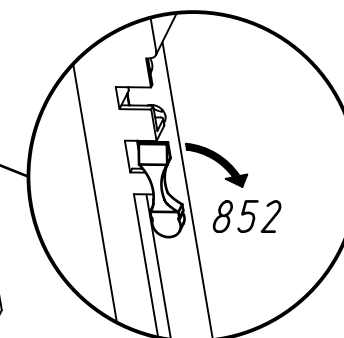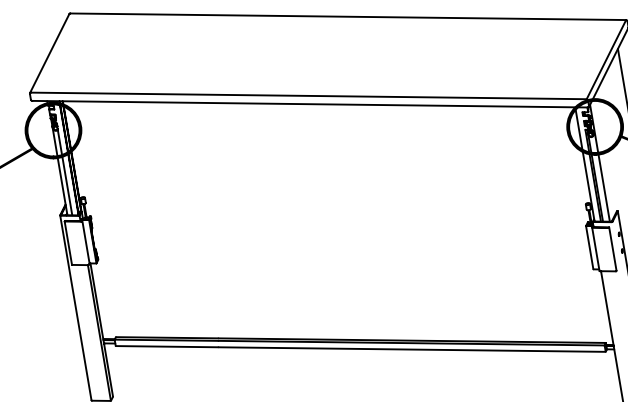


852


2.

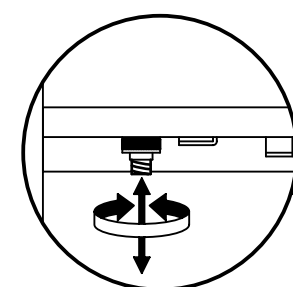



Sk

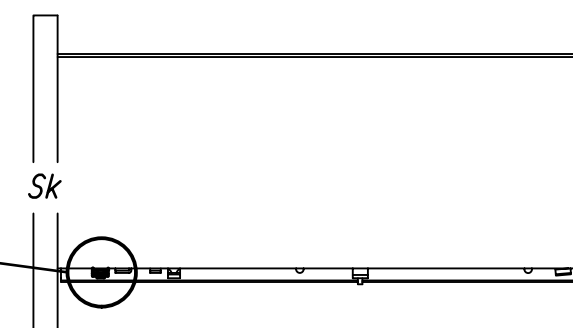

3.



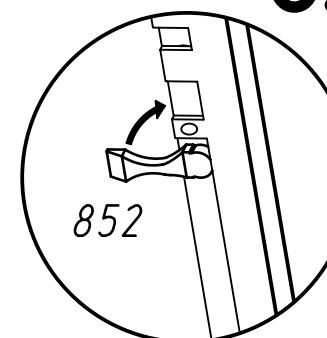


852

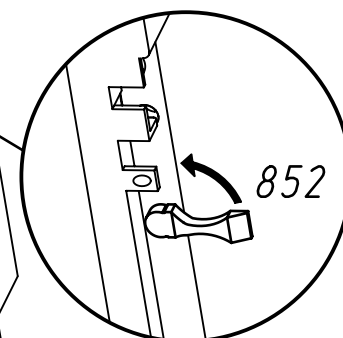
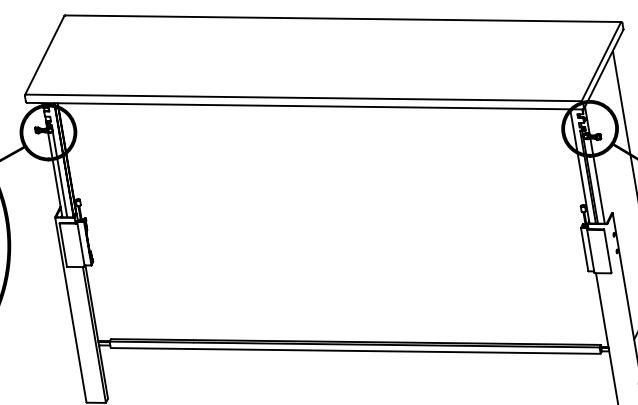


852



1089

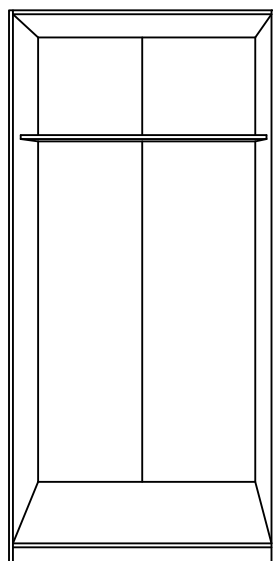



1

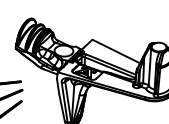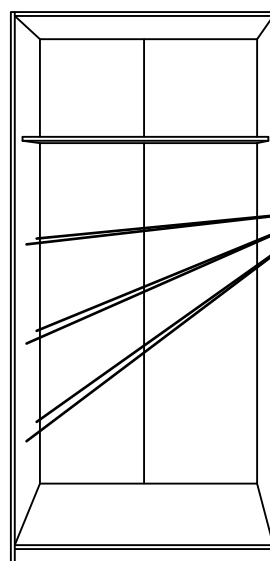



1089

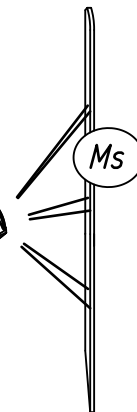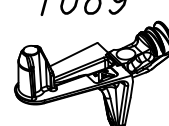

2

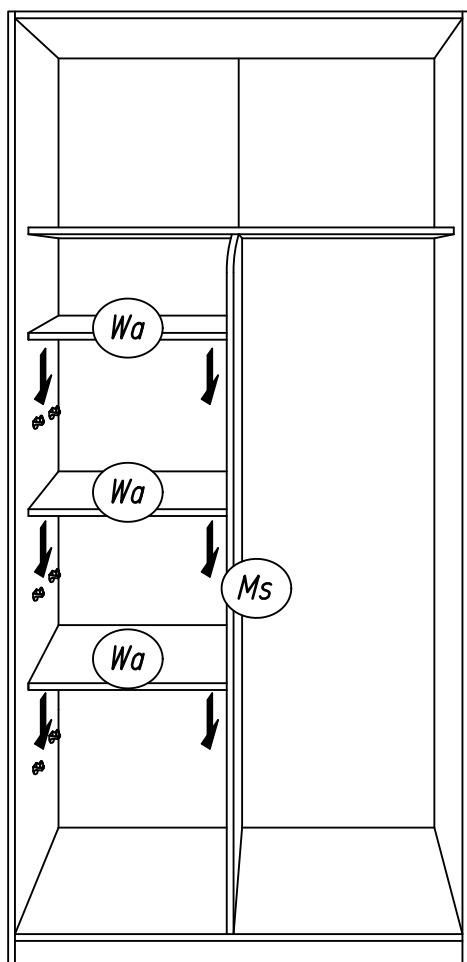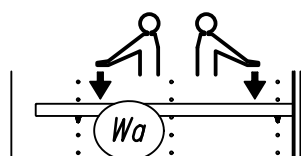


3

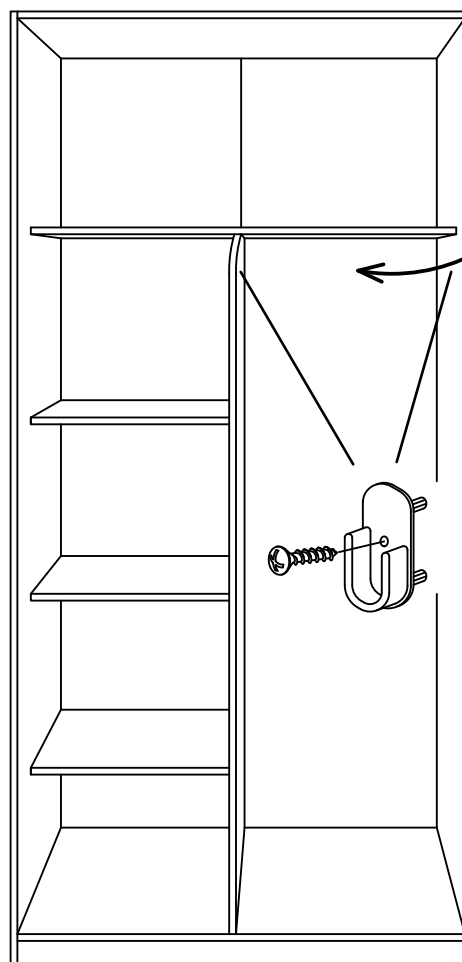


E420

Tlumič závěsu/Tlmič pántov


rauch

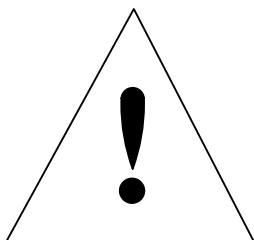

Nevhodné pro :
Nevhodné pre :

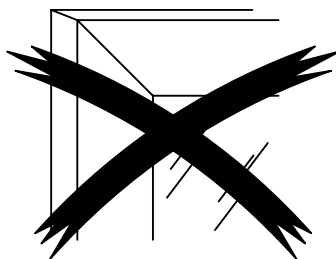


Zarámované
dveře/dvere

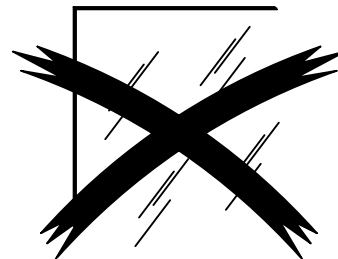


Celoskleněné dveře
Celosklenené dveře



1.

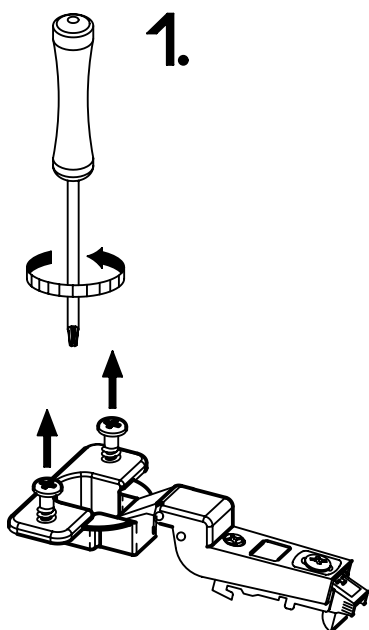


2.

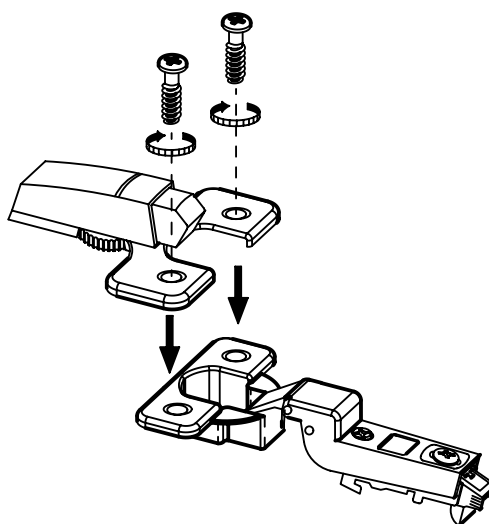



Před připevněním závěsu ke dveřím musí být na závěsu namontován Tlumič závěsu, viz obrázky 1 a 2.

Pred pripevnením pántov ku dverám musí byť na pántoch namontovaný Tlmič pántov, pozri obrázky 1 a 2.

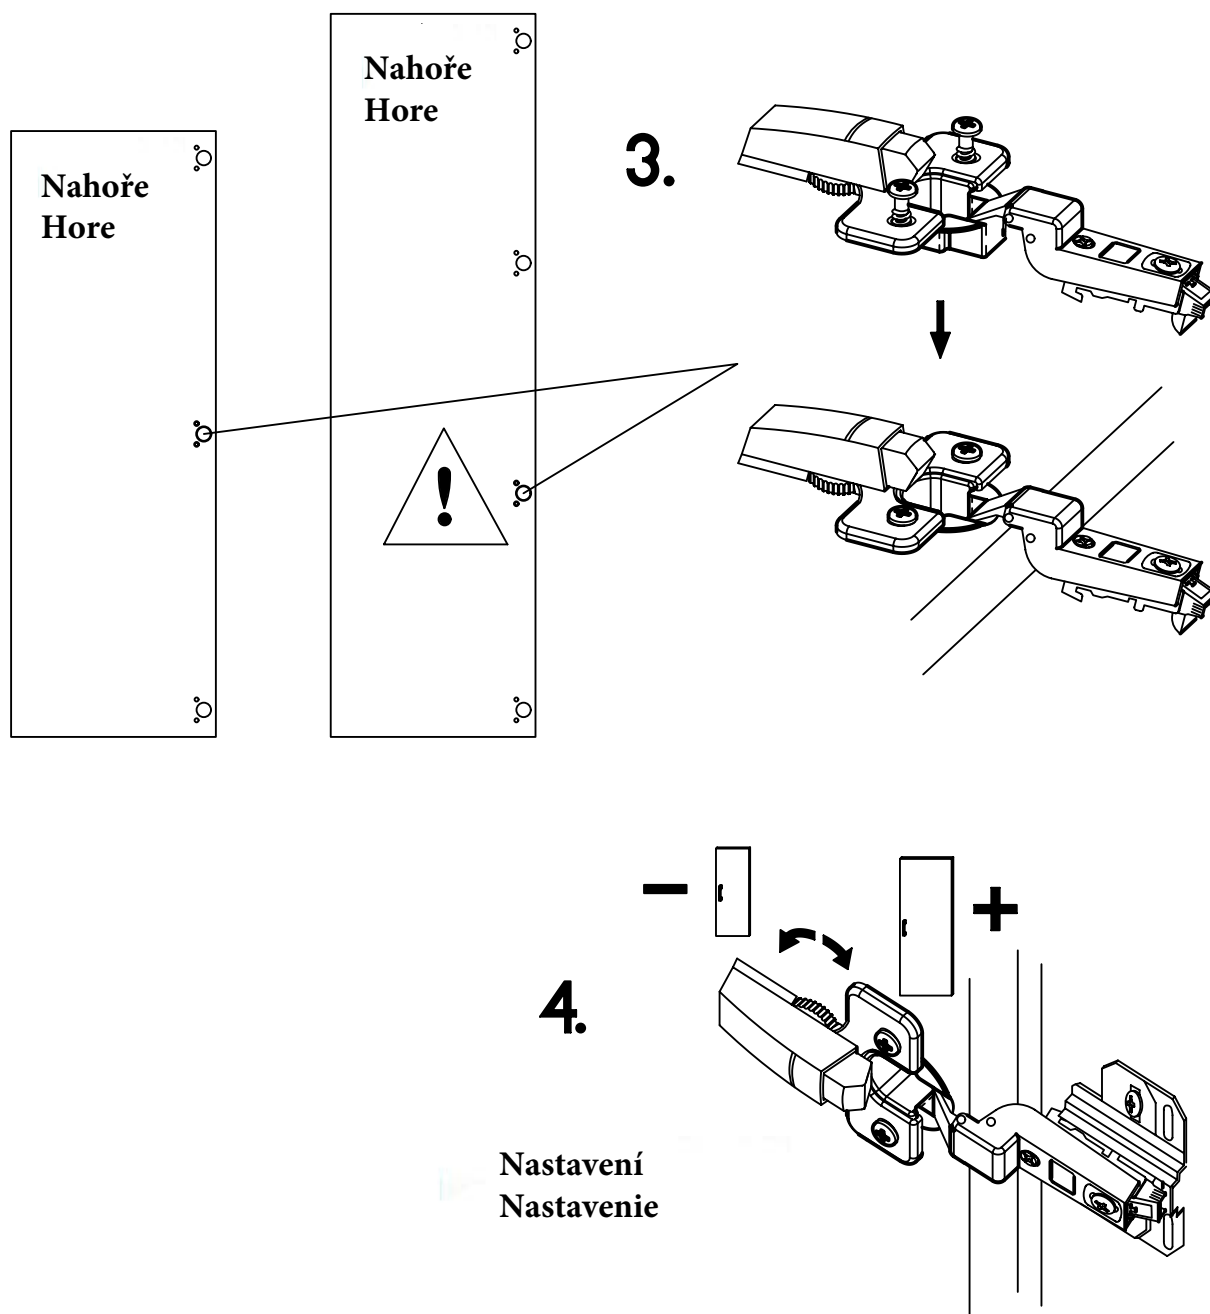

Demontáž

Montáž se provádí v opačném pořadí
Montáž sa vykonáva v opačnom poradí