


13



14

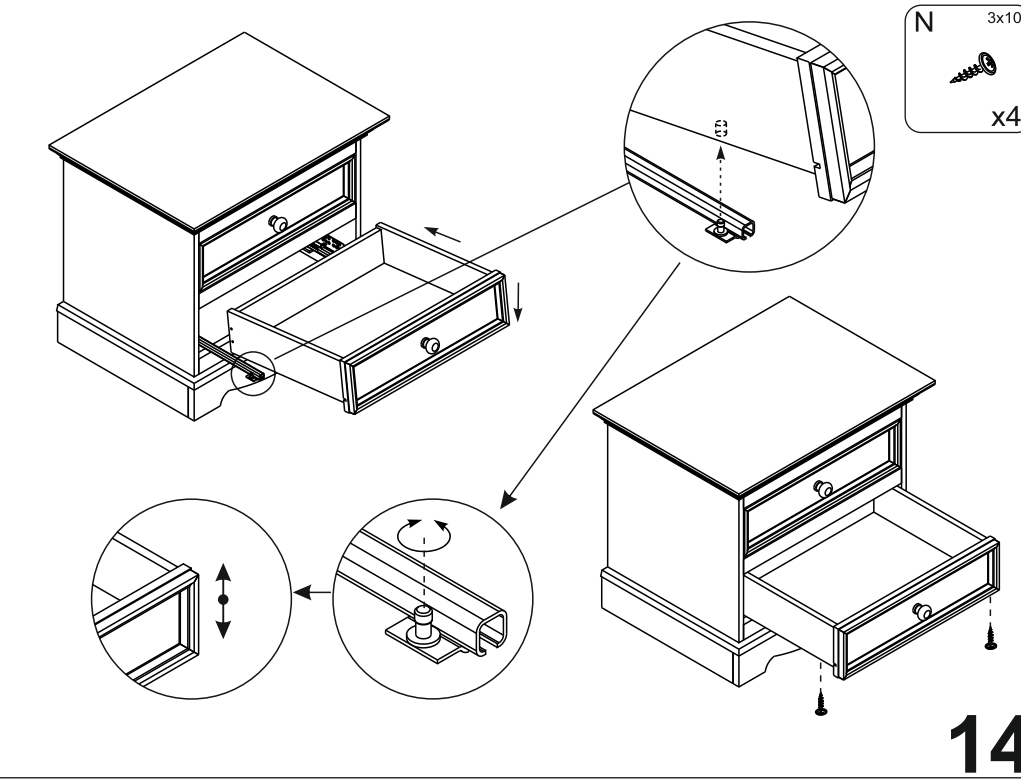


BELLUNO

SZAFKA NOCNA


PL013




- (D) Montageanleitung
- (GB) Assembly instructions
- (FR) Notice de montage
- (IT) Istruzioni di montaggio
- (NL) Handleiding voor de montage
- (PL) Instrukcja montażu
- (CZ) Montážní návod
- (SK) Návod na montáž
- (HU) Szerelési útmutató
- (RO) Instrucțiuni de montaj
- (TR) Montaj talimatı
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

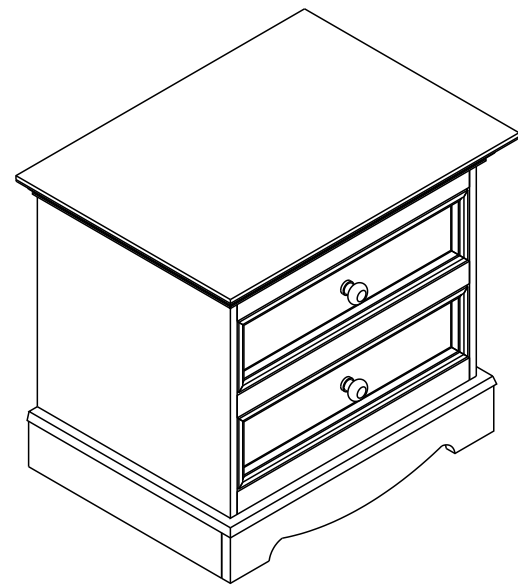

31.05.2016.

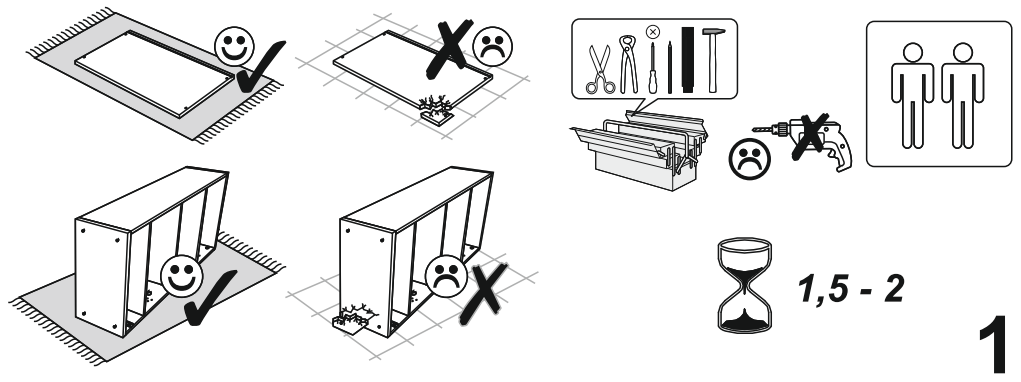

1

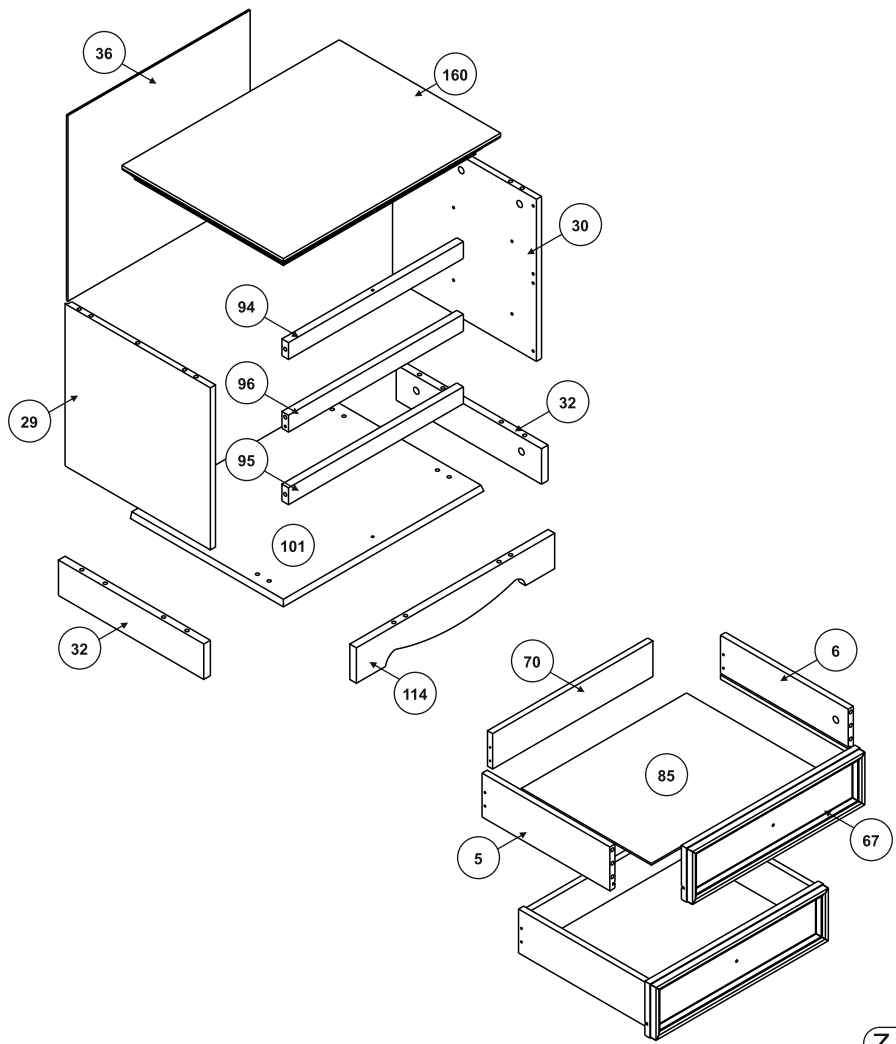


A 8x35 x14	AB 5x30 x10	B 34mm x22	C 15x10 x22	YC M4x22 x2	YB 1x20 x50	G L=350 x2	H 6x10,5 x8
M 38x27x21 x2	O x2	N 3x10 x4	NA 3,5x16 x4	NB 3,5x35 x9	NC 3,5x30 x1	W 4mm x1	YA 7x50 x6

Z 14mm x5




2


NB 3,5x35 x1	M 38x27x21 x2	NA 3,5x16 x4	Z 14mm x5
YB 1x20 x40			

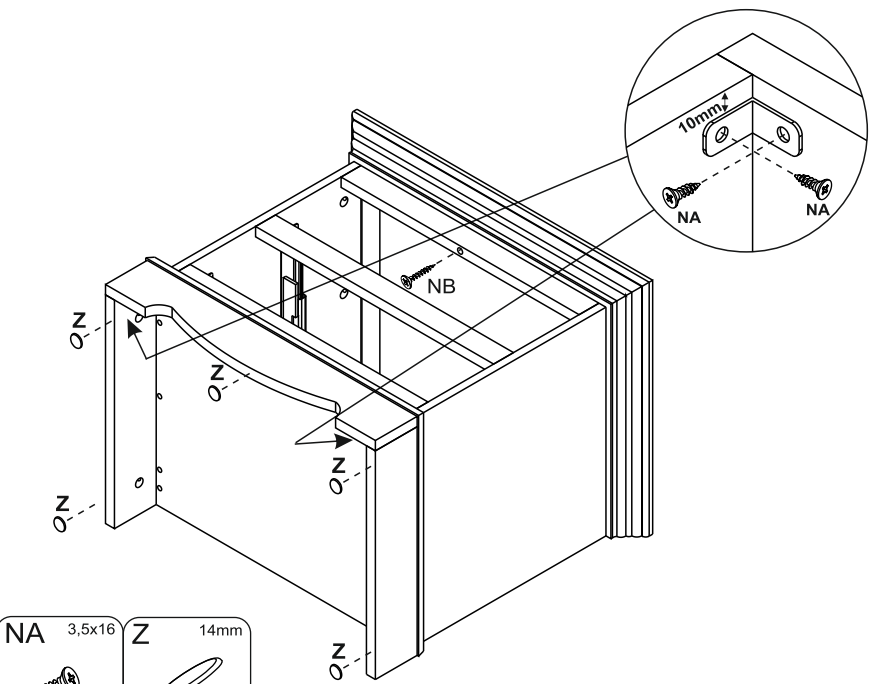


11
12

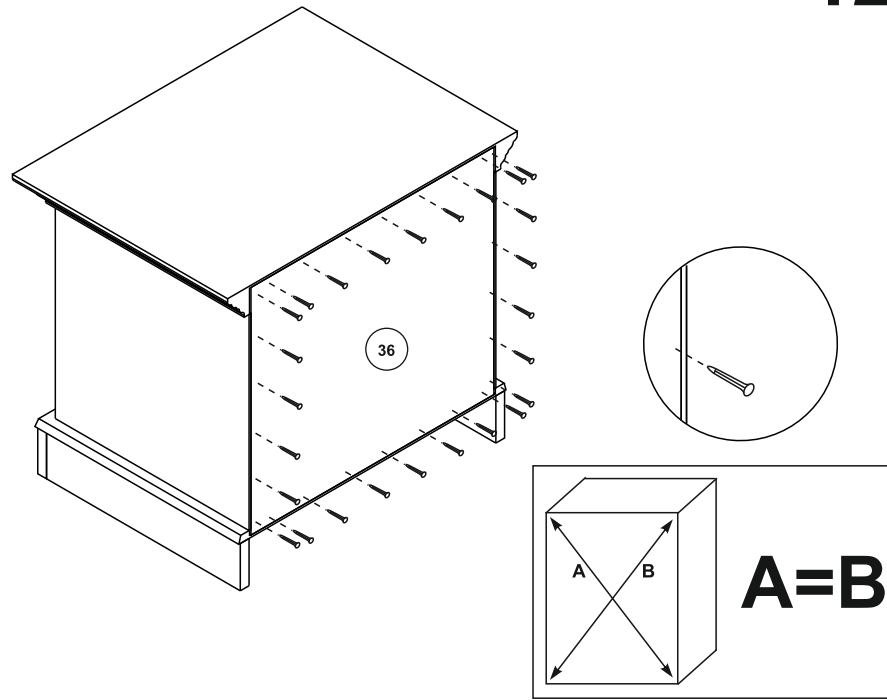


A=B

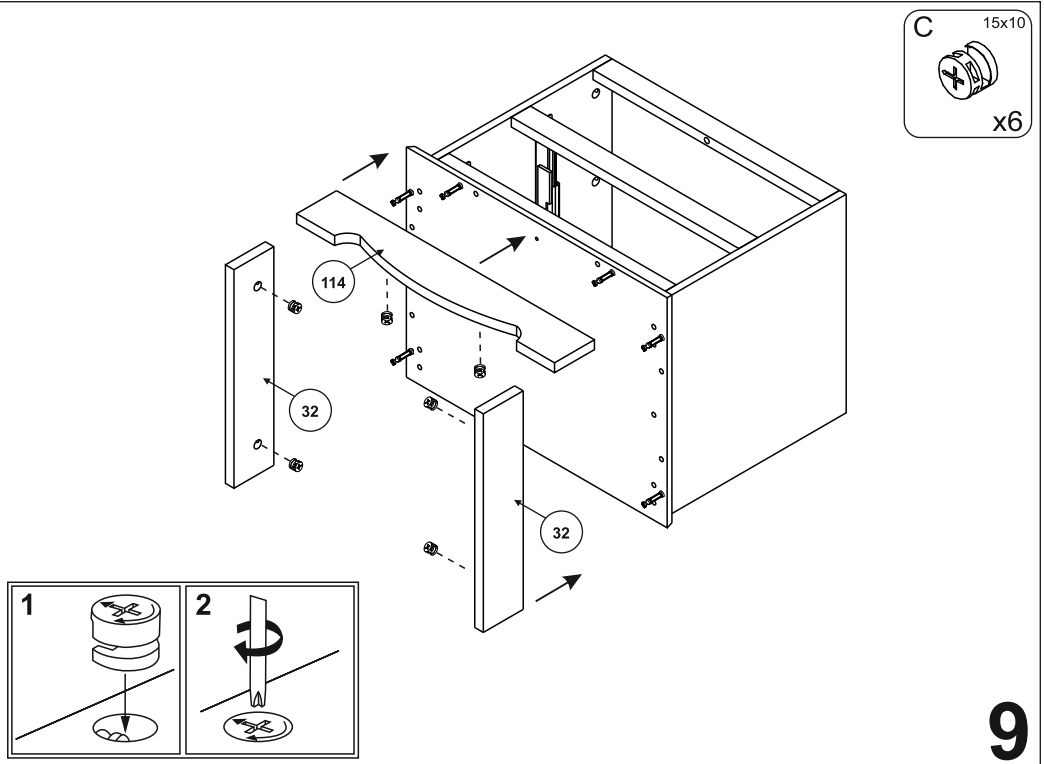


C 15x10
x6

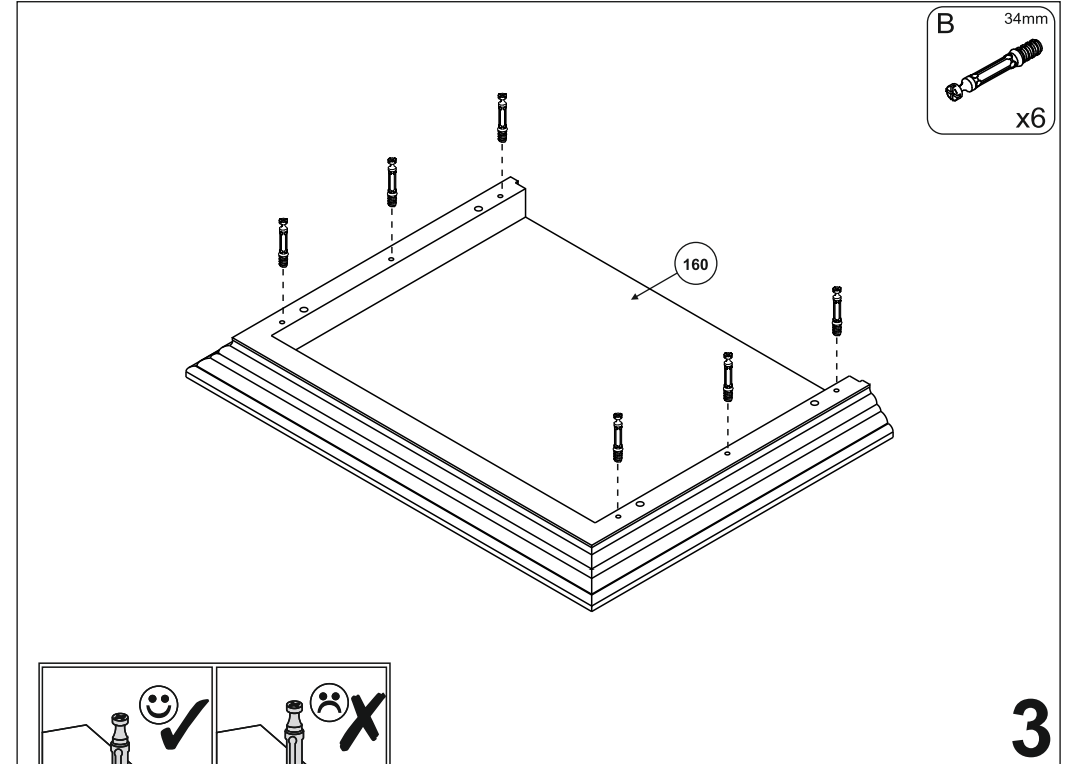

B 34mm
x6

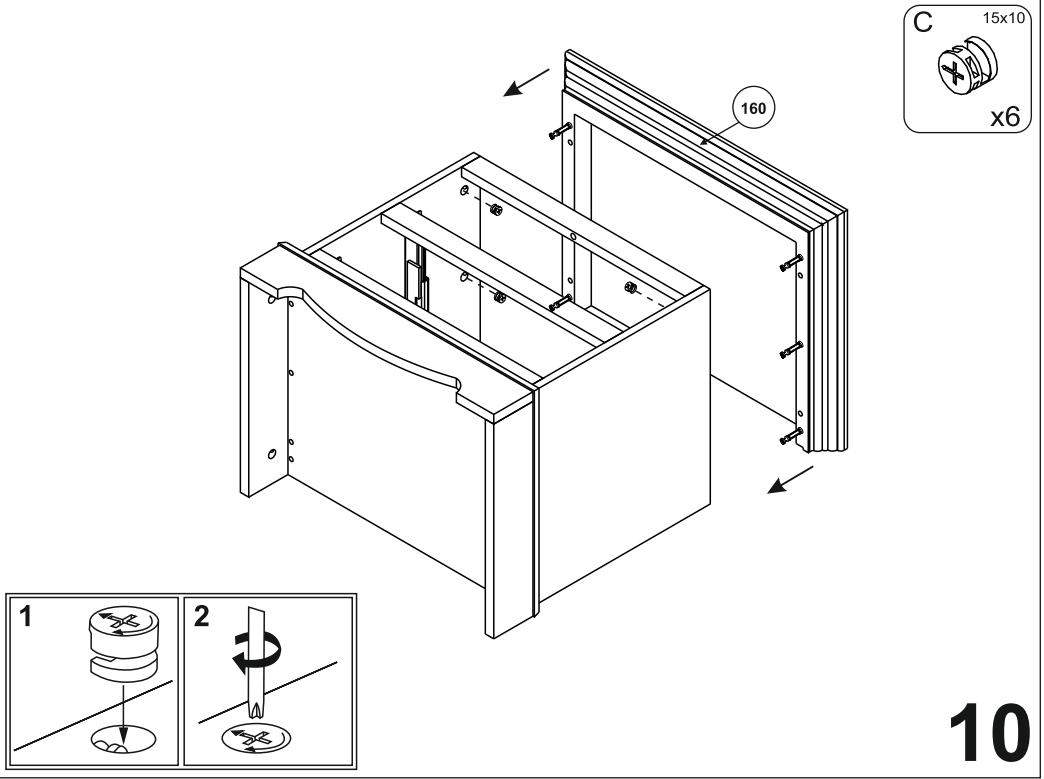


C 15x10
x6

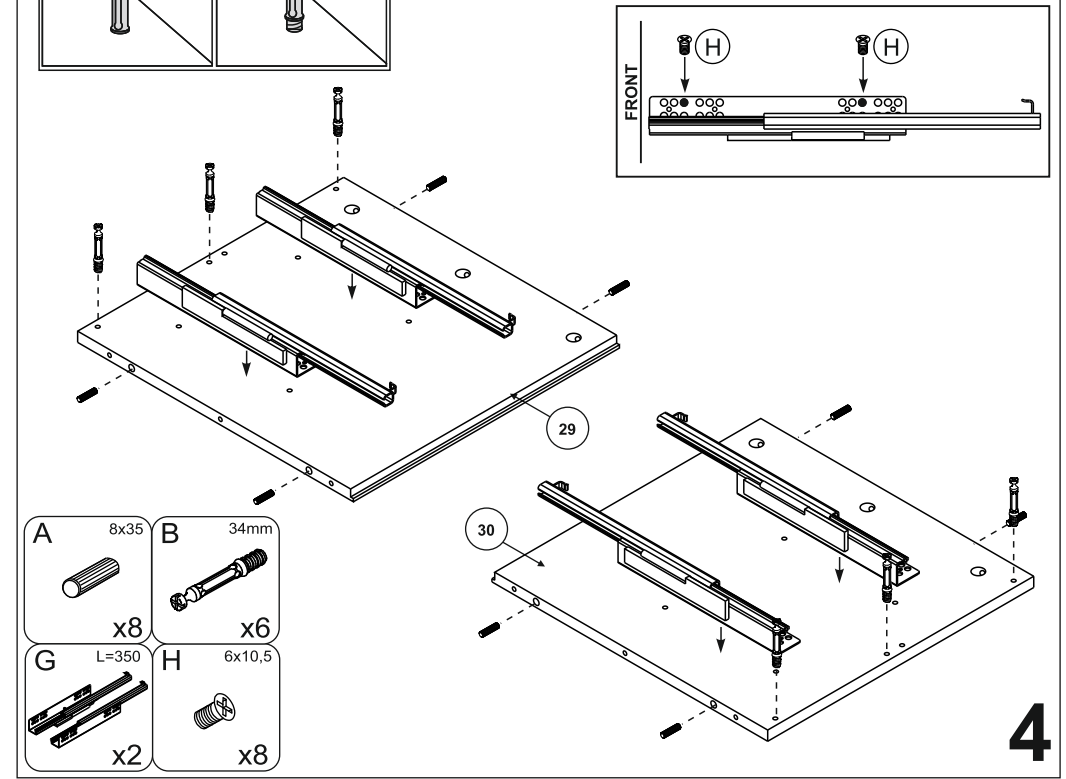


A 8x35 x8
B 34mm x6
G L=350 x2
H 6x10,5 x8

- AB 5x30 x2
- A 8x35 x6


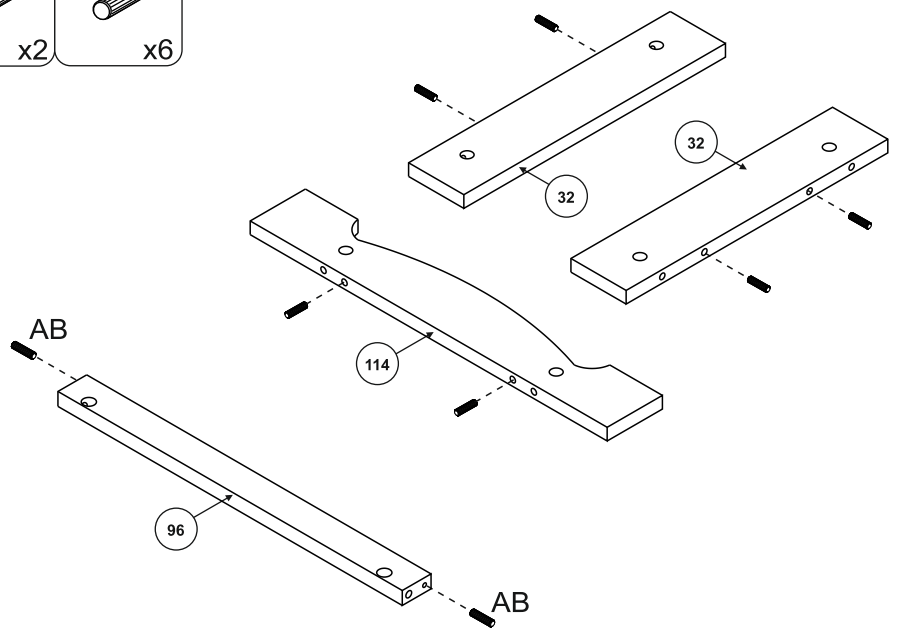


5

- C 15x10 x6

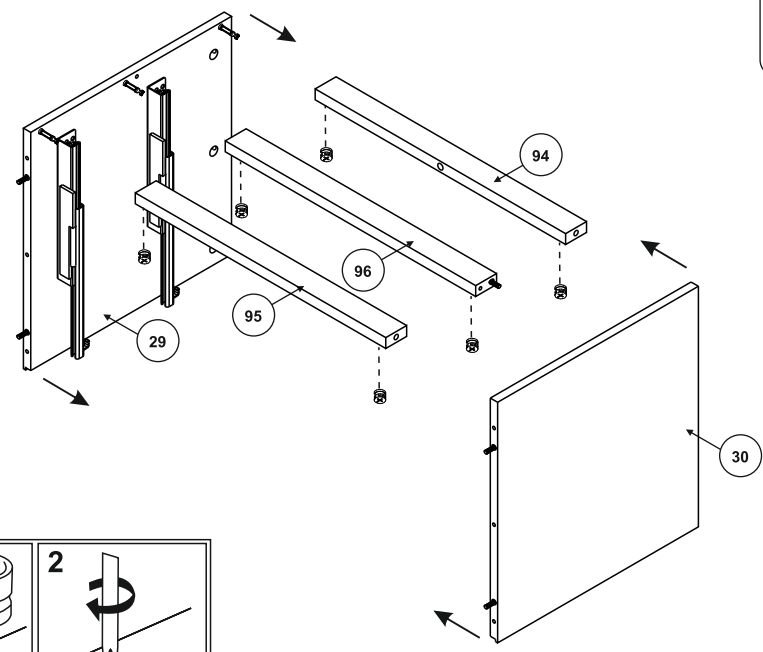


6

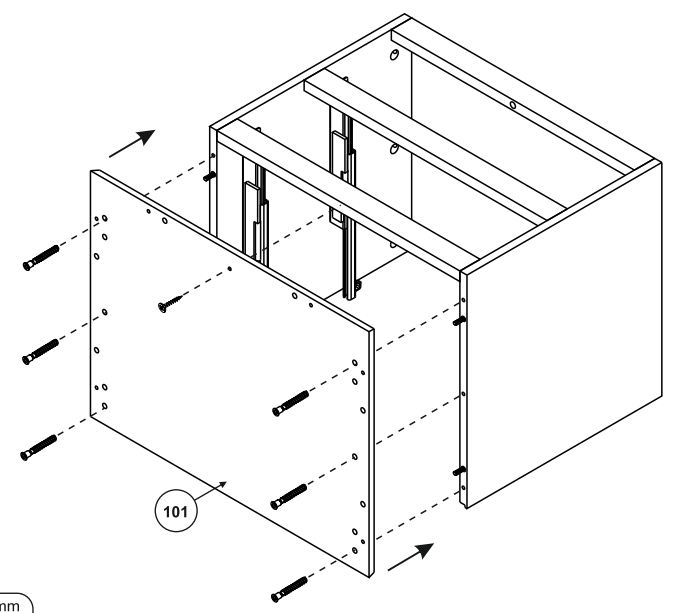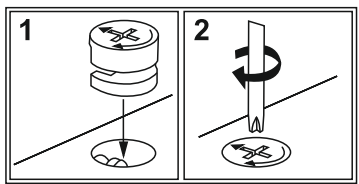

- NC 3,5x30 x1
- YA 7x50 x6
- W 4mm x1

7

- B 34mm x6

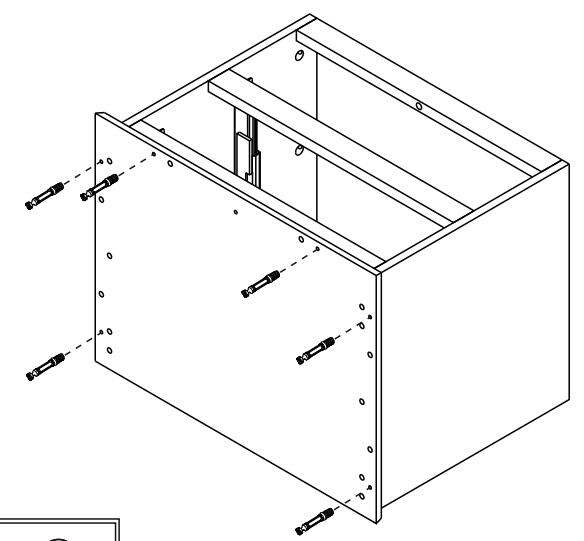

8

