

Assembly Instructions



1/1

D80-ZL















External tools needed for assembly: hammer, screwdriver

Perla

Optional tools : Power drill with screwdriver bit

260cm

Please follow steps

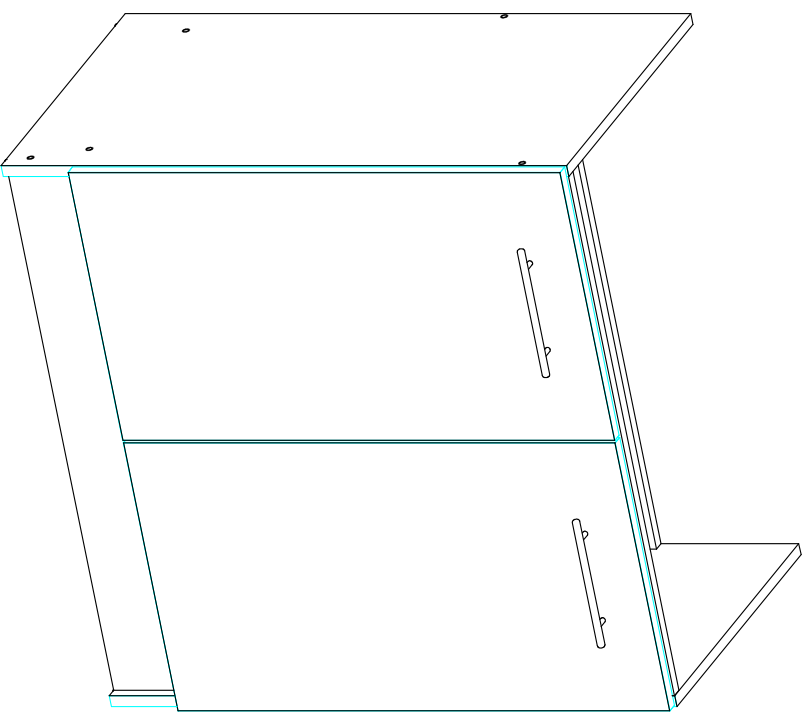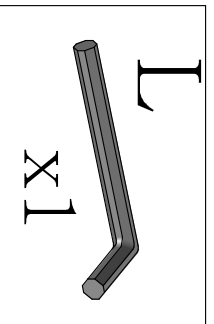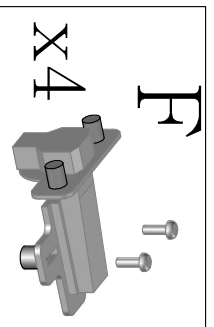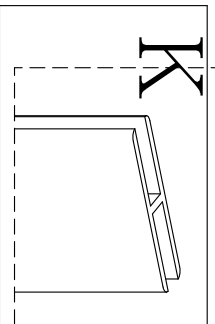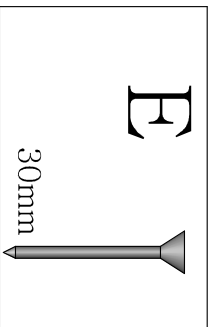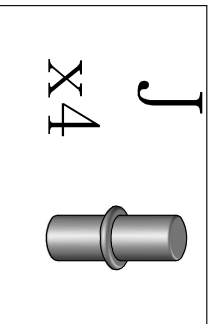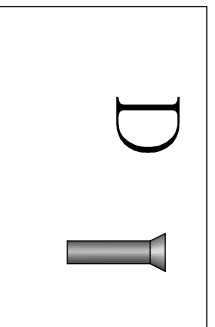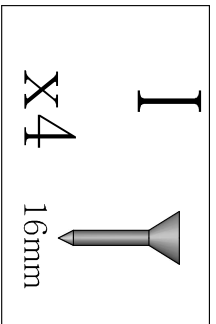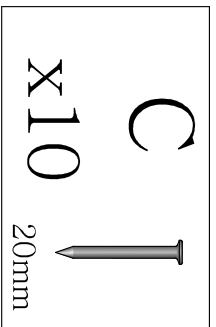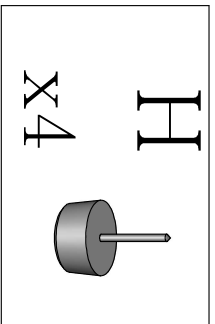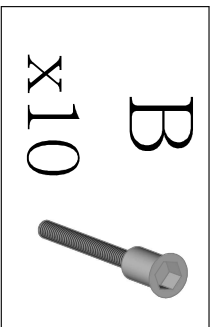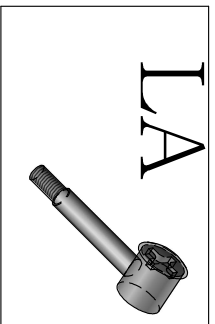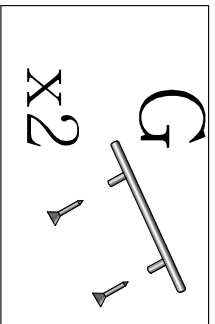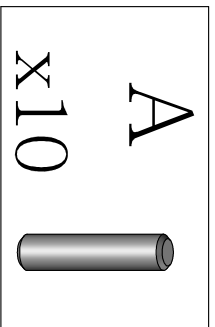

Assembly Instructions



2

D80-ZL\_


External tools needed for assembly: hammer, screwdriver

Perła


Optional tools :Power drill with screwdriver bit

260cm


Please follow steps

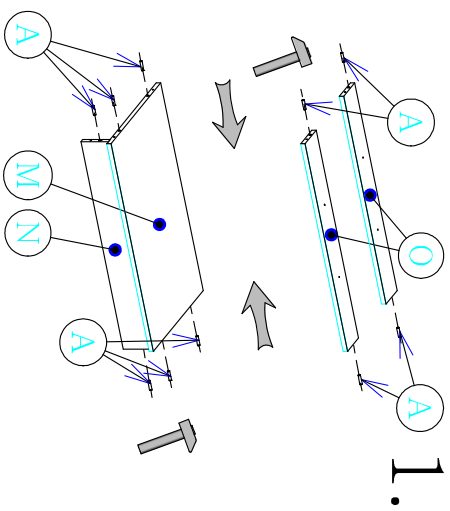


1.

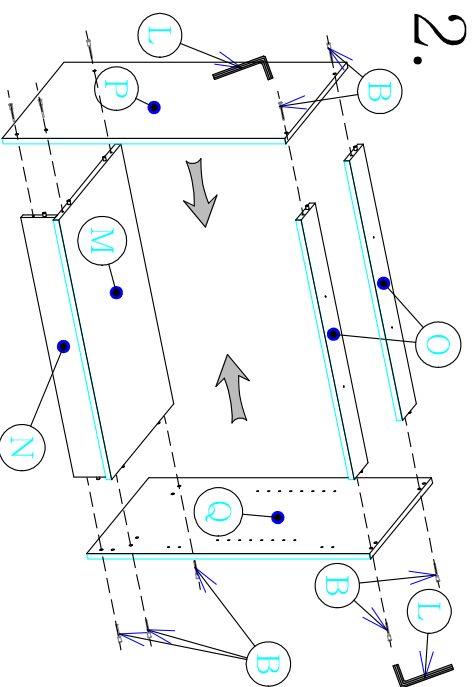


2.

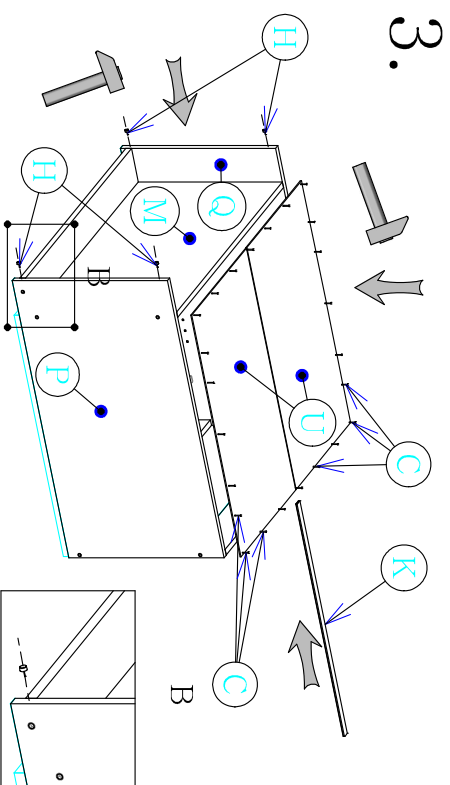


3.

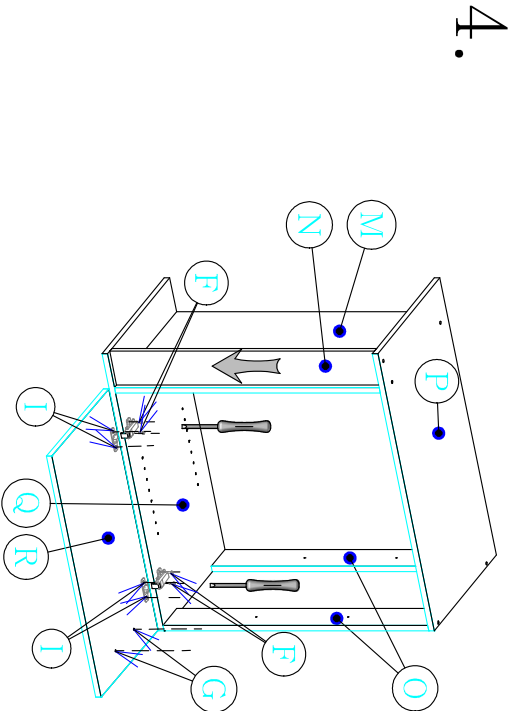


4.

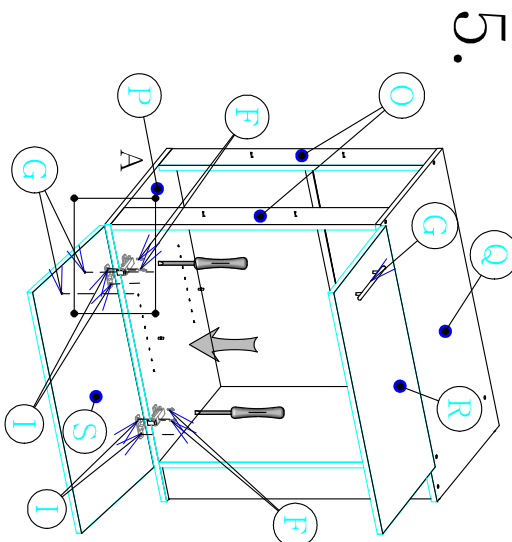


5.

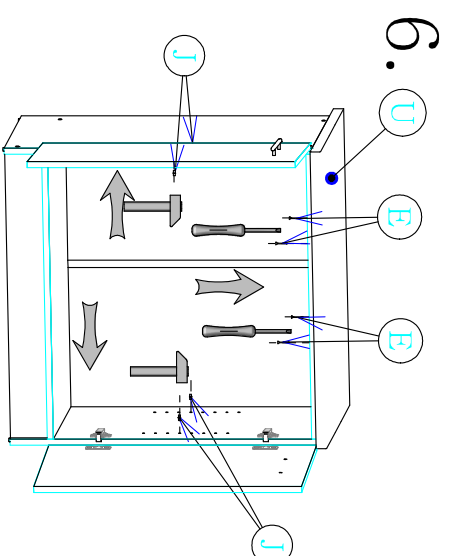

6.

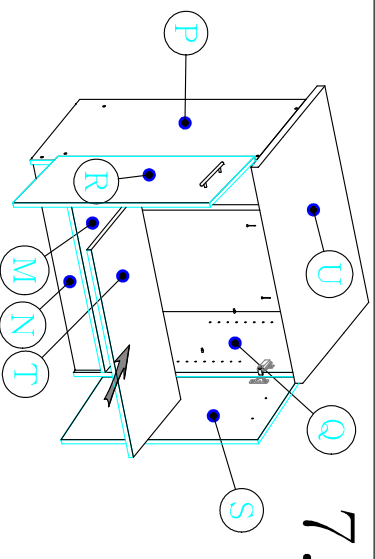

7.

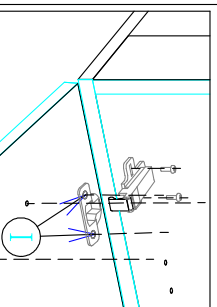

A

Assembly Instructions

**HALMAR**

1/1

D80



Perta

260cm













External tools needed for assembly: hammer, screwdriver

Optional tools : Power drill with screwdriver bit

Please follow steps

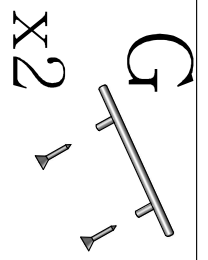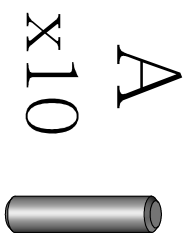

LA

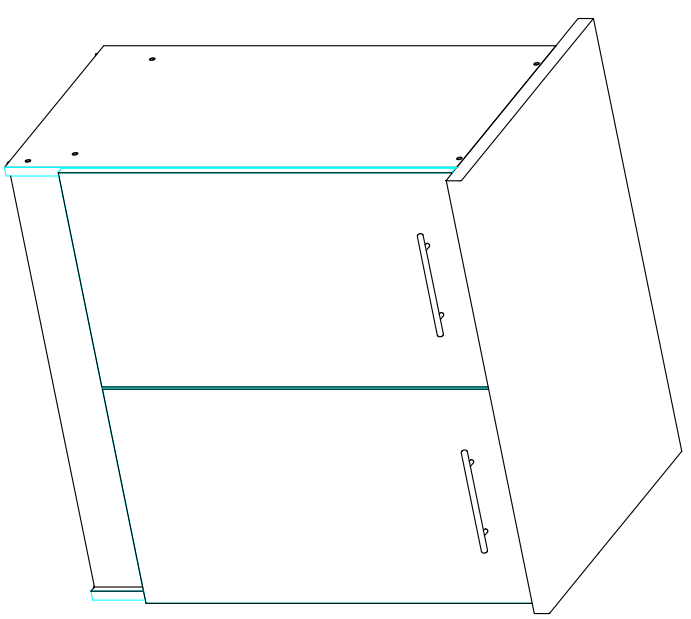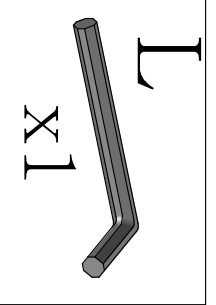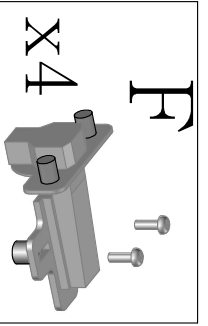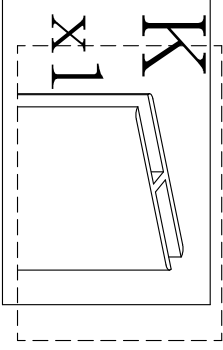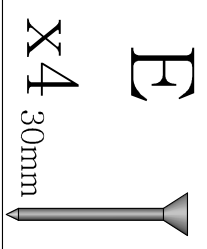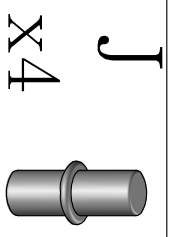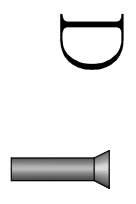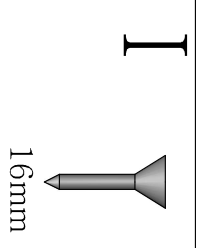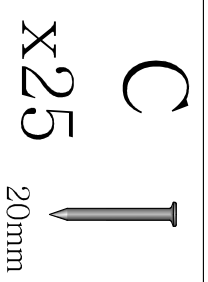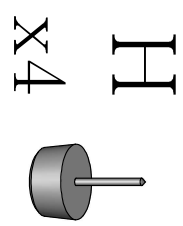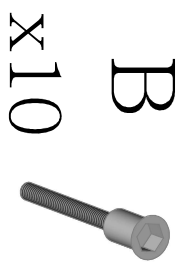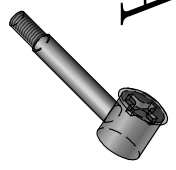

Assembly Instructions



2

D80\_


Perla

260cm


External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit


Please follow steps

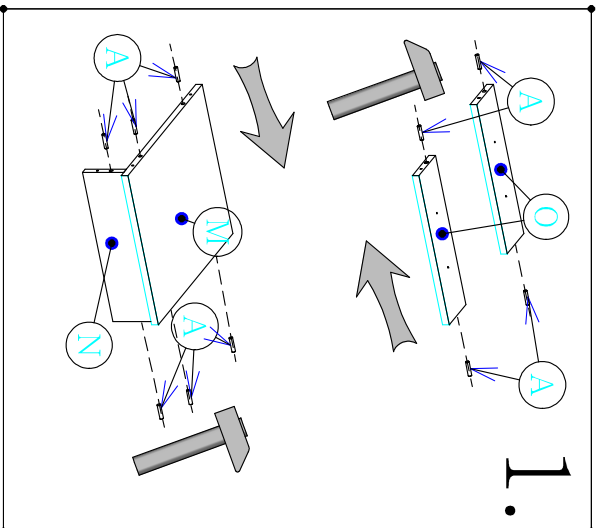


1.

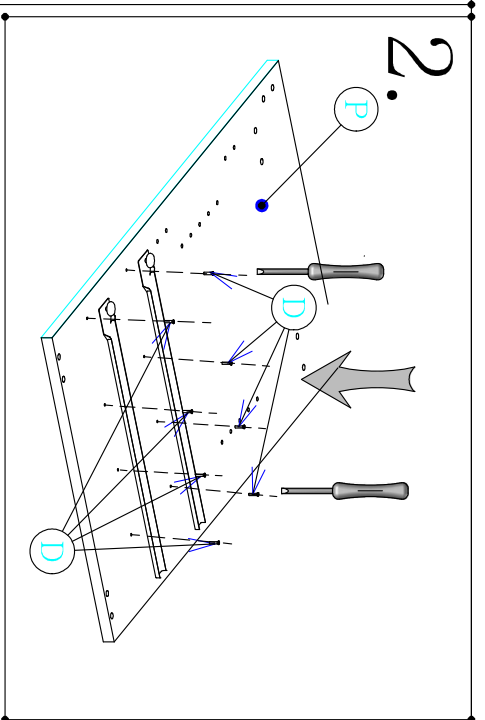


2.

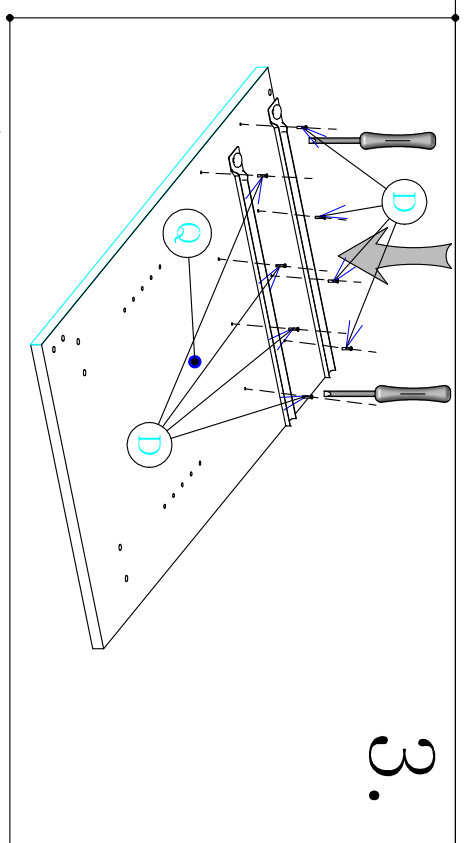

3.

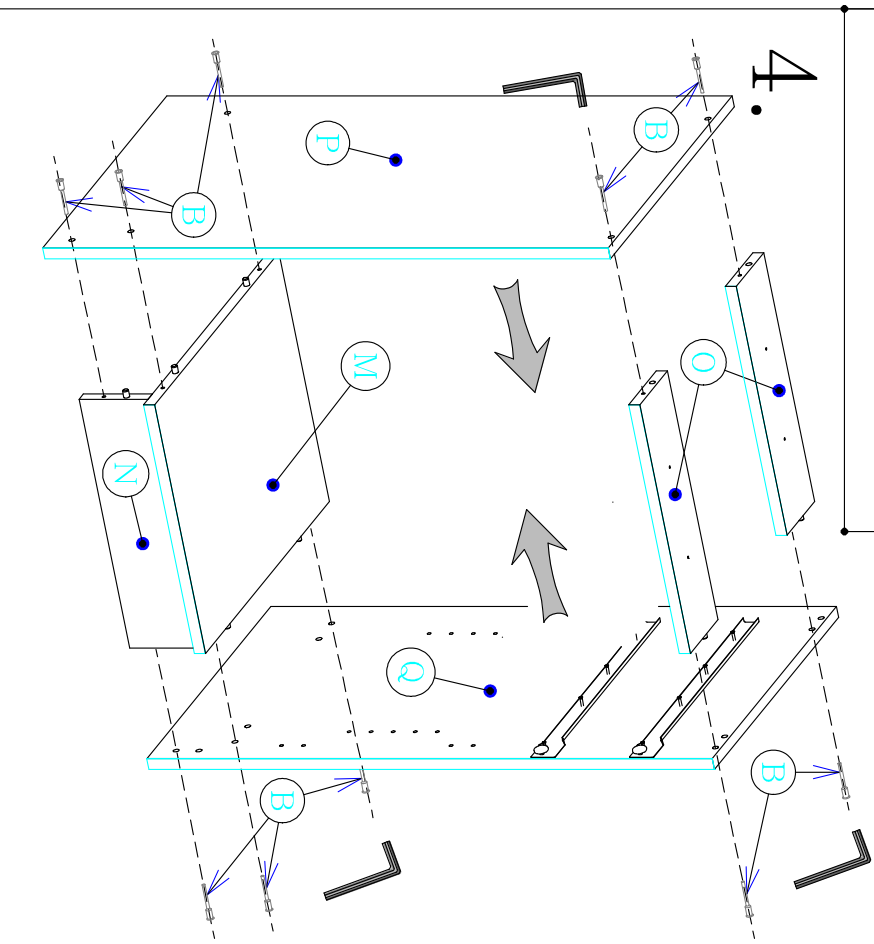

4.

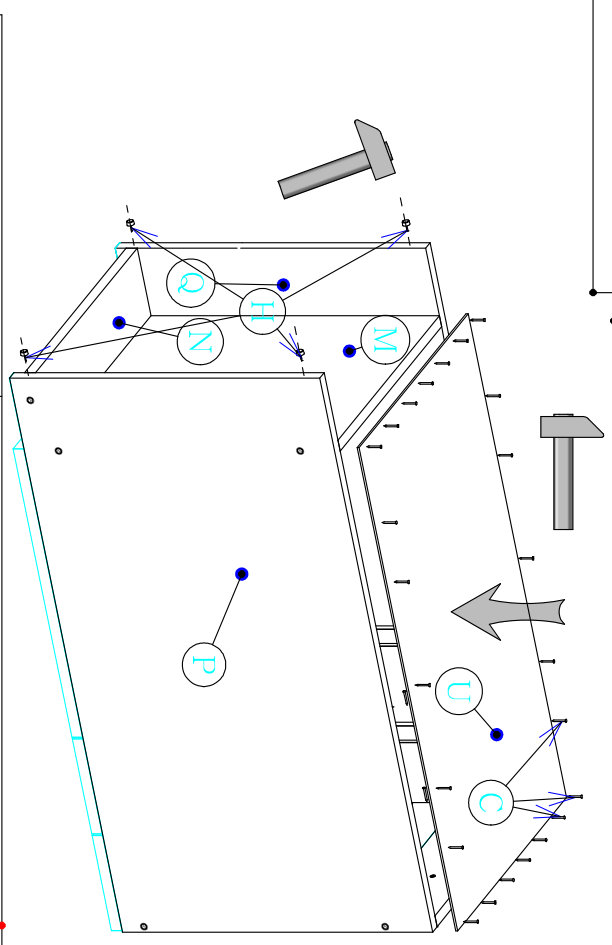

5.

Assembly Instructions



1/2

D40-SZ


External tools needed for assembly: hammer, screwdriver

Perla



Optional tools : Power drill with screwdriver bit

260cm


Please follow steps

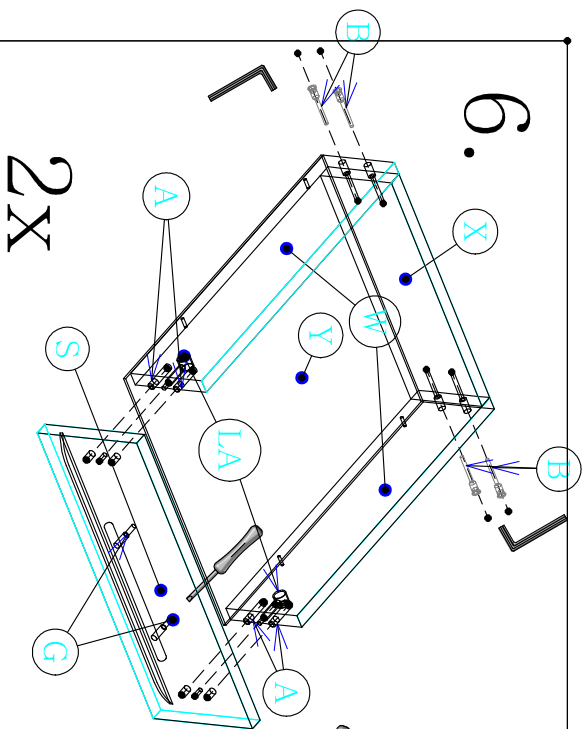


9.

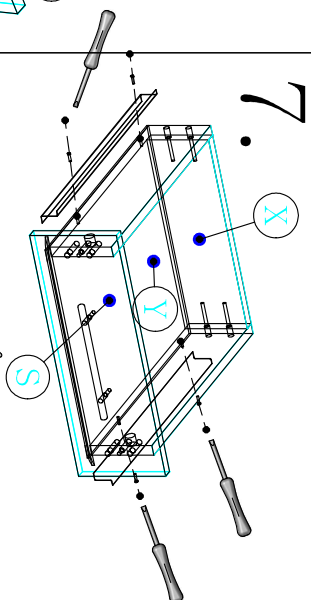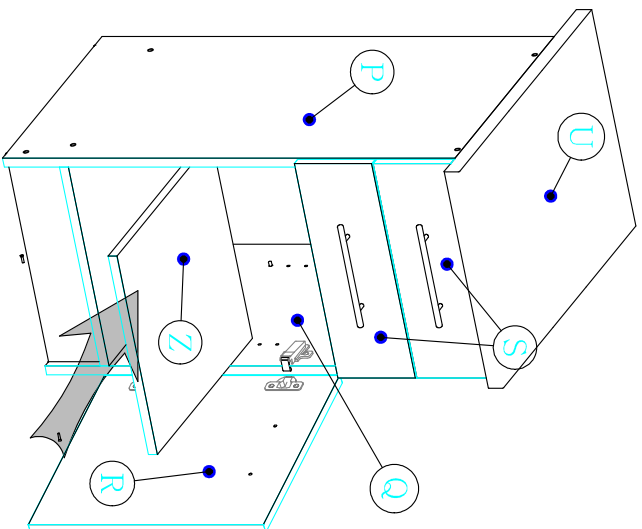

7.

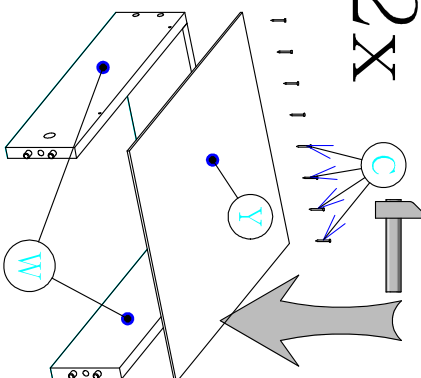

8.

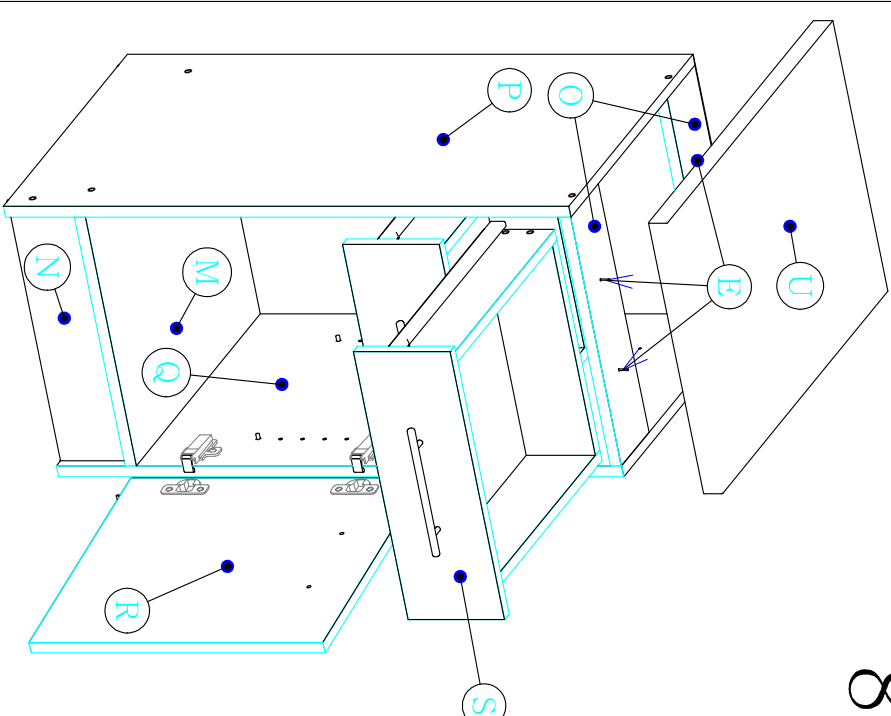

Assembly Instructions

**HALMAR**

2/2

D40-SZ















External tools needed for assembly: hammer, screwdriver

Perta

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

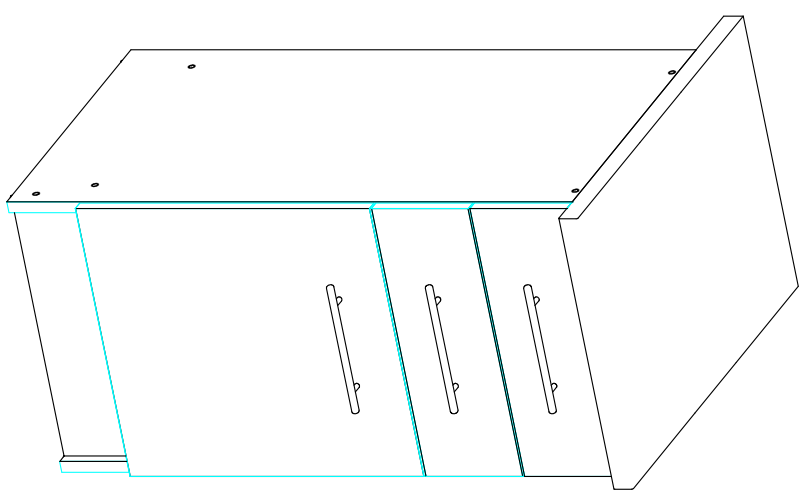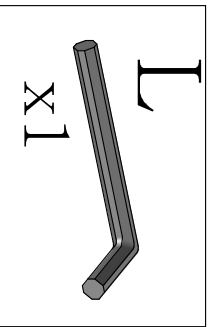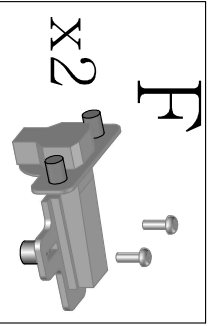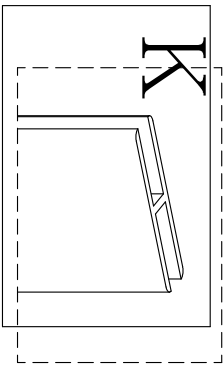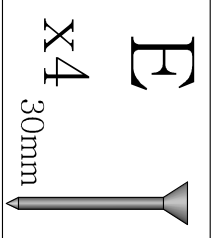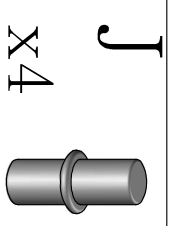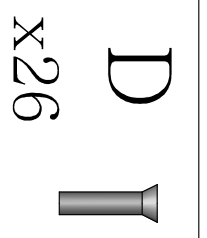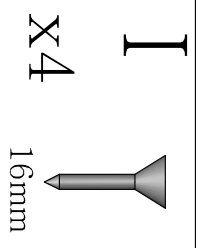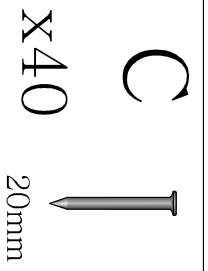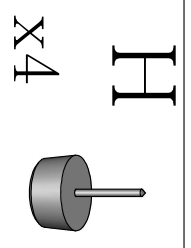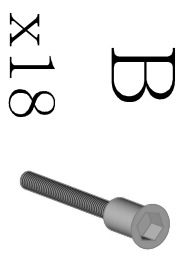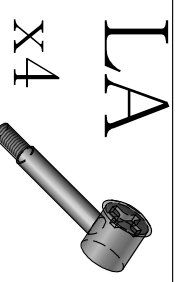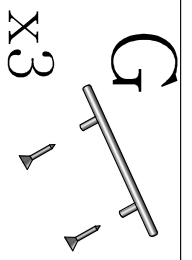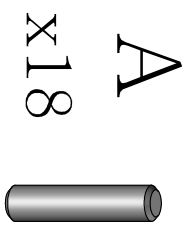

Assembly Instructions



3

D40-SZ\_


External tools needed for assembly: hammer, screwdriver

Perla


Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

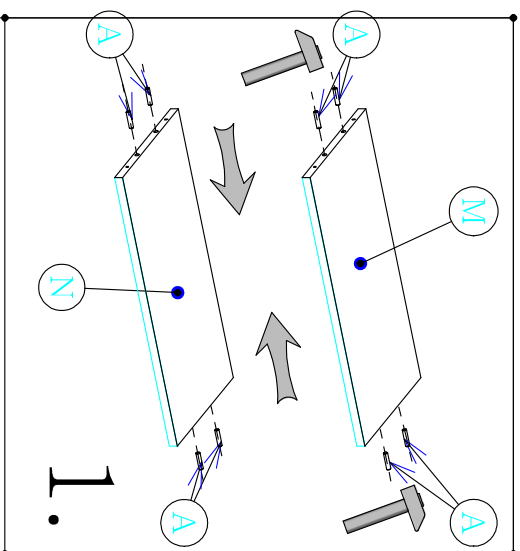


1.

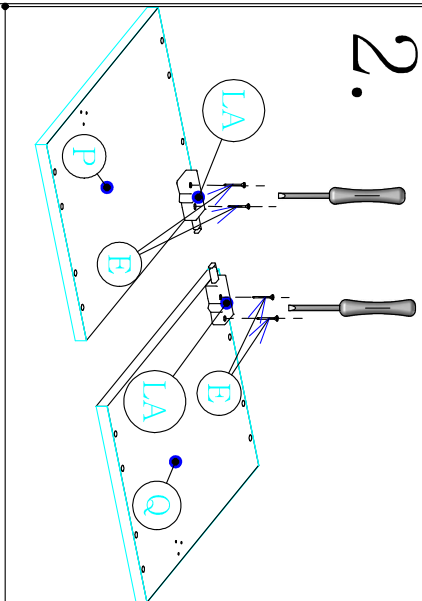


2.


5.

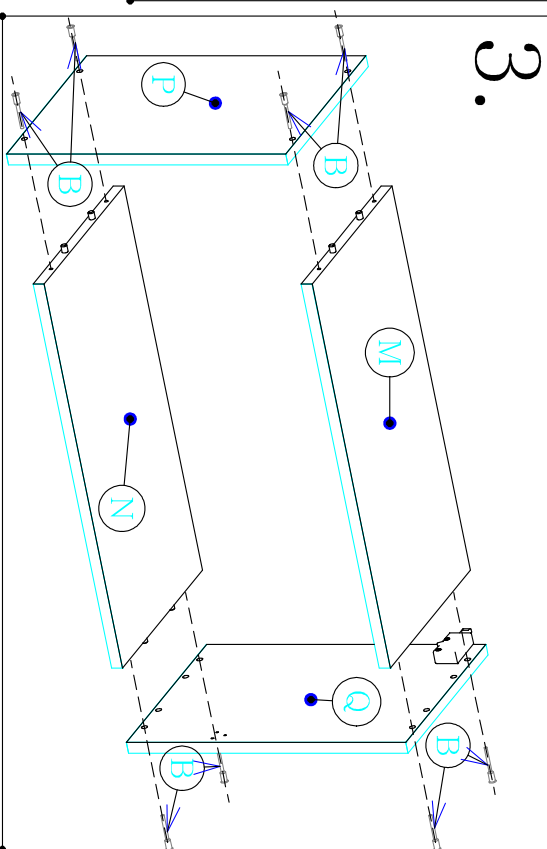

3.

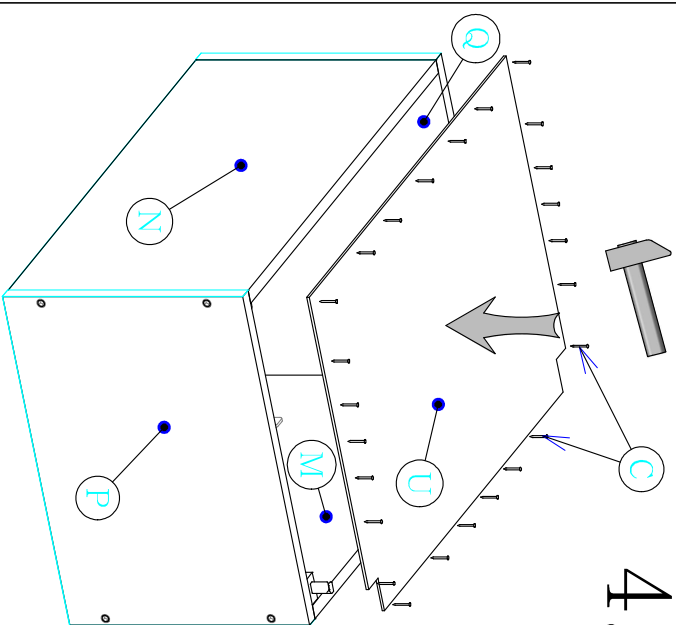

4.

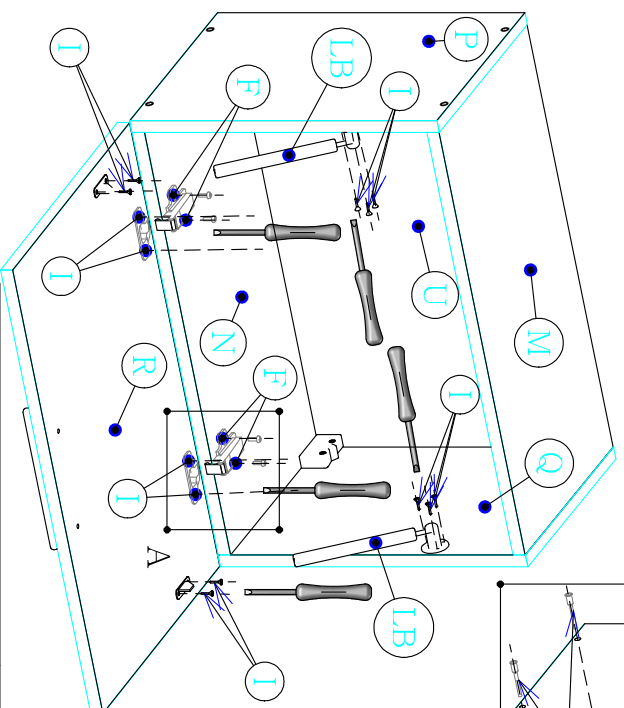

Assembly Instructions

G60-OK

Perta

260cm


**HALMAR**
















1/2

External tools needed for assembly: hammer, screwdriver

Optional tools : Power drill with screwdriver bit

Please follow steps

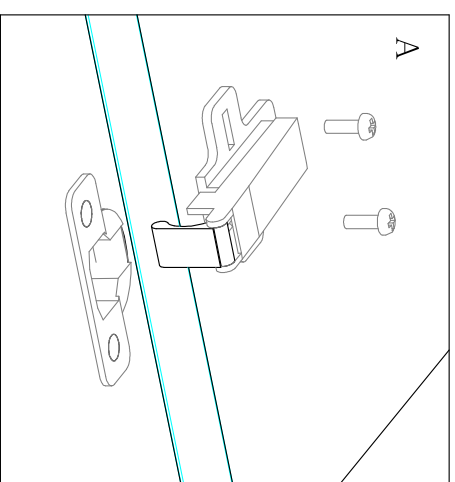

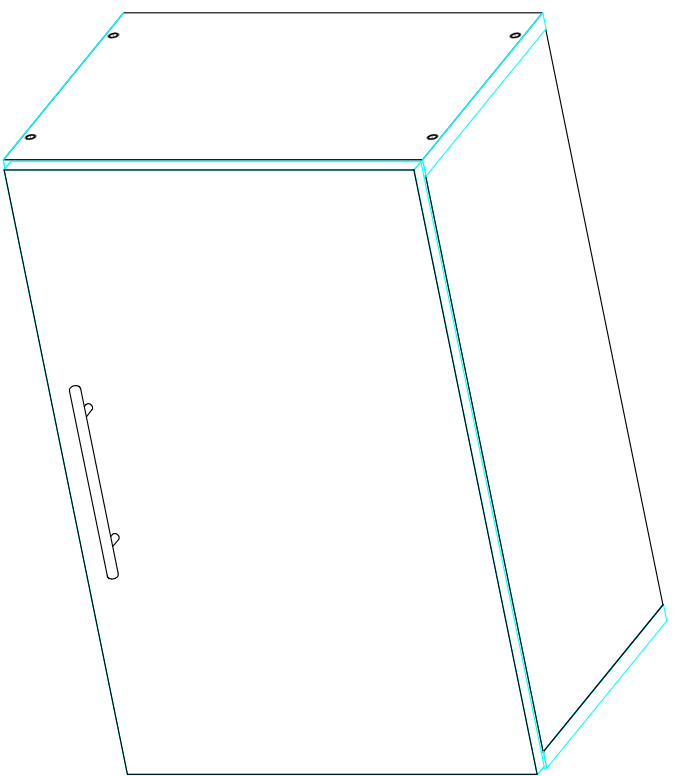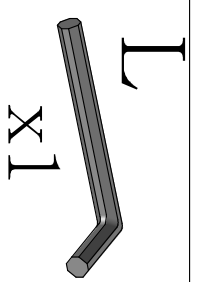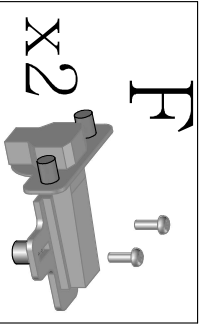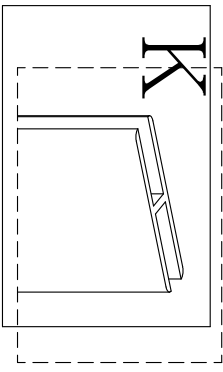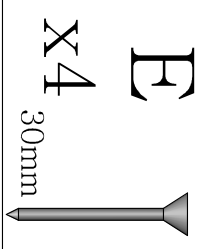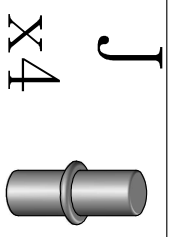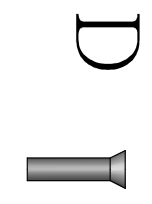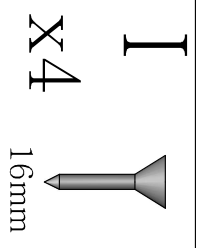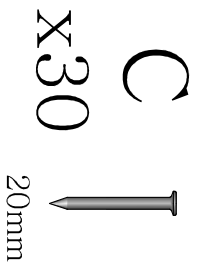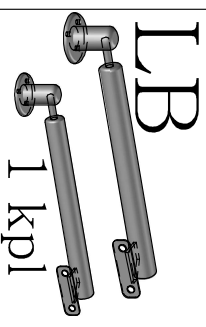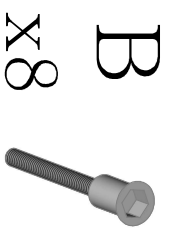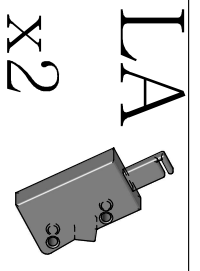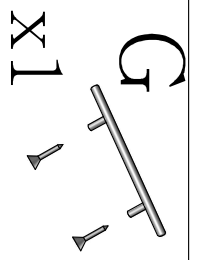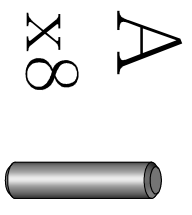

Assembly Instructions



2

G60-OK\_








External tools needed for assembly: hammer, screwdriver

Perła

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

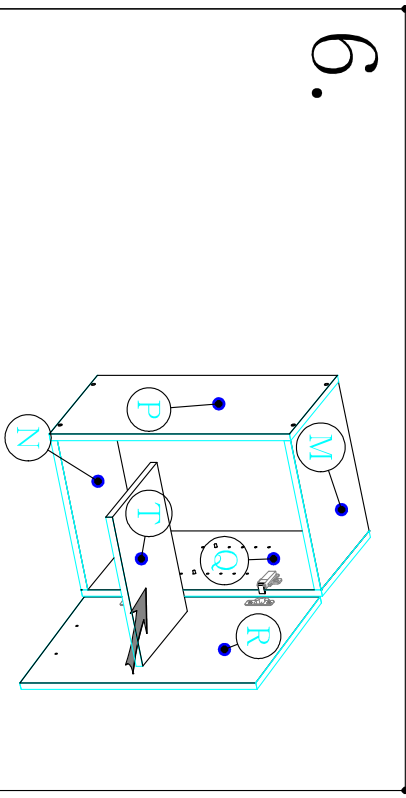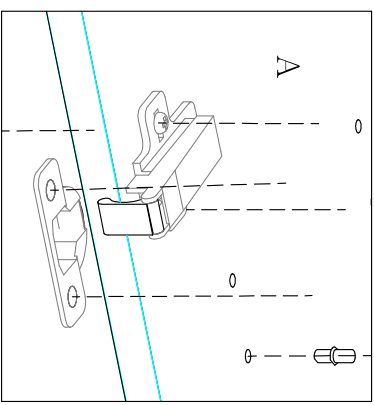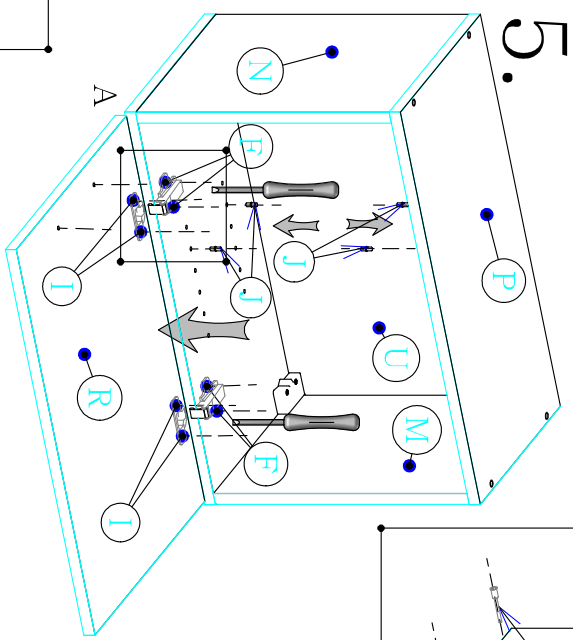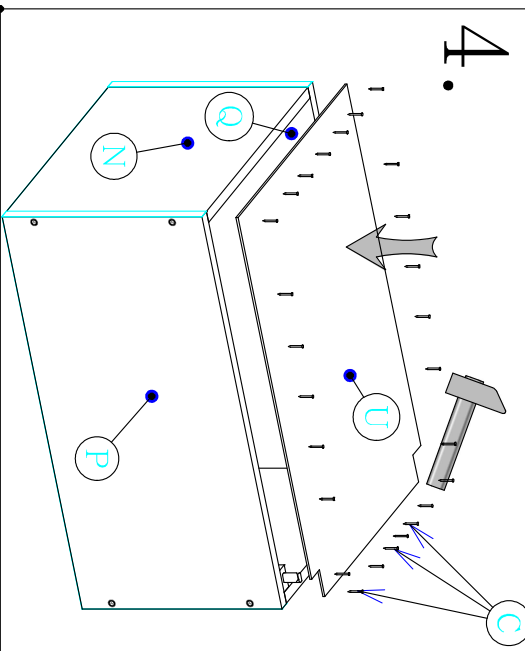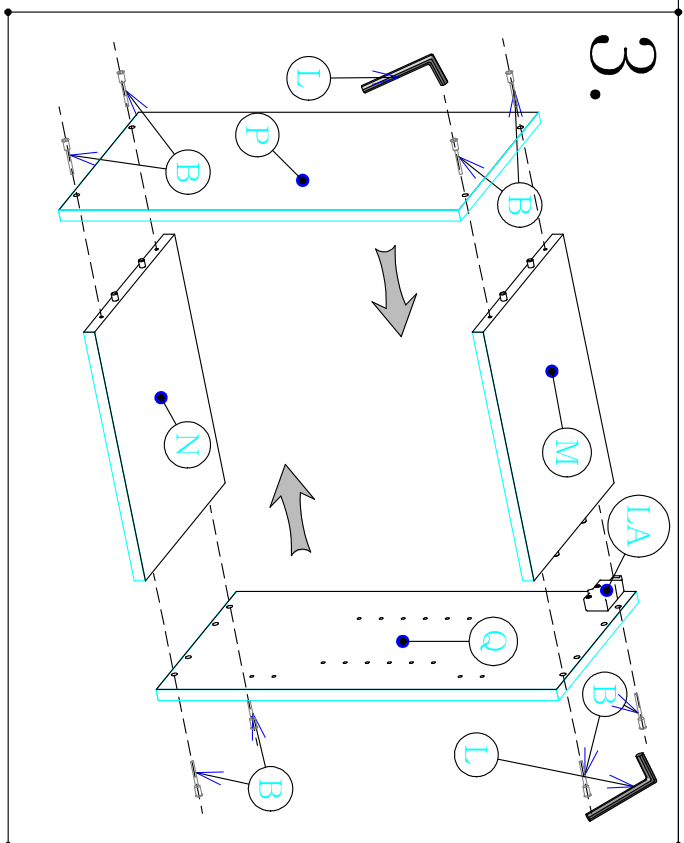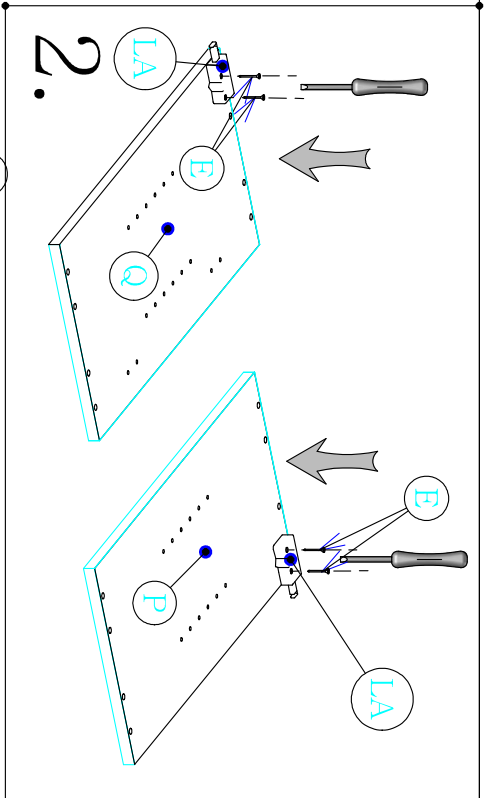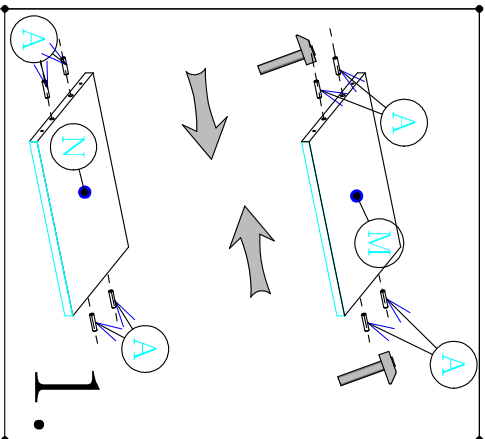

Assembly Instructions



1/1

G40-P















Perła

260cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

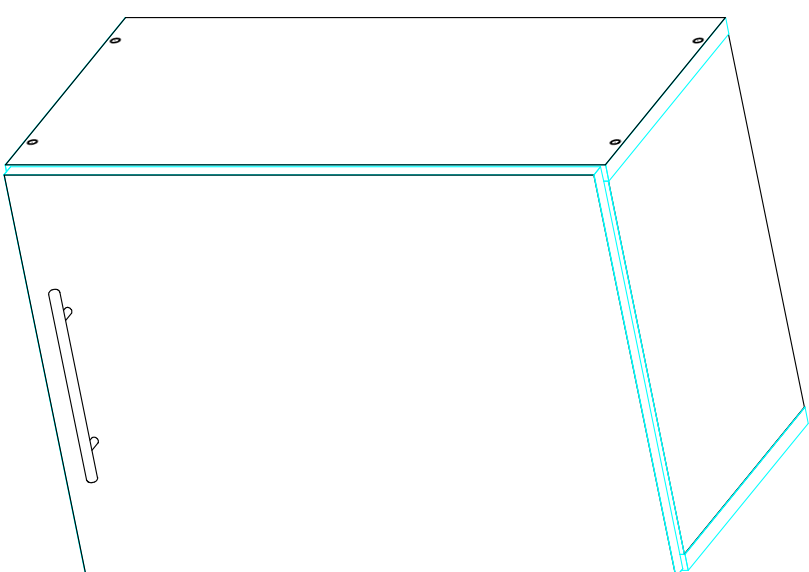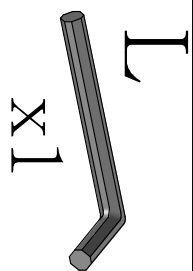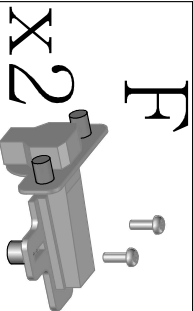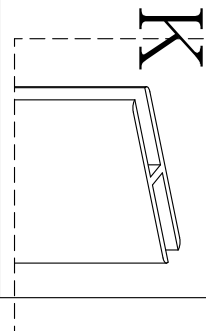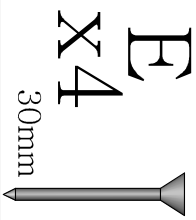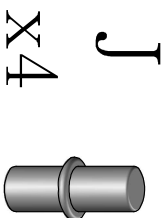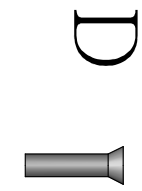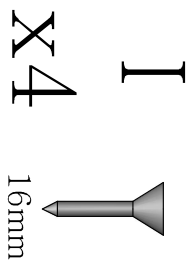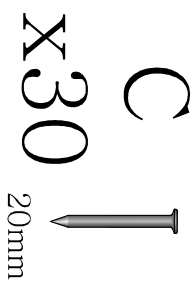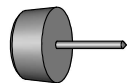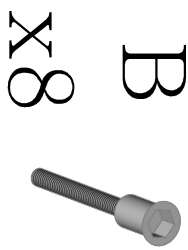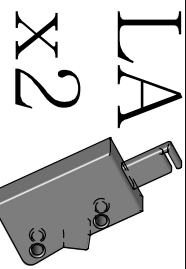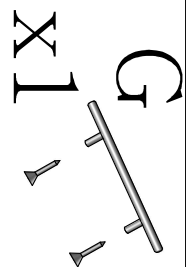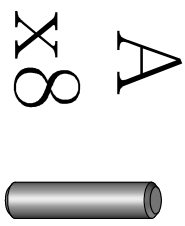

Assembly Instructions



1/1

G40-P-















External tools needed for assembly: hammer, screwdriver

Perla

Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

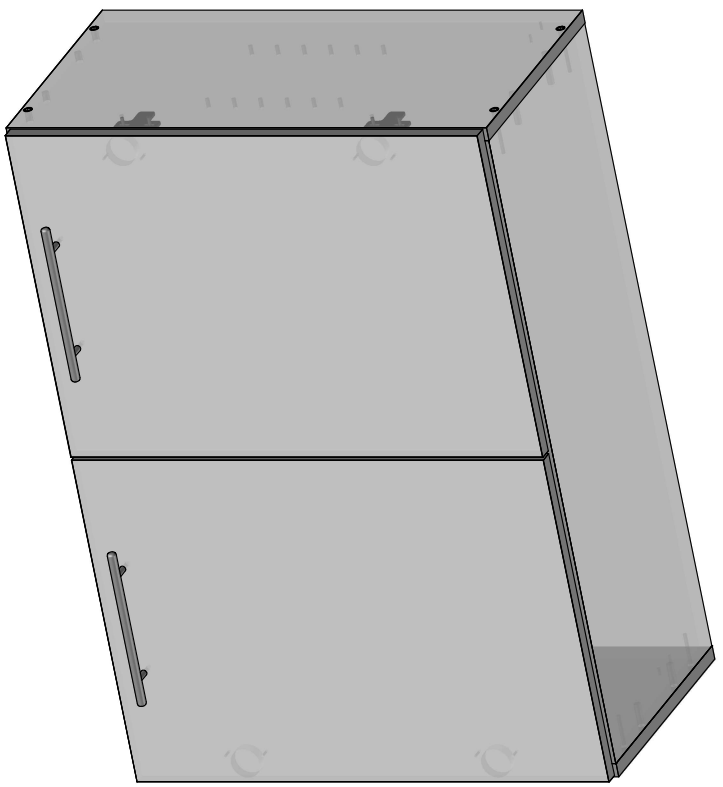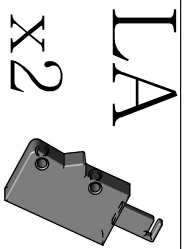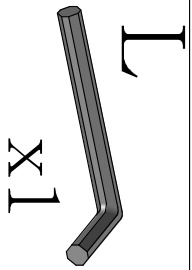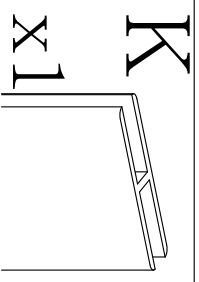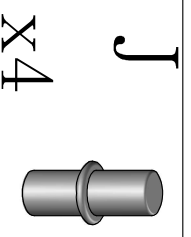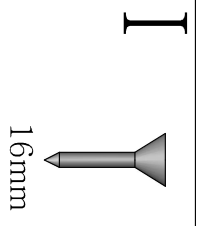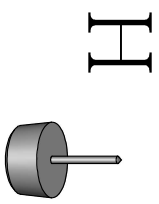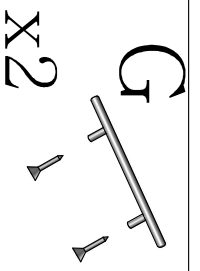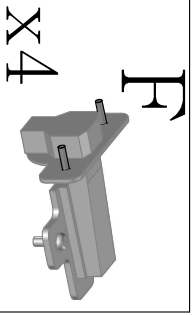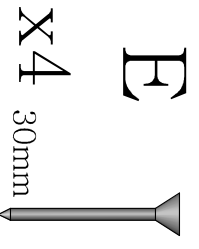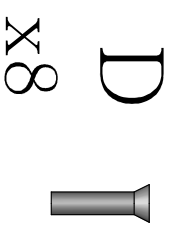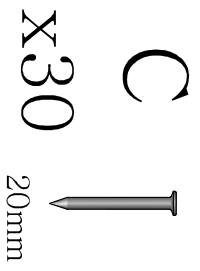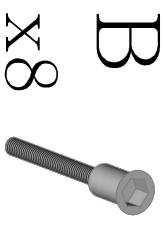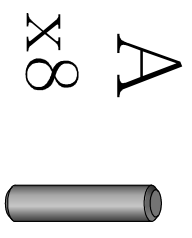

Assembly Instructions



1/1

G80\_






External tools needed for assembly: hammer, screwdriver


Perla







Optional tools :Power drill with screwdriver bit

260cm

Please follow steps

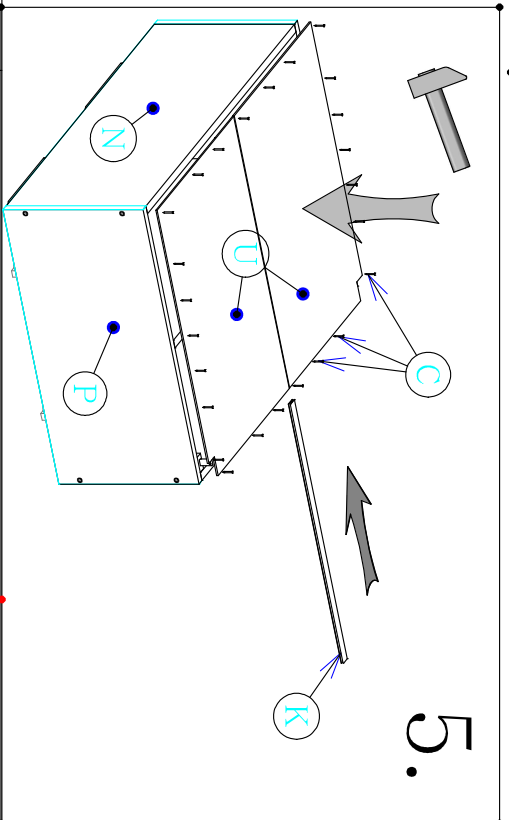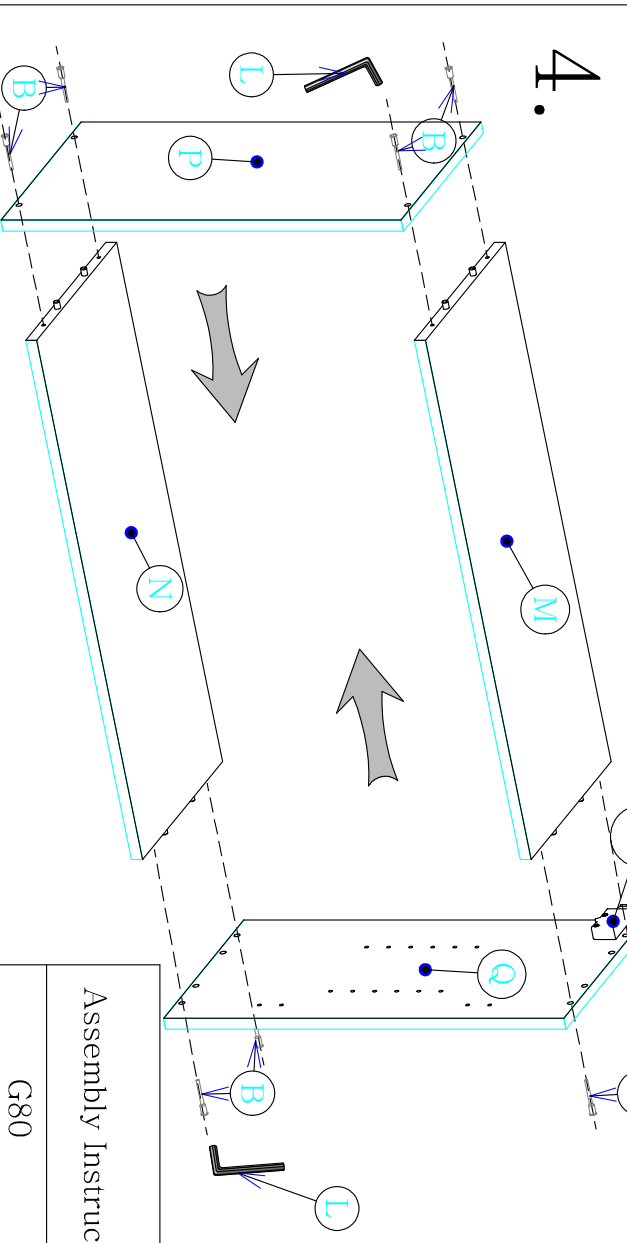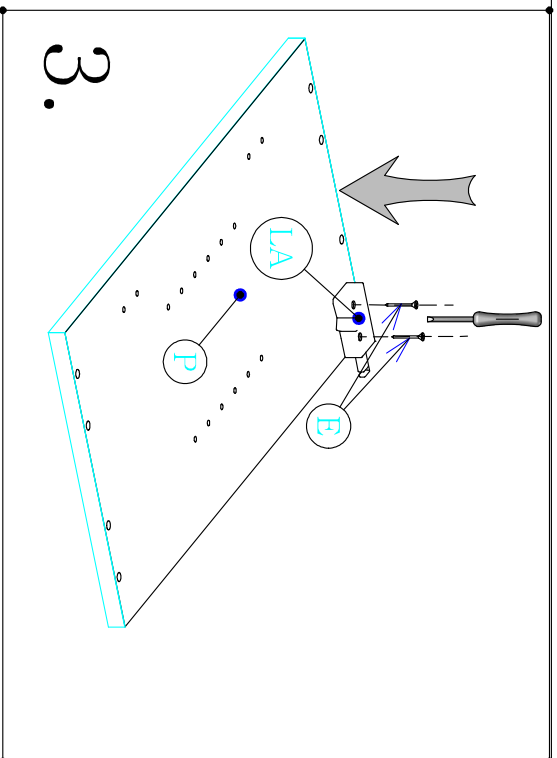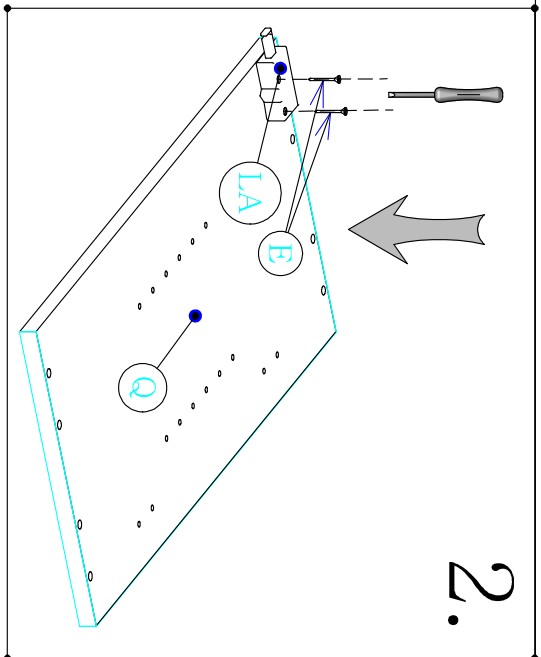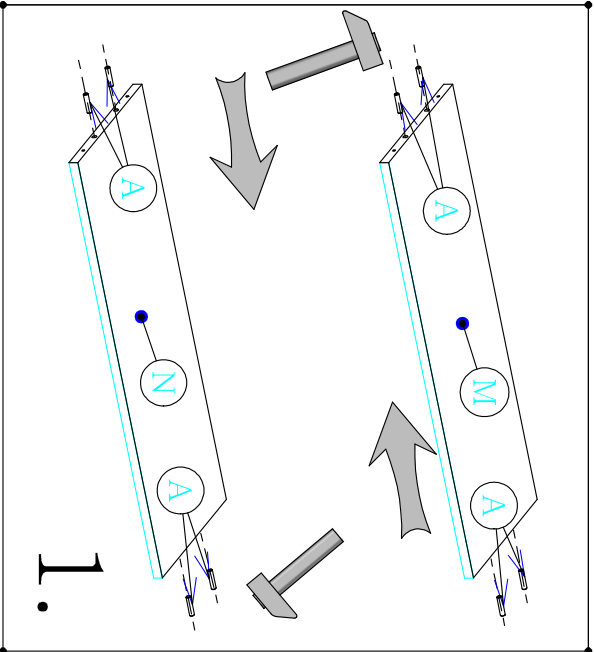

Assembly Instructions				1/2
G80	Perła			
260cm		Optional tools : Power drill with screwdriver bit	Please follow steps	

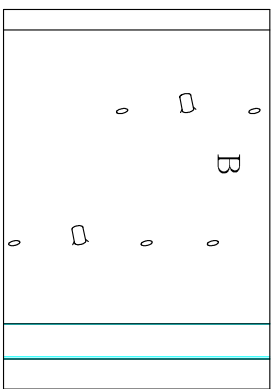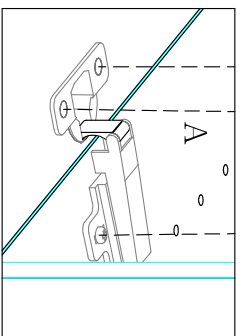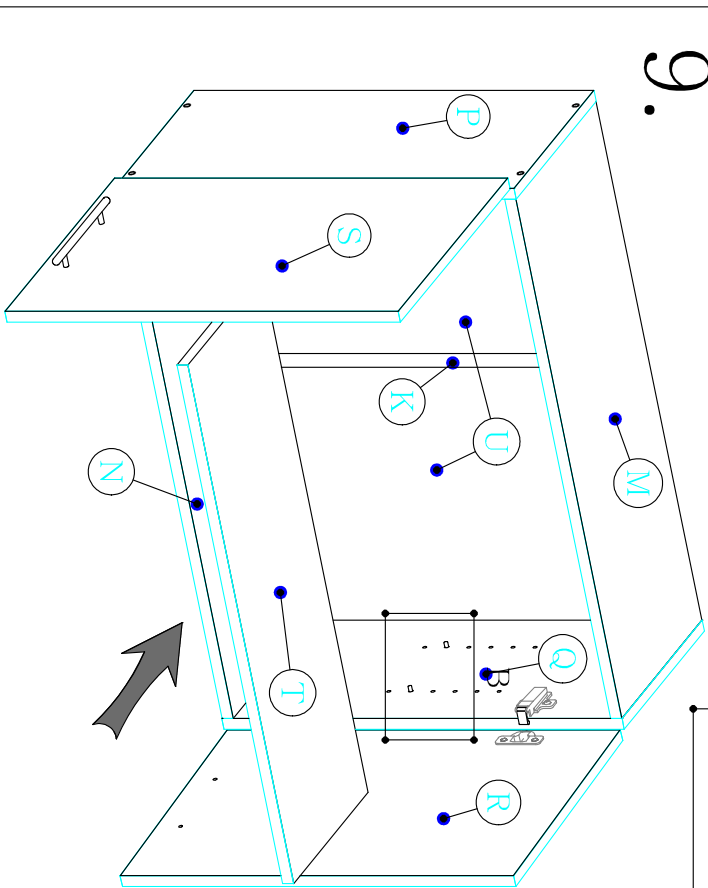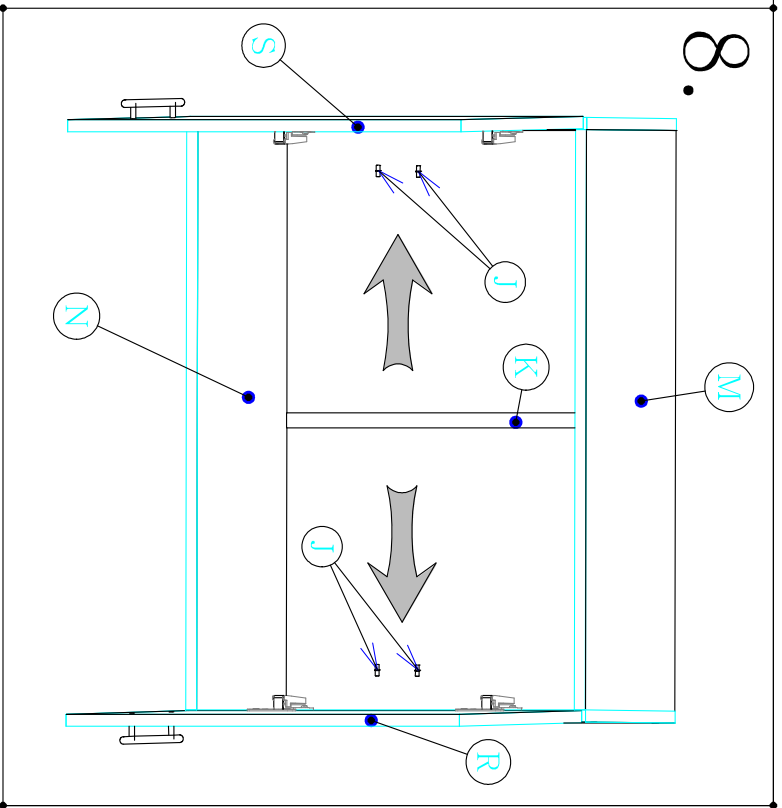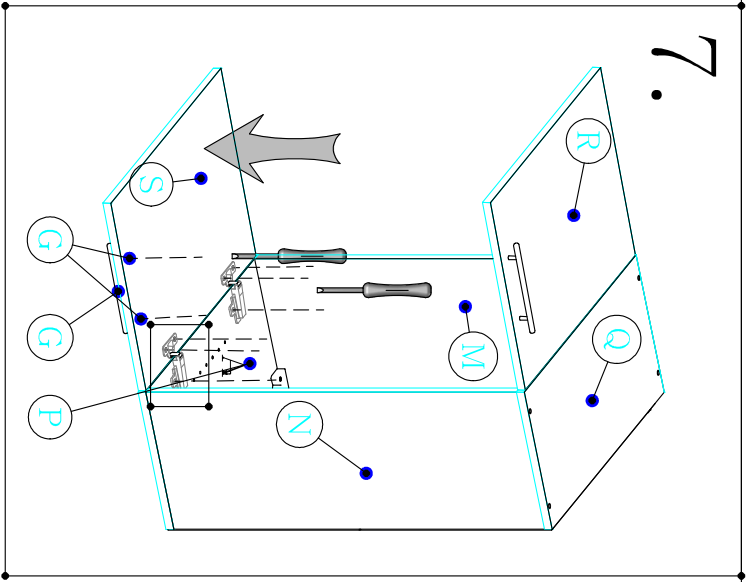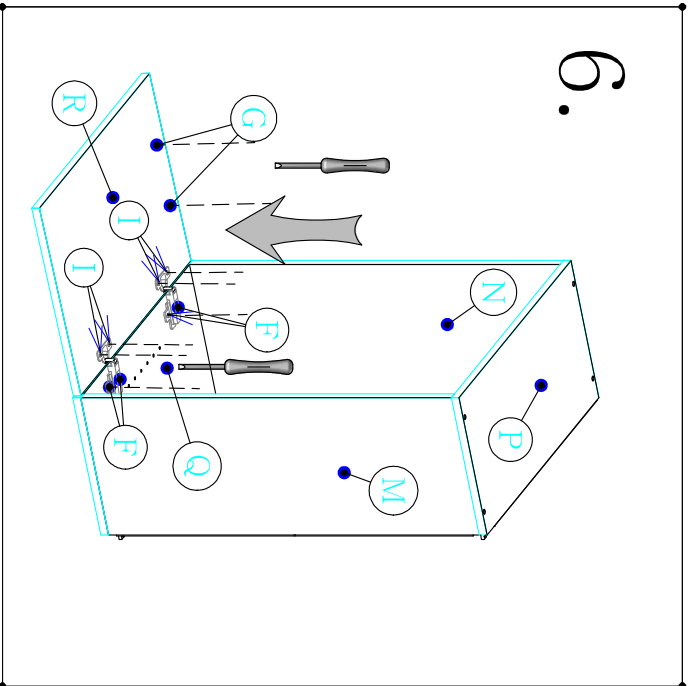

Assembly Instructions



2/2

External tools needed for assembly: hammer, screwdriver



G80

Optional tools :Power drill with screwdriver bit

Perla

Please follow steps

260cm

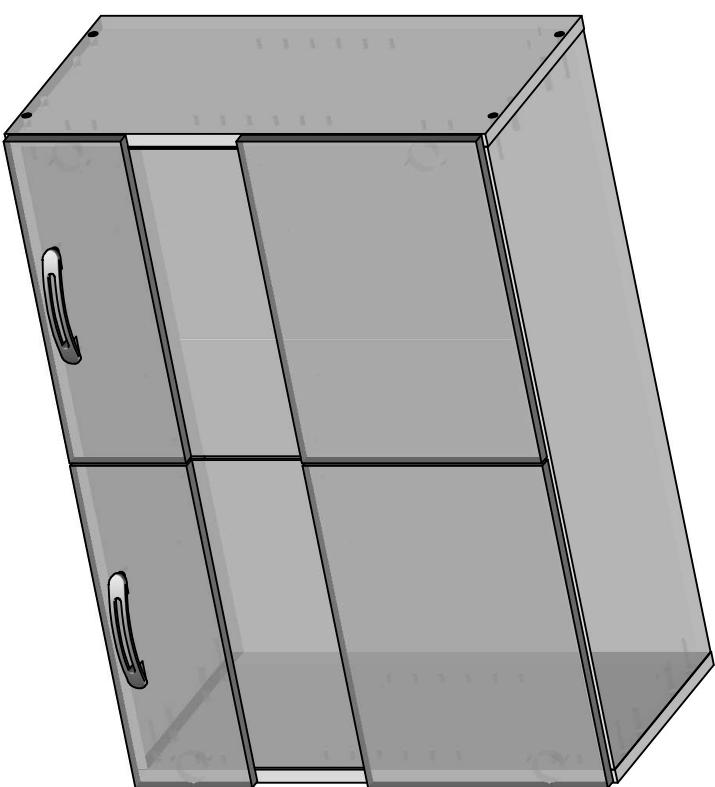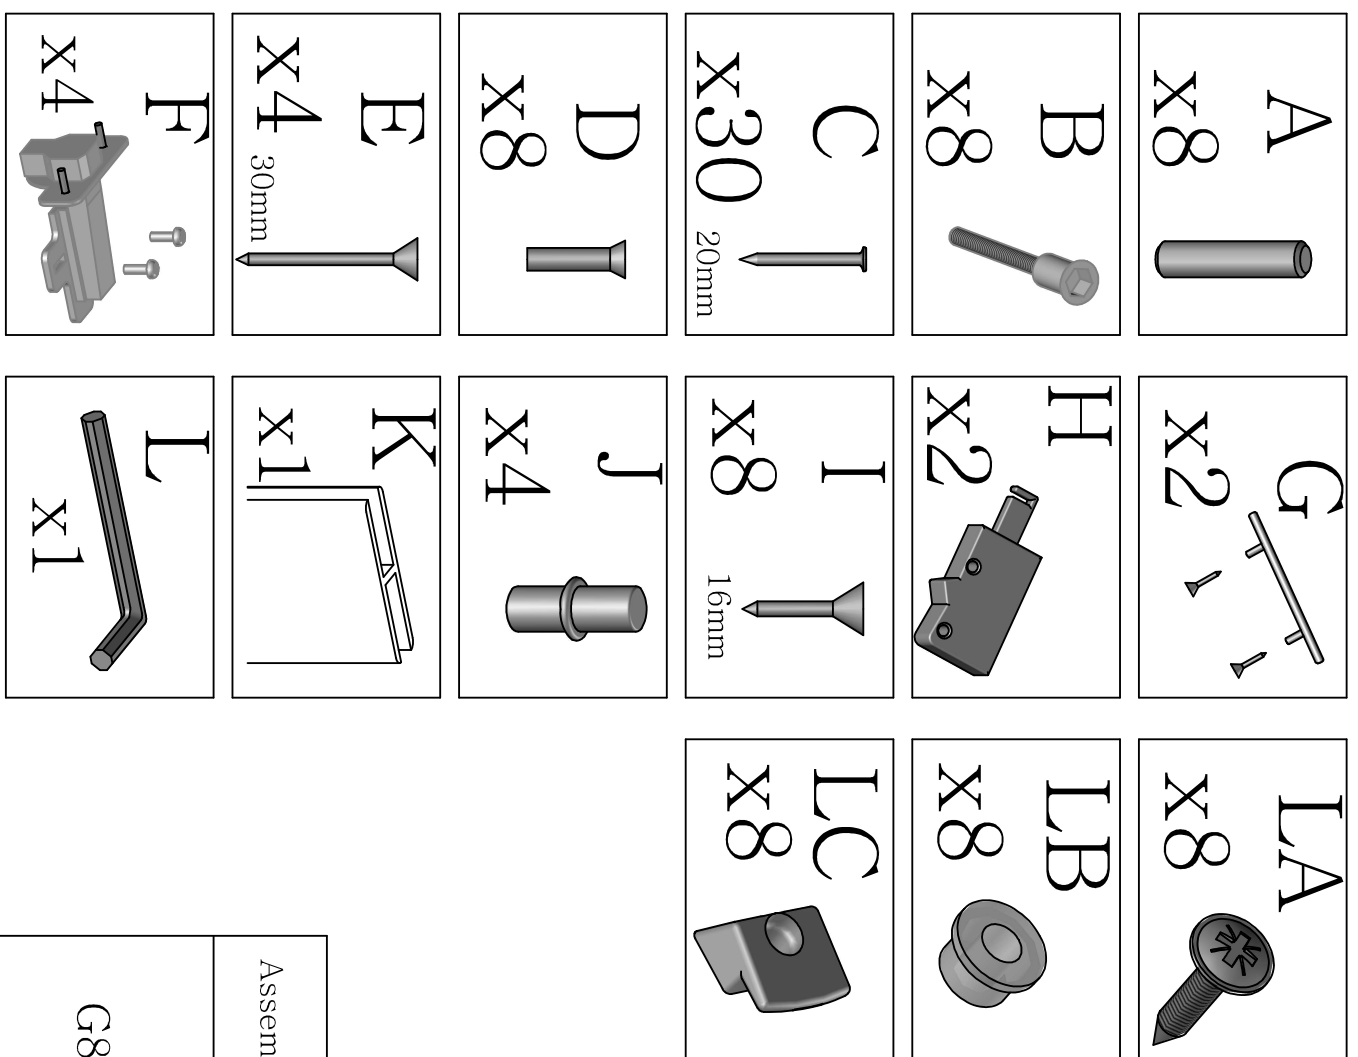

Assembly Instructions




External tools needed for assembly: hammer, screwdriver

Optional tools: Power drill with screwdriver bit

G80Wk

Please follow steps

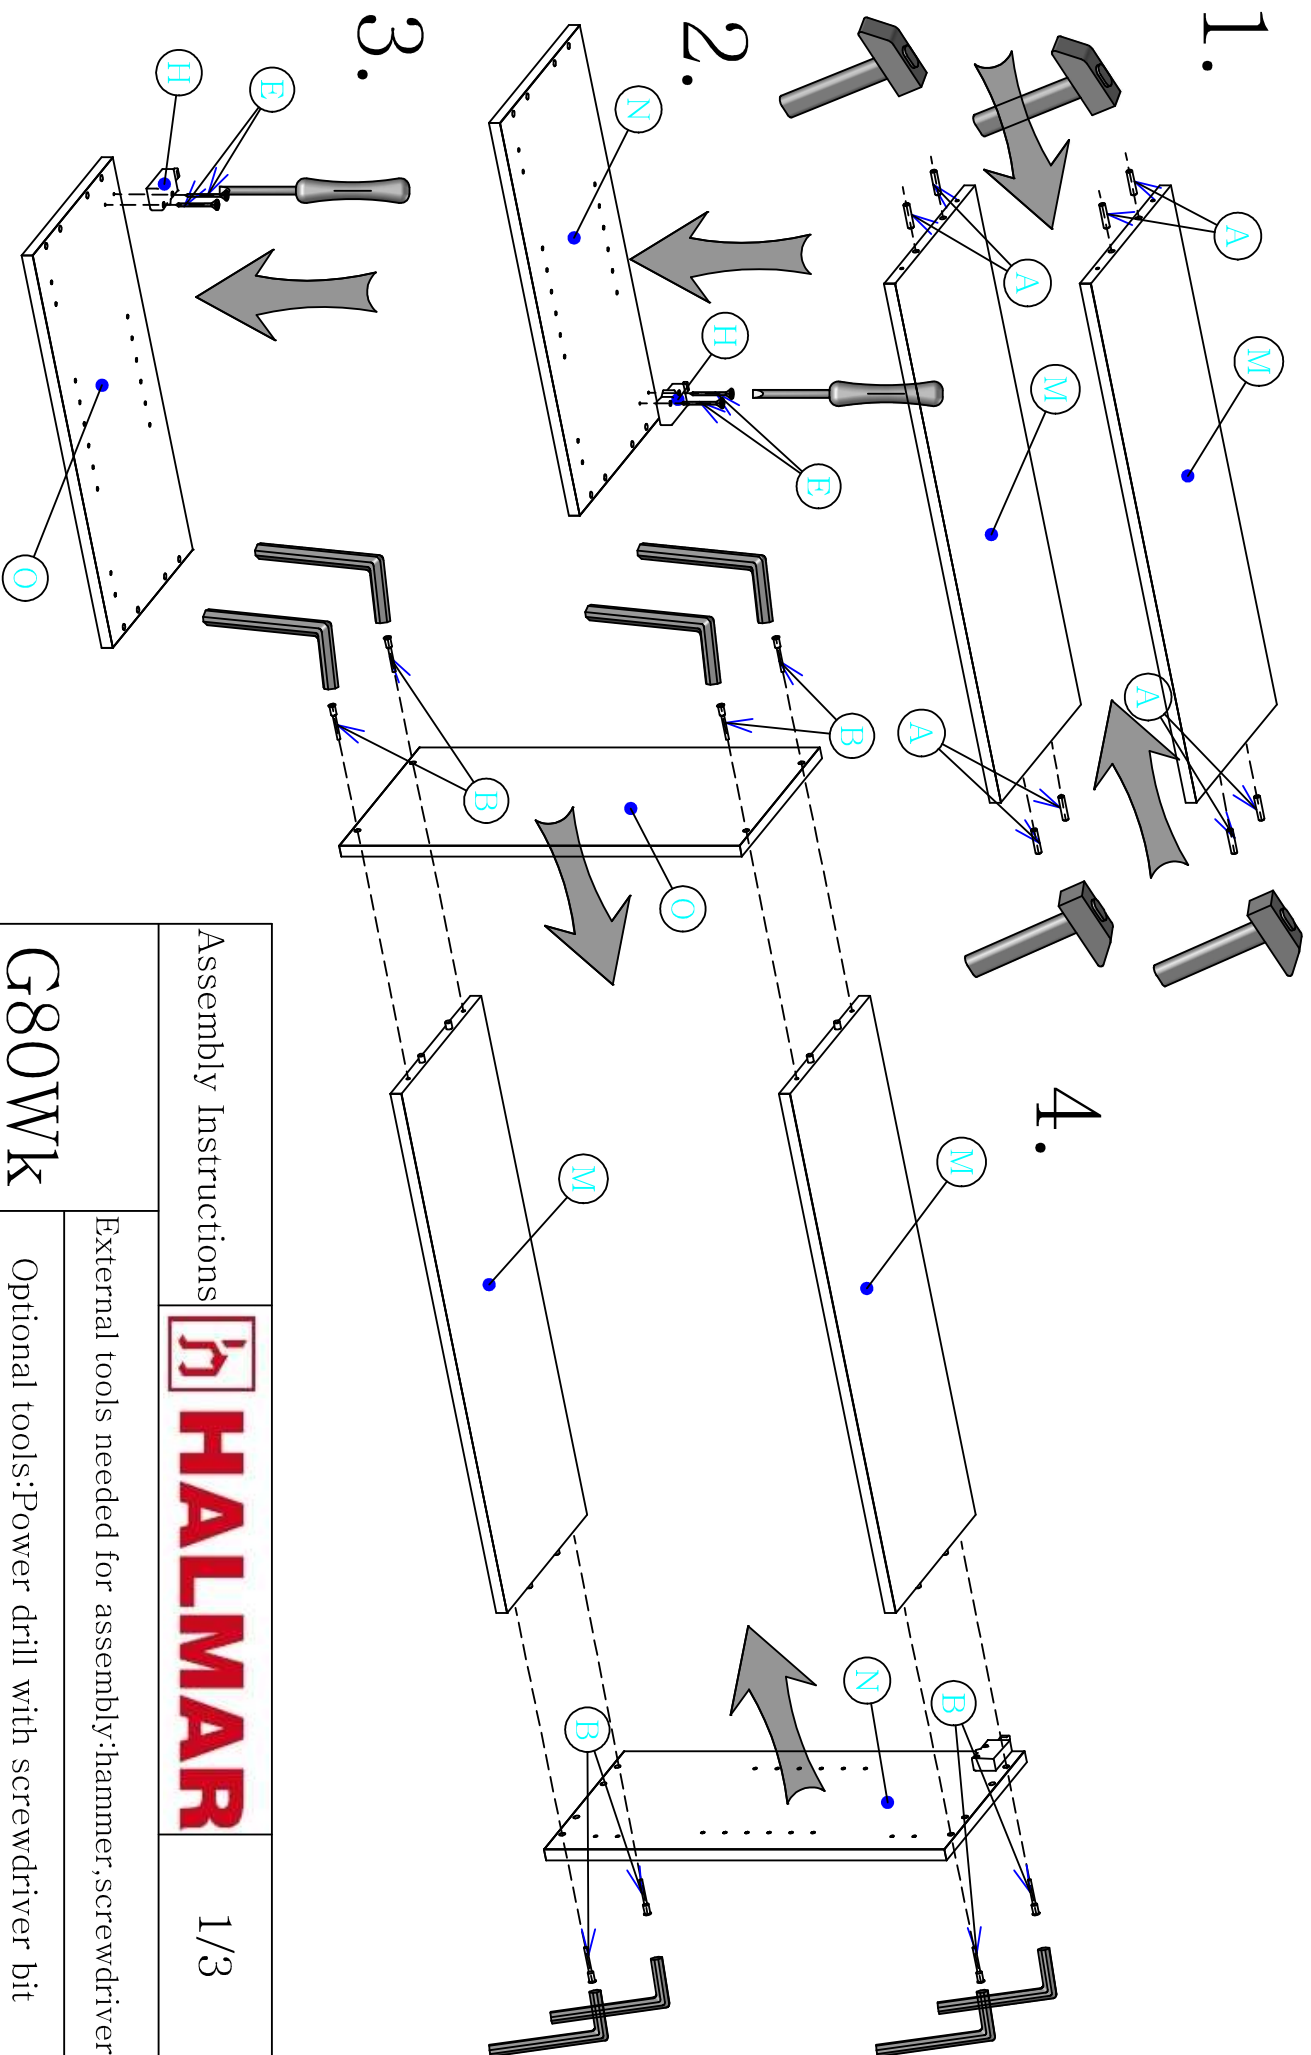

Assembly Instructions




1/3

G80Wk


External tools needed for assembly: hammer, screwdriver

Optional tools: Power drill with screwdriver bit


Please follow steps

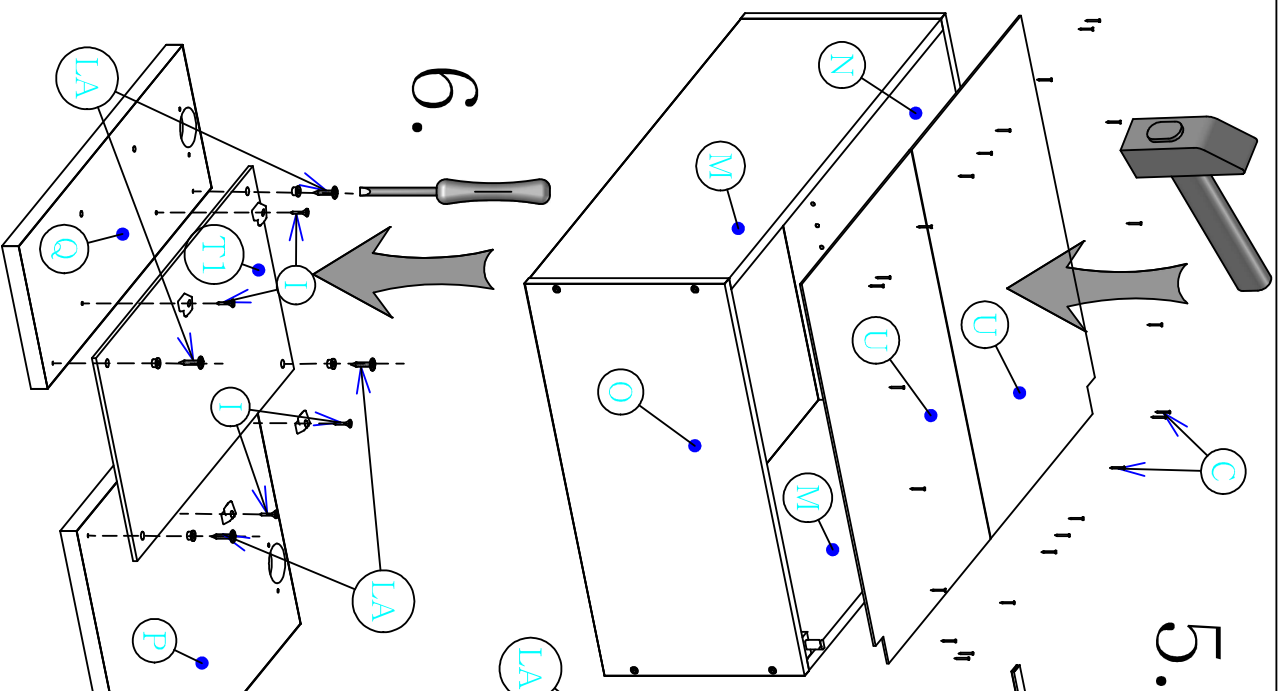

5.

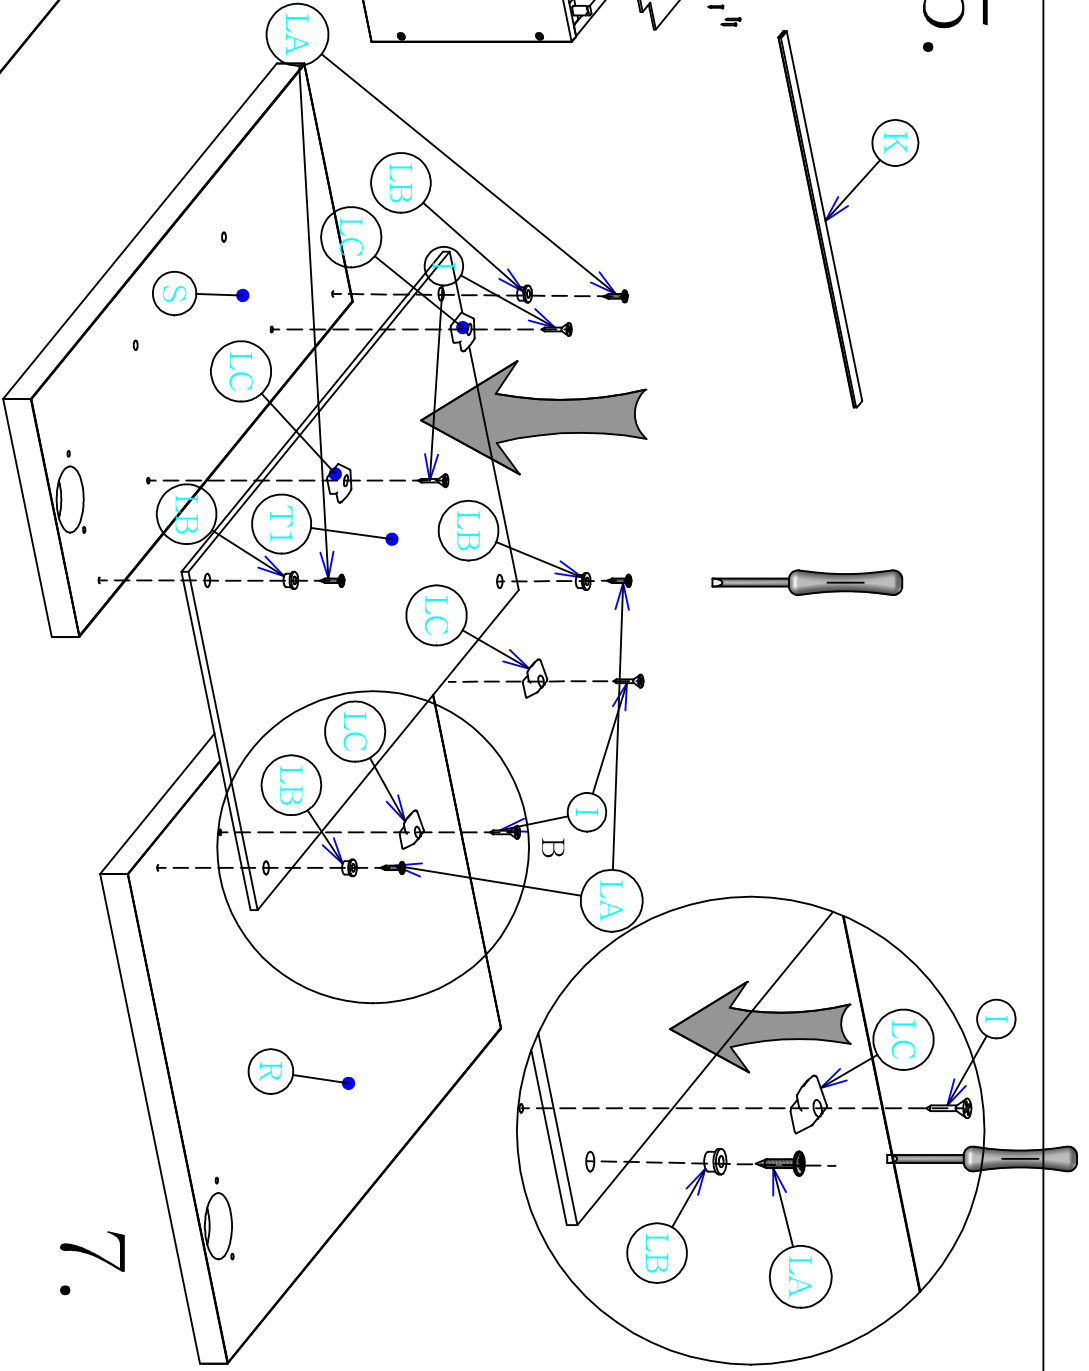

6.

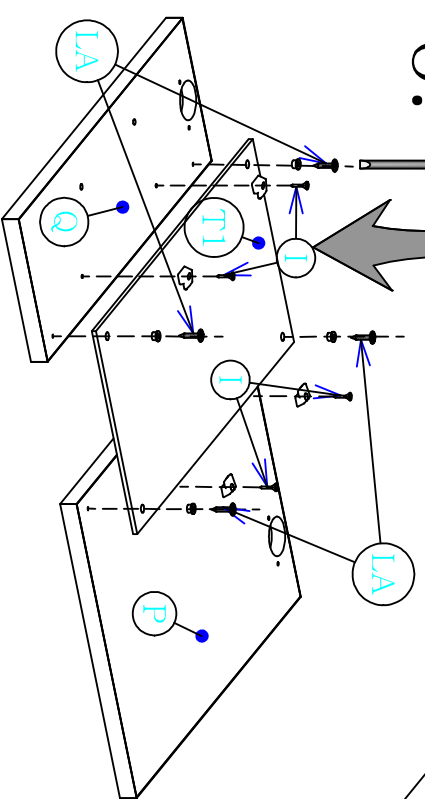

7.

Assembly Instructions




2/3

External tools needed for assembly:hammer,screwdriver



G80Wk

Optional tools:Power drill with screwdriver bit


Please follow steps

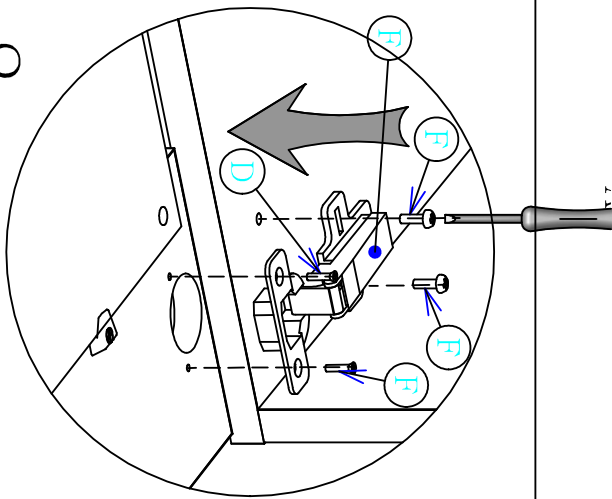

8.

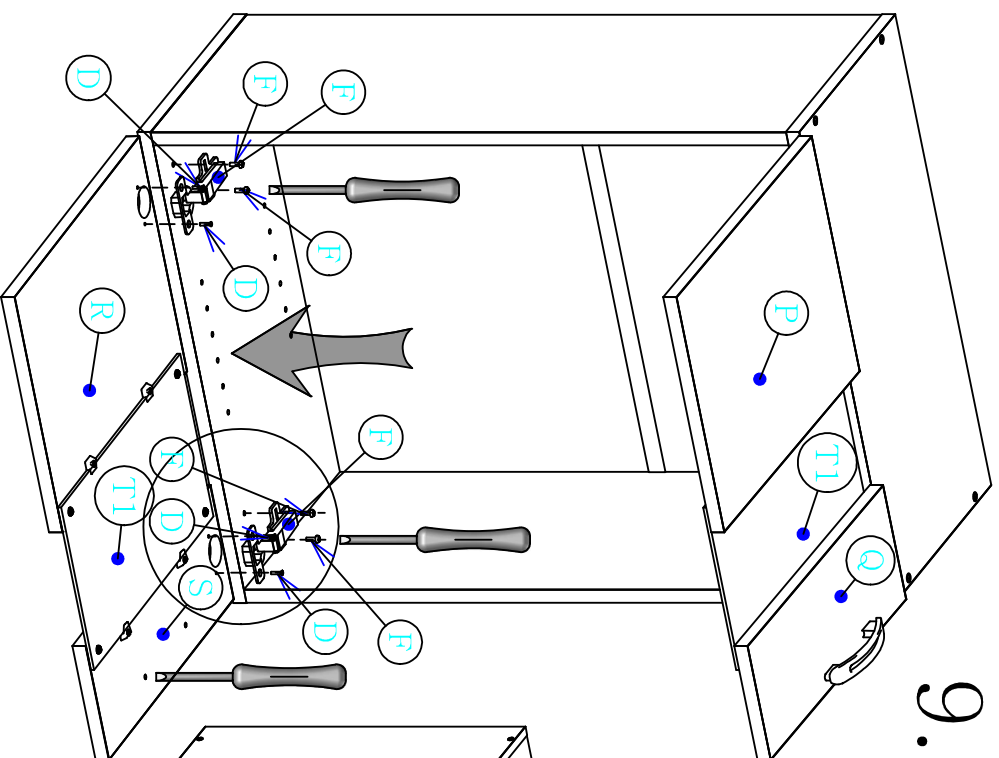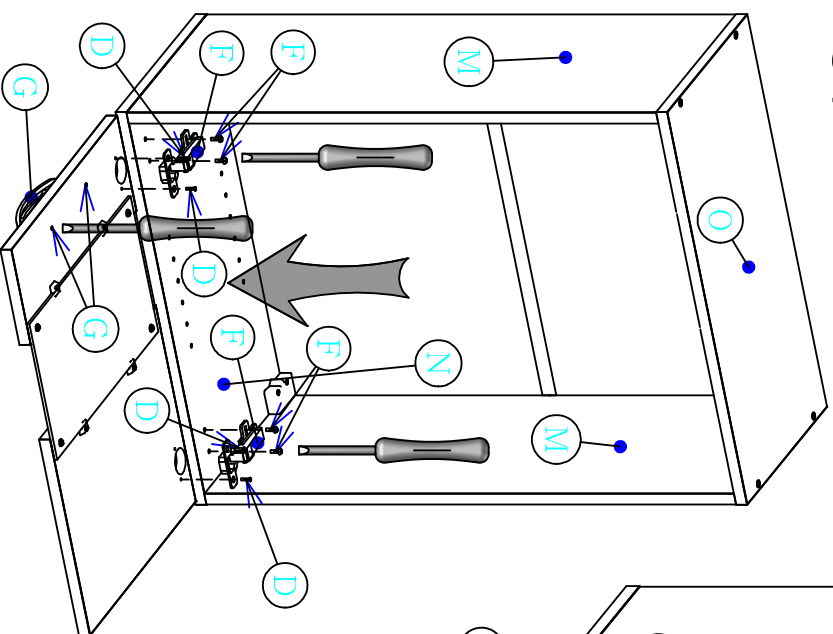

9.

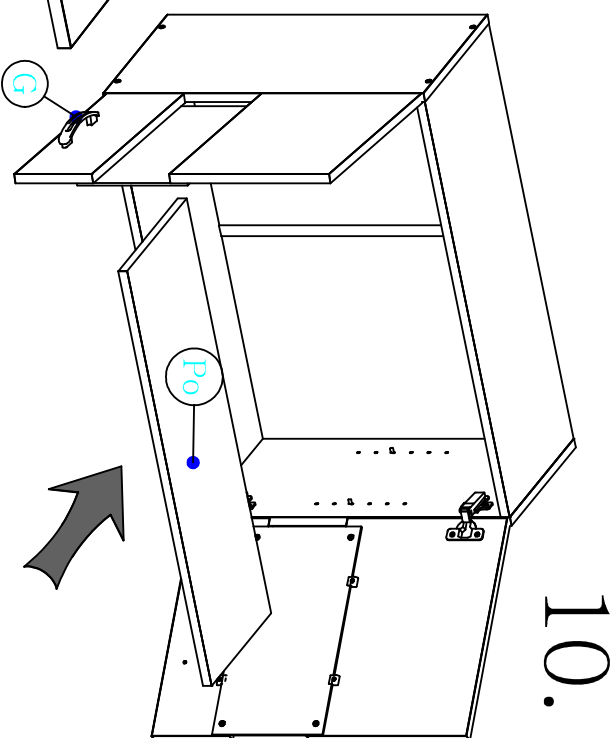

10.

Assembly Instructions



3/3

External tools needed for assembly:hammer,screwdriver

G80Wk

Optional tools:Power drill with screwdriver bit

Please follow steps